

Jaw Crusher Spare Parts Number

No	Part Number	Description	Model
1	10-314-627-000	Cheek plate, upper	CJ408&JM806
2	10-314-628-000	Cheek plate, lower	CJ408&JM806
3	840.0676-00	Screw for cheek plate	CJ408&JM806
4	845.0387-00	Nut for cheek plate	CJ408&JM806
5	847.0124-00	Washer for cheek plate	CJ408&JM806
6	402.4720-01	Flexible washer	CJ408&JM806
7	402.4721-01	Steel washer	CJ408&JM806
8	400.0474-001	Jaw plate Stationary WT (Z) M1	CJ408&JM806
9	400.0465-001	Jaw plate Stationary C M1	CJ408&JM806
10	400.0474-001	Jaw Plate Mov WT (Z) M1	CJ408&JM806
11	400.0464-001	Jaw plate Mov C M1	CJ408&JM806
12	10-314-625-000	Clamping bar, Stationary	CJ408&JM806
13	10-314-625-000	Clamping bar, Mov	CJ408&JM806
14	840.1211-00	Screw for clamping bar, Fixed	CJ408&JM806
15	17-104-245-002	Screw for clamping bar, Mov	CJ408&JM806
16	00-921-203-033	Nut for clamping bar	CJ408&JM806
17	00-921-224-133	Lock nut for clamping bar	CJ408&JM806
18	89-442-690-013	Washer clamping bar	CJ408&JM806
19	53-469-936-000	Flexible washer clamping bar	CJ408&JM806
20	10-314-630-000	Support Bar stationary	CJ408&JM806
21	10-314-630-000	Support Bar moving	CJ408&JM806
22	840.0934-00	Screw for Support Bar stationary	CJ408&JM806
23	840.0660-00	Screw for Support Bar moving	CJ408&JM806
24	845.0203-00	Nut for Support Bar	CJ408&JM806
25	847.0132-00	Washer for Support bar	CJ408&JM806
26	53-468-022-000	Wear plate 6 mm stationary/moving side	CJ408&JM806
27	10-314-626-000	Deflector plate	CJ408&JM806
28	53-372-536-000	Toggle Plate	CJ408&JM806
29	10-314-634-000	Toggle Plate	CJ408&JM806
30	53-374-030-000	Toggle Plate	CJ408&JM806
31	10-314-632-000	Toggle Seat, upper	CJ408&JM806
32	10-314-632-000	Toggle seat. Lower	CJ408&JM806
33	10-314-624-000	Toggle Seat holder	CJ408&JM806
34	53-368-039-500	Toggle seat retainer	CJ408&JM806
35	53-367-941-500	Side block	CJ408&JM806
36	400.1648-901	Pin for retraction bar	CJ408&JM806

37	53-367-392-500	Retraction rod	CJ408&JM806
38	400.0449-001	Compression spring	CJ408&JM806
39	875.0253-00	V-belts	CJ408&JM806
40	875.0361-00	V-belts	CJ408&JM806
41	53-273-771-500	Bearing housing, non-locating bearing	CJ408&JM806
42	10-215-286-500	Bearing housing, locating bearing	CJ408&JM806
43	840.1188-00	Screw for bearing housings	CJ408&JM806
44	847.0312-00	Washer for bearing housings	CJ408&JM806
45	53-373-766-000	Twin nut for bearing housings	CJ408&JM806
46	868.0756-00	Roller bearing outer	CJ408&JM806
47	868.0755-00	Sleeve	CJ408&JM806
48	10-314-515-000	Labyrinth cover	CJ408&JM806
49	10-314-516-000	Labyrinth ring	CJ408&JM806
50	873.1008-00	V-ring	CJ408&JM806
51	53-267-931-000	Eccentric shaft	CJ408&JM806
52	10-314-514-000	Labyrinth ring	CJ408&JM806
53	873.1008-00	V-ring	CJ408&JM806
54	868.0819-00	Roller bearing inner	CJ408&JM806
55	10-314-512-000	Labyrinth cover	CJ408&JM806
56	10-314-513-000	Labyrinth ring	CJ408&JM806
57	873.1008-00	V-ring	CJ408&JM806
58	10-314-628-000	LOWER SIDE LINER	CJ408&JM806
59	10-314-627-000	UPPER SIDE LINER	CJ408&JM806
60	10-314-630-000	SUPPORT BAR	CJ408&JM806
61	400.0465-001	STAT JAW PL CORRUG M1	CJ408&JM806
62	400.0465-002	STAT JAW PL CORRUG M2	CJ408&JM806
63	10-314-625-000	WEDGE	CJ408&JM806
64	53-468-022-000	PROTECTION PLATE	CJ408&JM806
65	53-267-931-000	SHAFT ECCENTRIC	CJ408&JM806
66	00-813-249-006	SPHERICAL ROLLER BEARING	CJ408&JM806
67	10-314-513-000	SW JAW COUNTER FLANGE SWING	CJ408&JM806
68	10-314-512-000	SWING JAW SEAL PLATE	CJ408&JM806
69	10-314-514-000	COUNTER FLANGE INNER BRG	CJ408&JM806
70	10-314-515-000	FRAME OUTER COVER	CJ408&JM806
71	00-923-203-225	SEAL V-RING	CJ408&JM806
72	00-813-249-005	SPHERICAL ROLLER BEARING	CJ408&JM806
73	00-819-163-244	ADAPTER SLEEVE AH2344H	CJ408&JM806
74	10-314-516-000	FRAME OUTER LABYRINTH	CJ408&JM806

75	59-425-417-009	KEY	CJ408&JM806
76	53-467-374-000	SPACER RING	CJ408&JM806
77	400.0464-001	SWING JAW PL CORRUG M1	CJ408&JM806
78	400.0464-002	SWING JAW PL CORRUG M2	CJ408&JM806
79	10-314-626-000	DEFLECTOR PLATE	CJ408&JM806
80	10-314-624-000	TOGGLE SEAT BLOCK	CJ408&JM806
81	10-314-632-000	TOGGLE SEAT	CJ408&JM806
82	10-314-634-000	TOGGLE PLATE	CJ408&JM806
83	53-467-395-500	TENSION ROD CLEVIS	CJ408&JM806
84	53-466-415-004	THREADED ROD	CJ408&JM806
85	127.0006-12	SPRING, TENSION ROD	CJ408&JM806
86	53-367-366-500	TENSION ROD WASHER	CJ408&JM806
87	53-267-383-500	LEFT BEARING HOUSING	CJ408&JM806
88	10-214-509-500	RIGHT BEARING HOUSING	CJ408&JM806
89	53-372-514-501	Flywheel flat	CJ408&JM806
90	53-372-514-502	Flywheel	CJ408&JM806
91	53-372-514-503	Flywheel	CJ408&JM806
92	53-366-391-001	Counterweight	CJ408&JM806
93	53-366-391-002	Counterweight	CJ408&JM806
94	840.0078-00	Screw	CJ408&JM806
95	847.0182-00	Washer	CJ408&JM806
96	847.0132-00	Washer	CJ408&JM806
97	400.0699-901	Drive Motor	CJ408&JM806
98	879.0635-00	V-Belt Pulley	CJ408&JM806
99	875.0253-00	V-Belt	CJ408&JM806
100	400.0700-901	Drive Motor	CJ408&JM806
101	879.0647-00	V-Belt Pulley	CJ408&JM806
102	875.0361-00	V-Belt	CJ408&JM806
103	400.0701-901	Drive Motor	CJ408&JM806
104	879.0261-00	V-Belt Pulley	CJ408&JM806
105	875.0253-00	V-Belt	CJ408&JM806
106	400.0702-901	Drive Motor	CJ408&JM806
107	879.0648-00	V-Belt Pulley	CJ408&JM806
108	875.0361-00	V-Belt 5V 2800	CJ408&JM806
109	400.0699-901	Drive Motor	CJ408&JM806
110	972.821-00	Motor	CJ408&JM806
111	869.0187-00	Bushing	CJ408&JM806
112	869.0331-00	Bushing	CJ408&JM806

113	400.0501-901	Frame assembly	CJ408&JM806
114	53-267-927-500	Swing Jaw assembly	CJ408&JM806
115	10-314-429-000	Clamping bar	CJ409&JM907
116	00-920-144-909	Screw	CJ409&JM907
117	00-921-203-033	Nut	CJ409&JM907
118	00-921-224-133	Lock nut	CJ409&JM907
119	89-442-690-000	Washer	CJ409&JM907
120	53-469-827-000	Flexible washer	CJ409&JM907
121	10-314-429-000	Clamping bar	CJ409&JM907
122	17-104-245-004	Screw	CJ409&JM907
123	00-921-203-033	Nut	CJ409&JM907
124	00-921-224-133	Lock nut	CJ409&JM907
125	89-442-690-000	Washer	CJ409&JM907
126	53-469-827-000	Flexible washer	CJ409&JM907
127	10-314-479-000	Deflector plate	CJ409&JM907
128	400.0418-001	Jaw plate,stationary jaw	CJ409&JM907
129	400.0418-002	Jaw plate,stationary jaw	CJ409&JM907
130	400.0483-001	Jaw plate,stationary jaw	CJ409&JM907
131	400.0483-002	Jaw plate,stationary jaw	CJ409&JM907
132	400.0417-001	Jaw plate,moving jaw	CJ409&JM907
133	400.0417-002	Jaw plate,moving jaw	CJ409&JM907
134	400.0483-001	Jaw plate,moving jaw	CJ409&JM907
135	400.0483-002	Jaw plate,moving jaw	CJ409&JM907
136	53-467-117-000	Wear plate	CJ409&JM907
137	53-467-117-000	Wear plate	CJ409&JM907
138	10-314-481-000	Support bar	CJ409&JM907
139	840.0934-00	Screw	CJ409&JM907
140	845.0203-00	Self-locking nut	CJ409&JM907
141	847.0132-00	Washer	CJ409&JM907
142	10-314-481-000	Support bar,	CJ409&JM907
143	840.0660-00	Screw	CJ409&JM907
144	845.0203-00	Self-locking nut	CJ409&JM907
145	847.0132-00	Washer	CJ409&JM907
146	126.0383-001	Risk of crushing	CJ409&JM907
147	126.0385-001	Warning sign read manual	CJ409&JM907
148	126.0386-001	Do not remove guards	CJ409&JM907
149	126.0405-001	Sign product name	CJ409&JM907
150	126.0443-001	SANDVIK logotype silver	CJ409&JM907

151	126.5014-01	Identification plate	CJ409&JM907
152	885.0250.00	Sign to mark centre of gravity	CJ409&JM907
153	885.0261-00	Lift here/Secure here	CJ409&JM907
154	885.0267-00	Warning sign Danger	CJ409&JM907
155	400.1648-901	Pin	CJ409&JM907
156	53.367-392-500	Retraction rod	CJ409&JM907
157	400.0449-001	Spring	CJ409&JM907
158	53-367-366-500	Spring guide	CJ409&JM907
159	53-367-394-500	Pressure plate	CJ409&JM907
160	845.0221-00	Nut MGM	CJ409&JM907
161	847.0162-00	Washer BRB	CJ409&JM907
162	53-368-317-501	Jack	CJ409&JM907
163	840.0047-00	Screw	CJ409&JM907
164	8470180-00	Washer	CJ409&JM907
165	840.0067-00	Sxmw	CJ409&JM907
166	8470016-00	Washer BRB	CJ409&JM907
167	845.0002-00	Nut	CJ409&JM907
168	89-242-877-000	Toggle plate	CJ409&JM907
169	10-315-282-000	Toggle plate	CJ409&JM907
170	10-314-517-000	Toggle seat holder	CJ409&JM907
171	89-242-876-000	Toggle seat,upper	CJ409&JM907
172	89-242-876-000	Toggle seat,lower	CJ409&JM907
173	17-104-293-001	Clamping bar	CJ409&JM907
174	53-467-389-000	Dust curtain	CJ409&JM907
175	840.0045-00	Screw	CJ409&JM907
176	17-201-392-501	Toggle seat retainer	CJ409&JM907
177	840.0653-00	Screw	CJ409&JM907
178	847.0182-00	Washer DIN	CJ409&JM907
179	53-367-436-500	Side block	CJ409&JM907
180	53-267-107-500	Swing jaw assembly	CJ409&JM907
181	10-214-474-500	Jaw	CJ409&JM907
182	868.0756-00	Roller bearing	CJ409&JM907
183	868.0755-00	Sleeve ACH	CJ409&JM907
184	10-314-515-000	Labyyringh cover	CJ409&JM907
185	840.0068-00	Screw	CJ409&JM907
186	847.0016-00	Washer	CJ409&JM907
187	10-314-516-000	Latyyrinth ning	CJ409&JM907
188	873.1008-00	Ving	CJ409&JM907

189	79-401.252-001	Key	CJ409&JM907
190	53-267-115-000	Eeccentrie shaft	CJ409&JM907
191	P4841	Shaft nut	CJ409&JM907
192	847.0173-00	Tab washer	CJ409&JM907
193	59.425417-009	Key	CJ409&JM907
194	53-467-374-000	Spacer ring	CJ409&JM907
195	845.0168-00	Shaft nut	CJ409&JM907
196	8470096-00	Tab washer	CJ409&JM907
197	53-367-328-500	Cover	CJ409&JM907
198	840.0044-00	Screw	CJ409&JM907
199	847.0180-00	Washer DIN	CJ409&JM907
200	10-314514-000	Labrinhg ning	CJ409&JM907
201	873.1008-00	V-ing	CJ409&JM907
202	868.0319-00	Roller bearing	CJ409&JM907
203	10-314-512-000	Labyringh cover	CJ409&JM907
204	840.0068-00	Screw	CJ409&JM907
205	847.0016-00	Washer BRB	CJ409&JM907
206	10-314-513-000	Labytinth ning	CJ409&JM907
207	873.1028-00	Wxing	CJ409&JM907
208	400.0263-001	Flywheel flat	CJ409&JM907
209	400.0263-002	Flywheel 7*5V	CJ409&JM907
210	400.0263-003	Flywheel 6×SPC	CJ409&JM907
211	53-366-391-001	Counterweight	CJ409&JM907
212	53-366-391-002	Counterweight	CJ409&JM907
213	840.0078-00	Screw	CJ409&JM907
214	847.0182-00	Washer DIN	CJ409&JM907
215	847.0132-00	Washer	CJ409&JM907
216	400.0317-001	Flywheel flat	CJ409&JM907
217	400.0317-002	Flywheel 7x5V	CJ409&JM907
218	400.0317-003	Flywheel 7×SPC	CJ409&JM907
219	10-115-143-013	Counterweight	CJ409&JM907
220	840.0654-00	Screw	CJ409&JM907
221	847.0182-00	Washer	CJ409&JM907
222	847.0132-00	Washer	CJ409&JM907
223	53-273-771-500	Bearing housing.non-locating bearing	CJ409&JM907
224	10-215-286-500	Bearing housing,locating bearing	CJ409&JM907
225	840.1188-00	Screw	CJ409&JM907
226	847.0312-00	Washer	CJ409&JM907

227	53-373-766-000	Twin nut	CJ409&JM907
228	53-267-115-000	Eccentric Shaft	CJ409&JM907
229	400.0672-901	Drive Motor	CJ409&JM907
230	879.0652-00	V-Bet Pulley	CJ409&JM907
231	875.0254-00	V BeIt SPC	CJ409&JM907
232	400.0673-901	Oive Motor	CJ409&JM907
233	879.0647-00	VBelt Pulley	CJ409&JM907
234	875.0196-00	V-Bet	CJ409&JM907
235	400.0574-901	Drive Motor	CJ409&JM907
236	879.0437-00	V-Belt Pulley	CJ409&JM907
237	875.0254-00	V-BxH SPC	CJ409&JM907
238	400.0675.901	Oive Motor	CJ409&JM907
239	879.0651-00	V-BaR Pulley QD	CJ409&JM907
240	8750196-00	V-Bet	CJ409&JM907
241	400.0576901	Drive Motor	CJ409&JM907
242	879.0649-00	V-Bel Pulley	CJ409&JM907
243	875.0299-00	V-BaIt SPC	CJ409&JM907
244	400.0677-921	Drive Motor	CJ409&JM907
245	879.0648-00	VBet Pulley	CJ409&JM907
246	875.0174-00	V-Belt 5V 3000	CJ409&JM907
247	400.0678-901	Drive Moter	CJ409&JM907
248	879.0650-00	V-Bet Pulkey	CJ409&JM907
249	875.0299	V-BeH SPC 7500	CJ409&JM907
250	400.0679-901	Drive Motor	CJ409&JM907
251	879.0651-00	V-BaH Pulley	CJ409&JM907
252	81501740	V-Bet 5V 3000	CJ409&JM907
253	972.0821-00	Motor	CJ409&JM907
254	B69.0189-901	Bushing MCT no 100 D 80	CJ409&JM907
255	8630347-401	Bushing OD no F80mn Di B0	CJ409&JM907
256	400.0486-901	Tool box kit	CJ409&JM907
257	442.9476-00	Tool Box	CJ409&JM907
258	402.4452-00	Gauge for CSS	CJ409&JM907
259	877.0423-00	Lifting Tool	CJ409&JM907
260	920.0110-00	Slugging Wrench 65	CJ409&JM907
261	020.0201-00	Socket Wrench	CJ409&JM907
262	920.0090-00	Open-ended Spanner 55	CJ409&JM907
263	920.0262-00	Slugging Wrench 50	CJ409&JM907
264	920.0263-00	Combination Wrench 50	CJ409&JM907

265	400.0585-001	Tool List	CJ409&JM907
266	877.0424-00	Hook assembly	CJ409&JM907
267	126.0383-001	Risk of crushing	CJ409&JM907
268	126.0385-001	Warning sign read manual	CJ409&JM907
269	126.0186001	Do not remove guards	CJ409&JM907
270	126.0425-001	Sign product name	CJ409&JM907
271	126.0443-001	SANDWICH logo type over 100	CJ409&JM907
272	126.501401	Identification plate	CJ409&JM907
273	885.0250-00	Sign to mark centre of gravity	CJ409&JM907
274	885.0261-00	Lift here/Secure here	CJ409&JM907
275	10-314-404-000	LOWER SIDE LINER	CJ409&JM907
276	10-314-386-000	UPPER SIDE LINER-CAST	CJ409&JM907
277	10-314-481-000	WEDGE PLATE	CJ409&JM907
278	400.0314-002	BOLT	CJ409&JM907
279	845.0010-00	HEX NUT-ZINC	CJ409&JM907
280	847.0132-00	WASHER ZINC	CJ409&JM907
281	400.0418-002	STEEL JAW PLATE CRG M2	CJ409&JM907
282	10-314-429-000	WEDGE SWING JAW	CJ409&JM907
283	00-920-144-909	WEDGE BOLT ZINC	CJ409&JM907
284	53-467-117-000	PROTECTION PLATE	CJ409&JM907
285	00-813-249-006	SPHERICAL ROLLER BEARING	CJ409&JM907
286	10-314-513-000	SW JAW COUNTER FLANGE SWING	CJ409&JM907
287	10-314-512-000	SWING JAW SEAL PLATE	CJ409&JM907
288	10-314-514-000	COUNTER FLANGE INNER BRG	CJ409&JM907
289	00-923-203-225	SEAL V-RING	CJ409&JM907
290	00-813-249-005	SPHERICAL ROLLER BEARING	CJ409&JM907
291	00-819-163-244	ADAPTER SLEEVE AH2344H	CJ409&JM907
292	10-314-516-000	FRAME OUTER LABYRINTH	CJ409&JM907
293	59-425-417-009	KEY	CJ409&JM907
294	53-467-374-000	SPACER RING	CJ409&JM907
295	53-467-117-000	PROTECTION PLATE	CJ409&JM907
296	10-314-481-000	WEDGE PLATE	CJ409&JM907
297	400.0417-002	SWING JAW PLATE CRG M2	CJ409&JM907
298	10-314-429-000	WEDGE SWING JAW	CJ409&JM907
299	10-314-479-000	DEFLECTOR PLATE	CJ409&JM907
300	10-314-517-000	TOGGLE SEAT BLOCK	CJ409&JM907
301	89-242-876-000	TOGGLE SEAT	CJ409&JM907
302	89-242-877-000	TOGGLE PLATE	CJ409&JM907

303	53-368-317-501	HYDRAULIC JACK ASM 5 TON	CJ409&JM907
304	53-467-395-500	TENSION ROD CLEVIS	CJ409&JM907
305	53-466-415-004	THREADED ROD	CJ409&JM907
306	127.0006-12	SPRING, TENSION ROD	CJ409&JM907
307	53-367-366-500	TENSION ROD WASHER	CJ409&JM907
308	53-267-383-500	LEFT BEARING HOUSING	CJ409&JM907
309	10-214-509-500	RIGHT BEARING HOUSING	CJ409&JM907
310	400.0494-901	Frame assembly	CJ409&JM907
311	400.0486-901	Tool box kit	CJ409&JM907
312	442.9476-00	Tool Box	CJ409&JM907
313	402.4452-00	Gauge for CSS	CJ409&JM907
314	877.0423-00	Lifting Tool	CJ409&JM907
315	920.0110-00	Slugging Wrench 65	CJ409&JM907
316	920.0201-00	Socket Wrench 65 L=135	CJ409&JM907
317	920.0090-00	Open-ended Spanner 55	CJ409&JM907
318	920.0262-00	Slugging Wrench 50	CJ409&JM907
319	920.0263-00	Combination Wrench 50	CJ409&JM907
320	400.0585-001	Tool List	CJ409&JM907
321	877.0424-00	Hook assembly	CJ409&JM907
322	53-167-108-500	FRAME ASSEMBLY	CJ409&JM907
323	10-214-474-500	SWING JAW	CJ409&JM907
324	10-214-475-000	FRONT FRAME	CJ409&JM907
325	10-214-476-000	BACK FRAME	CJ409&JM907
326	400.1575-901	Pin	CJ411&JM1108
327	53-366-419-501	Retraction rod	CJ411&JM1108
328	400.0450-001	Spring	CJ411&JM1108
329	53-366-376-500	Spring guide	CJ411&JM1108
330	53-366-379-500	Pressure plate	CJ411&JM1108
331	847.0172-00	Washer	CJ411&JM1108
332	845.0322-00	Nut	CJ411&JM1108
333	53-368-317-501	Hydraulic jack	CJ411&JM1108
334	840.0047-00	Screw	CJ411&JM1108
335	847.0180-00	Washer DIN	CJ411&JM1108
336	840.0067-00	Screw	CJ411&JM1108
337	847.0016-00	Washer	CJ411&JM1108
338	845.0009-00	Nut	CJ411&JM1108
339	89-242-894-000	Toggle plate	CJ411&JM1108
340	10-314-522-000	Toggle seat holder	CJ411&JM1108

341	89-242-895-000	Toggle seat, upper	CJ411&JM1108
342	89-242-895-000	Toggle seat, lower	CJ411&JM1108
343	17-201-539-001	Clamping bar	CJ411&JM1108
344	17-201-540-001	Dust curtain	CJ411&JM1108
345	840.0045-00	Screw	CJ411&JM1108
346	17-201-552-501	Toggle seat retainer	CJ411&JM1108
347	840.0673-00	Screw	CJ411&JM1108
348	847.0184-00	Washer	CJ411&JM1108
349	53-367-176-500	Side block	CJ411&JM1108
350	868.0290-00	Roller bearing	CJ411&JM1108
351	868.0557-00	Sleeve AOH	CJ411&JM1108
352	10-214-416-000	Labyrinth cover	CJ411&JM1108
353	840.0077-00	Screw	CJ411&JM1108
354	847.0132-00	Washer	CJ411&JM1108
355	10-214-417-000	Labyrinth ring	CJ411&JM1108
356	873.0910-00	V-ring V-250A	CJ411&JM1108
357	79-401-252-001	Key	CJ411&JM1108
358	53-267-444-080	Eccentric shaft	CJ411&JM1108
359	845.0165-00	Shaft nut	CJ411&JM1108
360	847.0093-00	Tab washer	CJ411&JM1108
361	59-425-418-009	Key	CJ411&JM1108
362	53-467-327-000	Spacer ring	CJ411&JM1108
363	845.0170-00	Shaft nut HM	CJ411&JM1108
364	847.0098-00	Tab washer	CJ411&JM1108
365	402.4263-00	Cover	CJ411&JM1108
366	840.0044-00	Screw	CJ411&JM1108
367	847.0180-00	Washer DIN	CJ411&JM1108
368	10-214-415-000	Labyrinth ring	CJ411&JM1108
369	873.1327-00	V-ring	CJ411&JM1108
370	868.0303-00	Roller bearing	CJ411&JM1108
371	10-214-388-000	Labyrinth cover	CJ411&JM1108
372	840.0077-00	Screw	CJ411&JM1108
373	847.0132-00	Washer	CJ411&JM1108
374	10-214-414-000	Labyrinth ring	CJ411&JM1108
375	873.1327-00	V-ring	CJ411&JM1108
376	400.0249-001	Flywheel flat	CJ411&JM1108
377	400.0249-002	Flywheel 5×8v	CJ411&JM1108
378	400.0249-003	Flywheel 8×5v	CJ411&JM1108

379	400.0249-004	Flywheel 8×SPC	CJ411&JM1108
380	53-366-391-001	Counterweight	CJ411&JM1108
381	53-366-391-002	Counterweight	CJ411&JM1108
382	840.0078-00	Screw	CJ411&JM1108
383	847.0182-00	Washer DIN	CJ411&JM1108
384	847.0132-00	Washer	CJ411&JM1108
385	400.0297-001	Flywheel flat	CJ411&JM1108
386	400.0297-002	Flywheel 9×5v	CJ411&JM1108
387	400.0297-003	Flywheel 9×SPC	CJ411&JM1108
388	53-369-127-000	Counterweight	CJ411&JM1108
389	840.0676-00	Screw	CJ411&JM1108
390	847.0184-00	Washer	CJ411&JM1108
391	53-173-767-500	Bearing housing, non-locating bearing	CJ411&JM1108
392	10-115-283-500	Bearing housing, locating bearing	CJ411&JM1108
393	840.1187-00	Screw	CJ411&JM1108
394	845.0397-00	Nut	CJ411&JM1108
395	847.0312-00	Washer	CJ411&JM1108
396	53-373-766-000	Twin nut	CJ411&JM1108
397	53-367-429-001	Adjustment shims	CJ411&JM1108
398	53-367-429-002	Adjustment shims	CJ411&JM1108
399	53-367-429-003	Adjustment shims	CJ411&JM1108
400	53-367-429-004	Adjustment shims	CJ411&JM1108
401	53-367-429-005	Adjustment shims	CJ411&JM1108
402	10-314-385-000	Clamping bar	CJ411&JM1108
403	00-920-144-909	Screw	CJ411&JM1108
404	00-921-203-033	Nut	CJ411&JM1108
405	00-921-224-133	Lock nut	CJ411&JM1108
406	89-442-690-000	Washer	CJ411&JM1108
407	53-469-827-000	Flexible washer	CJ411&JM1108
408	10-314-385-000	Clamping bar	CJ411&JM1108
409	59-942-843-001	Screw	CJ411&JM1108
410	00-921-203-033	Nut	CJ411&JM1108
411	00-921-224-133	Lock nut	CJ411&JM1108
412	89-442-690-000	Washer	CJ411&JM1108
413	53-469-827-000	Flexible washer	CJ411&JM1108
414	10-214-384-000	Deflector plate	CJ411&JM1108
415	400.0409-001	Jaw plate,stationary jaw	CJ411&JM1108
416	400.0409-002	Jaw plate,stationary jaw	CJ411&JM1108

417	400.0437-001	Jaw plate,stationary jaw	CJ411&JM1108
418	400.0437-002	Jaw plate,stationary jaw	CJ411&JM1108
419	400.0436-001	Jaw plate,stationary jaw	CJ411&JM1108
420	400.0436-002	Jaw plate,stationary jaw	CJ411&JM1108
421	400.0410-001	Jaw plate,moving jaw	CJ411&JM1108
422	400.0410-002	Jaw plate,moving jaw	CJ411&JM1108
423	400.0433-001	Jaw plate,moving jaw	CJ411&JM1108
424	400.0433-002	Jaw plate,moving jaw	CJ411&JM1108
425	400.0436-001	Jaw plate,moving jaw	CJ411&JM1108
426	400.0436-002	Jaw plate,moving jaw	CJ411&JM1108
427	53-466-783-000	Wear plate	CJ411&JM1108
428	53-466-783-000	Wear plate	CJ411&JM1108
429	10-214-269-000	Support bar	CJ411&JM1108
430	840.0660-00	Screw	CJ411&JM1108
431	845.0203-00	Self-locking nut	CJ411&JM1108
432	847.0132-00	Washer	CJ411&JM1108
433	10-214-269-000	Support bar,	CJ411&JM1108
434	840.0660-00	Screw	CJ411&JM1108
435	845.0203-00	Self-locking nut	CJ411&JM1108
436	847.0132-00	Washer BRB	CJ411&JM1108
437	10-314-262-000	Cheek plate,upper	CJ411&JM1108
438	10-314-263-000	Cheek plate,lower	CJ411&JM1108
439	10-314-262-000	Cheek plate,upper	CJ411&JM1108
440	10-314-263-000	Cheek plate,lower	CJ411&JM1108
441	840.0678-00	Screw	CJ411&JM1108
442	845.0387-00	Self-locking nut	CJ411&JM1108
443	847.0124-00	Washer	CJ411&JM1108
444	402.4720-01	Flexible washer	CJ411&JM1108
445	402.4721-01	Steel washer	CJ411&JM1108
446	400.0522-901	Drive Motor	CJ411&JM1108
447	879.0564-00	V-Belt Pulley	CJ411&JM1108
448	875.0255-00	V-Belt	CJ411&JM1108
449	400.0523-901	Drive Motor	CJ411&JM1108
450	879.0639-00	V-Belt Pulley	CJ411&JM1108
451	875.0358-00	V-Belt 5V 3550	CJ411&JM1108
452	400.0524-901	Drive Motor	CJ411&JM1108
453	879.0640-00	V-Belt Pulley	CJ411&JM1108
454	875.0189-00	V-Belt 8V 3550	CJ411&JM1108

455	400.0526-901	Drive Motor	CJ411&JM1108
456	879.0641-00	V-Belt Pulley	CJ411&JM1108
457	875.0255-00	V-Belt SPC 9000	CJ411&JM1108
458	400.0527-901	Drive Motor	CJ411&JM1108
459	879.0642-00	V-Belt Pulley	CJ411&JM1108
460	875.0358-00	V-Belt 5V 3550	CJ411&JM1108
461	400.0528-901	Drive Motor	CJ411&JM1108
462	879.0643-00	V-Belt Pulley	CJ411&JM1108
463	875.0189-00	V-Belt 8V 3550	CJ411&JM1108
464	972.0817-00	Motor 6PTE315-110D 400VD 110kW	CJ411&JM1108
465	869.0189-00	Bushing MGT no. 100 Di=80	CJ411&JM1108
466	869.0327-00	Bushing QD J80mm Di=80	CJ411&JM1108
467	869.0261-00	Bushing MGT no 125 Di=80	CJ411&JM1108
468	869.0347-00	Bushing QD F80mm Di=80	CJ411&JM1108
469	53-173-770-500	Frame assembly	CJ411&JM1108
470	400.3093-001	Stop block	CJ411&JM1108
471	400.3096-001	Iron felt	CJ411&JM1108
472	400.0478-901	Tools box kit	CJ411&JM1108
473	442.9476-00	Tool Box	CJ411&JM1108
474	402.4452-00	Gauge for CSS	CJ411&JM1108
475	402.4480-00	Lifting Tool	CJ411&JM1108
476	920.0110-00	Slugging Wrench 65	CJ411&JM1108
477	920.0201-00	Socket Wrench 65 L=135	CJ411&JM1108
478	920.0070-00	Open-ended Spanner 65	CJ411&JM1108
479	920.0262-00	Slugging Wrench 50	CJ411&JM1108
480	920.0263-00	Combination Wrench 50	CJ411&JM1108
481	400.0561-001	Tool List	CJ411&JM1108
482	53-167-440-500	Swing Jaw assembly	CJ411&JM1108
483	10-114-380-500	Jaw	CJ411&JM1108
484	400.1575-901	Pin	CJ412&JM1208
485	53-366-419-503	Retraction rod	CJ412&JM1208
486	400.0450-001	Spring	CJ412&JM1208
487	402.3333-01	Washer	CJ412&JM1208
488	908.0408-00	Hydraulic cylinder	CJ412&JM1208
489	402.3936-00	Protective cover	CJ412&JM1208
490	845.0322-00	Nut	CJ412&JM1208
491	847.0024-00	Washer	CJ412&JM1208
492	400.0946-901	Retraction assembly frame	CJ412&JM1208

493	840.0670-00	Screw	CJ412&JM1208
494	847.0124-00	Washer	CJ412&JM1208
495	400.1032-901	Guard	CJ412&JM1208
496	840.0067-00	Screw	CJ412&JM1208
497	847.0016-00	Washer	CJ412&JM1208
498	10-214-523-000	Toggle plate	CJ412&JM1208
499	10-315-266-000	Toggle plate	CJ412&JM1208
500	400.0817-001	Toggle seat holder	CJ412&JM1208
501	400.0818-001	Toggle seat, upper	CJ412&JM1208
502	17-201-650-001	Toggle seat, lower	CJ412&JM1208
503	17-201-577-001	Clamping bar	CJ412&JM1208
504	17-201-578-001	Dust curtain	CJ412&JM1208
505	840.0045-00	Screw	CJ412&JM1208
506	400.1237-001	Toggle seat retainer	CJ412&JM1208
507	840.0046-00	Screw	CJ412&JM1208
508	847.0147-00	Washer	CJ412&JM1208
509	400.0707-001	Side block	CJ412&JM1208
510	840.0046-00	Screw	CJ412&JM1208
511	847.0147-00	Washer	CJ412&JM1208
512	400.0778-001	Wedge	CJ412&JM1208
513	400.0856-001	Pin setting wedge	CJ412&JM1208
514	855.0014-00	Retaining ring	CJ412&JM1208
515	400.0753-901	Hydraulic cylinder	CJ412&JM1208
516	400.0852-901	Cylinder bracket	CJ412&JM1208
517	840.0650-00	Screw	CJ412&JM1208
518	847.0165-00	Washer	CJ412&JM1208
519	840.0065-00	Screw	CJ412&JM1208
520	400.0839-001	Washer	CJ412&JM1208
521	400.1055-001	Stop for toggle seat holder	CJ412&JM1208
522	840.0067-00	Screw	CJ412&JM1208
523	847.0016-00	Washer	CJ412&JM1208
524	400.0758-001	Guide plates	CJ412&JM1208
525	841.0040-00	Screw	CJ412&JM1208
526	847.0132-00	Washer	CJ412&JM1208
527	853.0988-00	Pin	CJ412&JM1208
528	53-166-372-500	Swing jaw assembly	CJ412&JM1208
529	10-114-242-500	Jaw	CJ412&JM1208
530	868.0482-00	Roller bearing	CJ412&JM1208

531	868.0484-00	Sleeve AOH	CJ412&JM1208
532	402.4245-00	Labyrinth cover	CJ412&JM1208
533	840.0077-00	Screw	CJ412&JM1208
534	847.0132-00	Washer	CJ412&JM1208
535	402.7392-01	Labyrinth ring	CJ412&JM1208
536	873.0904-00	V-ring	CJ412&JM1208
537	402.3894-01	Key	CJ412&JM1208
538	53-267-179-000	Eccentric shaft	CJ412&JM1208
539	845.0182-00	Shaft nut	CJ412&JM1208
540	847.0102-00	Tab washer	CJ412&JM1208
541	53-467-275-000	Key	CJ412&JM1208
542	53-467-156-000	Spacer ring	CJ412&JM1208
543	845.0170-00	Shaft nut	CJ412&JM1208
544	847.0098-00	Tab washer	CJ412&JM1208
545	402.4263-00	Cover	CJ412&JM1208
546	840.0044-00	Screw	CJ412&JM1208
547	847.0180-00	Washer	CJ412&JM1208
548	402.7391-01	Labyrinth ring	CJ412&JM1208
549	873.0904-00	V-ring	CJ412&JM1208
550	868.0483-00	Roller bearing	CJ412&JM1208
551	402.7389-00	Labyrinth cover	CJ412&JM1208
552	840.0077-00	Screw	CJ412&JM1208
553	847.0132-00	Washer	CJ412&JM1208
554	402.7388-01	Labyrinth ring	CJ412&JM1208
555	873.0904-00	V-ring	CJ412&JM1208
556	400.0196-001	Flywheel flat	CJ412&JM1208
557	400.0196-002	Flywheel 5×8v	CJ412&JM1208
558	400.0196-003	Flywheel 8×5v	CJ412&JM1208
559	400.0196-004	Flywheel 8×SPC	CJ412&JM1208
560	53-366-391-001	Counterweight	CJ412&JM1208
561	53-366-391-002	Counterweight	CJ412&JM1208
562	840.0078-00	Screw	CJ412&JM1208
563	847.0182-00	Washer DIN	CJ412&JM1208
564	847.0132-00	Washer	CJ412&JM1208
565	400.0296-001	Flywheel flat	CJ412&JM1208
566	400.0296-002	Flywheel 10×5v	CJ412&JM1208
567	400.0296-003	Flywheel 9×SPC	CJ412&JM1208
568	53-367-751-000	Counterweight	CJ412&JM1208

569	840.0677-00	Screw	CJ412&JM1208
570	847.0184-00	Washer	CJ412&JM1208
571	400.2499-901	Bearing house, non-locating bearing	CJ412&JM1208
572	400.2491-001	Bearing house guide, locating bearing	CJ412&JM1208
573	840.1189-00	Screw	CJ412&JM1208
574	845.0397-00	Nut	CJ412&JM1208
575	847.0312-00	Washer	CJ412&JM1208
576	53-373-766-000	Twin nut	CJ412&JM1208
577	53-267-179-000	Eccentric Shaft	CJ412&JM1208
578	900.2579-00	Clamp	CJ412&JM1208
579	847.0012-00	Washer	CJ412&JM1208
580	840.0028-00	Screw	CJ412&JM1208
581	400.1985-001	Hydraulic hose	CJ412&JM1208
582	400.3124-901	Cylinder connection (Left)	CJ412&JM1208
583	400.3123-901	Cylinder connection (Right)	CJ412&JM1208
584	900.2648-00	Clamp SLK 15 PP	CJ412&JM1208
585	900.2269-00	Cover plate DP2	CJ412&JM1208
586	840.0017-00	Screws	CJ412&JM1208
587	847.0164-00	Washer	CJ412&JM1208
588	845.0217-00	Nut Lock	CJ412&JM1208
589	900.0652-00	Adapter G 1/4 B×G 1/4 B	CJ412&JM1208
590	900.1938-00	Cap G 1/4	CJ412&JM1208
591	873.0382-00	Seal ring Tredo 14	CJ412&JM1208
592	900.1903-00	Swivel branch tee adapter	CJ412&JM1208
593	400.1984-001	Hydraulic hose	CJ412&JM1208
594	400.1409-001	Hydraulic hose	CJ412&JM1208
595	900.1538-00	Elbow adapter	CJ412&JM1208
596	400.3127-901	Hydraulic aggregate	CJ412&JM1208
597	400.3128-901	Hydraulic aggregate	CJ412&JM1208
598	400.3295-901	Hydraulic aggregate	CJ412&JM1208
599	400.3296-901	Hydraulic aggregate	CJ412&JM1208
600	400.3297-901	Hydraulic aggregate	CJ412&JM1208
601	650.0094-33	Hydraulic hose	CJ412&JM1208
602	190.4506-00	Push-button box K1-L1	CJ412&JM1208
603	923.0534-00	Level glass FSA	CJ412&JM1208
604	873.1525-00	Gasket PTD-250	CJ412&JM1208
605	906.0607-00	Pump G2/4ccm	CJ412&JM1208
606	930.0379-00	Shaft coupling	CJ412&JM1208

607	972.1467-00	Motor IEC, 3 kW, 4 poles	CJ412&JM1208
608	972.1468-00	Motor IEC, 3 kW, 4 poles	CJ412&JM1208
609	972.1469-00	Motor IEC, 3 kW, 4 poles	CJ412&JM1208
610	972.1470-00	Motor IEC, 3 kW, 4 poles	CJ412&JM1208
611	972.1471-00	Motor IEC, 3 kW, 4 poles	CJ412&JM1208
612	923.0533-00	Pressure gauge 0-250 bar (0-3625 psi)	CJ412&JM1208
613	902.1094-00	Pressure relief valve DB12	CJ412&JM1208
614	912.0325-00	Breath filter BF P 3 G 10 W	CJ412&JM1208
615	902.1095-00	Check valve RV 10	CJ412&JM1208
616	912.0323-00	Lid RFM 75/165/185/-Lock W1	CJ412&JM1208
617	912.3027-00	Filter element	CJ412&JM1208
618	912.0324-00	Clogging indicator VR 2 E.0/-V	CJ412&JM1208
619	972.1342-00	Motor 132 kW, 6 poles	CJ412&JM1208
620	972.1372-00	Motor 132 kW, 6 poles	CJ412&JM1208
621	972.1352-00	Motor 132 kW, 6 poles	CJ412&JM1208
622	972.1362-00	Motor 132 kW, 6 poles	CJ412&JM1208
623	972.1342-00	Motor 132 kW, 6 poles	CJ412&JM1208
624	875.0255-00	V-Belt SPC 9000	CJ412&JM1208
625	879.0564-00	V-Belt Pulley	CJ412&JM1208
626	869.0261-00	Bushing for grooved pulleys	CJ412&JM1208
627	875.0189-00	V-Belt	CJ412&JM1208
628	879.0640-00	V-Belt	CJ412&JM1208
629	869.0327-00	Bushing for grooved pulleys	CJ412&JM1208
630	875.0358-00	V-Belt	CJ412&JM1208
631	879.0639-00	V-Belt Pulley	CJ412&JM1208
632	869.0327-00	Bushing for grooved pulleys	CJ412&JM1208
633	875.0189-00	V-Belt	CJ412&JM1208
634	879.0643-00	V-Belt Pulley	CJ412&JM1208
635	869.0347-00	Bushing for grooved pulleys	CJ412&JM1208
636	875.0358-00	V-Belt	CJ412&JM1208
637	879.0642-00	V-Belt Pulley	CJ412&JM1208
638	869.0347-00	Bushing for grooved pulleys	CJ412&JM1208
639	875.0255-00	V-Belt	CJ412&JM1208
640	879.0641-00	V-Belt Pulley	CJ412&JM1208
641	869.0189-00	Bushing for grooved pulleys	CJ412&JM1208
642	400.0959-901	Frame assembly	CJ412&JM1208
643	400.1037-901	Foot	CJ412&JM1208
644	400.1037-902	Foot mobile application	CJ412&JM1208

645	400.3093-001	Stop block	CJ412&JM1208
646	400.3097-001	Iron felt	CJ412&JM1208
647	400.0478-901	Tools box kit	CJ412&JM1208
648	442.9476-00	Tool Box	CJ412&JM1208
649	402.4452-00	Gauge for CSS	CJ412&JM1208
650	402.4480-00	Lifting Tool	CJ412&JM1208
651	920.0110-00	Slugging Wrench 65	CJ412&JM1208
652	920.0201-00	Socket Wrench 65 L=135	CJ412&JM1208
653	920.0070-00	Open-ended Spanner 65	CJ412&JM1208
654	920.0262-00	Slugging Wrench 50	CJ412&JM1208
655	920.0263-00	Combination Wrench 50	CJ412&JM1208
656	400.0561-001	Tool List	CJ412&JM1208
657	126.0383-001	Risk of crushing	CJ412&JM1208
658	126.0385-001	Warning sign read manual	CJ412&JM1208
659	126.0386-001	Do not remove guards	CJ412&JM1208
660	126.0407-001	Sign product name	CJ412&JM1208
661	126.0444-001	SANDVIK logotype silver	CJ412&JM1208
662	126.5007-01	Identification plate	CJ412&JM1208
663	885.0250-00	Sign to mark centre of gravity	CJ412&JM1208
664	885.0261-00	Lift here/Secure here	CJ412&JM1208
665	885.0267-00	Warning sign Danger	CJ412&JM1208
666	10-314-263-000	SIDE LINER-LWR (CAST) SIDE	CJ412&JM1208
667	10-314-262-000	SIDE LINER-UPPER (CAST)	CJ412&JM1208
668	10-214-269-000	WEDGE PLATE	CJ412&JM1208
669	400.0314-002	BOLT M20X160	CJ412&JM1208
670	400.0408-002	STATIONARY JAW PL CORRUG M2	CJ412&JM1208
671	400.0411-001	STAT/SWING JAW PLATE WT(Z) M1	CJ412&JM1208
672	400.0413-002	STATIONARY JAW PLATE HD M2	CJ412&JM1208
673	400.0425-001	STAT JAW PL CORRUG COARSE M1	CJ412&JM1208
674	53-466-463-000	PROTECTION PLATE	CJ412&JM1208
675	53-266-357-000	ECCENTRIC SHAFT	CJ412&JM1208
676	00-813-249-002	SPHERICAL ROLLER BEARING	CJ412&JM1208
677	402.7388-01	SPACING COLLAR-LABYR /	CJ412&JM1208
678	402.7389-00	LABYRINTH COVER & PLUGS	CJ412&JM1208
679	32-402-739-101	SPACER,INR LABYRINTH	CJ412&JM1208
680	32-402-739-001	SEALPLATE,INNER LABY	CJ412&JM1208
681	00-923-203-315	SEAL V RING	CJ412&JM1208
682	00-813-249-001	SPHERICAL ROLLER BEARING	CJ412&JM1208

683	00-819-163-364	ADAPTER SLEEVE	CJ412&JM1208
684	402.7392-01	LABYRINTH RING-OUTER	CJ412&JM1208
685	00-819-137-256	LOCKWASHER-BEARING MB- 56	CJ412&JM1208
686	00-920-241-105	SCREW	CJ412&JM1208
687	10-114-743-000	SWING JAW PL	CJ412&JM1208
688	400.0407-002	SWING JAW PLATE CORRUG M2	CJ412&JM1208
689	400.0420-001	SWING JAW PL COARSE CORRUG	CJ412&JM1208
690	10-214-255-000	DEFLECTOR PLATE	CJ412&JM1208
691	53-467-202-000	SAFETY KEY	CJ412&JM1208
692	10-314-265-000	TOGGLE SEAT BLOCK	CJ412&JM1208
693	10-314-495-000	TOGGLE SEAT BLOCK	CJ412&JM1208
694	17-201-650-001	TOGGLE SEAT	CJ412&JM1208
695	10-214-523-000	TOGGLE PLATE	CJ412&JM1208
696	53-466-668-500	TENSION ROD CLEVIS	CJ412&JM1208
697	53-466-415-001	THREADED ROD	CJ412&JM1208
698	53-366-376-500	WASHER,TENSION ROD	CJ412&JM1208
699	10-114-256-502	BEARING HSG MACH LH	CJ412&JM1208
700	10-114-256-501	BEARING HSG MACH RH	CJ412&JM1208
701	53-466-431-001	STUD	CJ412&JM1208
702	402.4271-02	Adjustment shims	CJ612&JM1211
703	402.4271-01	Adjustment shims	CJ612&JM1211
704	402.4570-00	Clamping bar	CJ612&JM1211
705	650.0311-01	Screw	CJ612&JM1211
706	650.0311-02	Screw	CJ612&JM1211
707	845.0221-00	Nut	CJ612&JM1211
708	847.0162-00	Washer	CJ612&JM1211
709	402.3915-03	Washer	CJ612&JM1211
710	650.0235-01	Flexible washer	CJ612&JM1211
711	402.2320-00	Clamping bar	CJ612&JM1211
712	650.0310-AC	Screw	CJ612&JM1211
713	845.0221-00	Nut	CJ612&JM1211
714	847.0162-00	Washer	CJ612&JM1211
715	402.3915-03	Washer	CJ612&JM1211
716	650.0235-01	Flexible washe	CJ612&JM1211
717	402.4250-00	Deflector plate	CJ612&JM1211
718	840.1139-00	Screw	CJ612&JM1211
719	845.0013-00	Self-locking nut	CJ612&JM1211
720	400.2266-001	Jaw plate	CJ612&JM1211

721	400.2266-002	Jaw plate	CJ612&JM1211
722	402.4747-01	Jaw plate	CJ612&JM1211
723	402.4747-02	Jaw plate	CJ612&JM1211
724	400.0426-001	Jaw plate	CJ612&JM1211
725	400.0426-002	Jaw plate	CJ612&JM1211
726	400.0427-001	Jaw plate,middle	CJ612&JM1211
727	400.0427-002	Jaw plate,middle	CJ612&JM1211
728	53-373-533-501	Screw	CJ612&JM1211
729	53-373-533-504	Screw	CJ612&JM1211
730	845.0221-00	Nut	CJ612&JM1211
731	847.0162-00	Washer	CJ612&JM1211
732	402.3915-03	Washer	CJ612&JM1211
733	650.0235-01	Flexible washer	CJ612&JM1211
734	400.0443-001	Jaw plate	CJ612&JM1211
735	400.0443-002	Jaw plate	CJ612&JM1211
736	402.4748-01	Jaw plate	CJ612&JM1211
737	402.4748-02	Jaw plate	CJ612&JM1211
738	400.0423-001	Jaw plate	CJ612&JM1211
739	400.0423-002	Jaw plate	CJ612&JM1211
740	400.0424-001	Jaw plate,middle	CJ612&JM1211
741	400.0424-002	Jaw plate,middle	CJ612&JM1211
742	53-373-533-502	Screw	CJ612&JM1211
743	845.0221-00	Nut	CJ612&JM1211
744	847.0162-00	Washer	CJ612&JM1211
745	402.3915-03	Washer	CJ612&JM1211
746	650.0235-01	Flexible washer	CJ612&JM1211
747	402.4668-01	Wear plate	CJ612&JM1211
748	402.4668-01	Wear plate	CJ612&JM1211
749	402.4237-00	Jaw shim plate	CJ612&JM1211
750	840.0694-00	Screw	CJ612&JM1211
751	847.0125-00	Washer	CJ612&JM1211
752	845.0284-00	Self-locking nut	CJ612&JM1211
753	402.4258-00	Support bar	CJ612&JM1211
754	840.0718-00	Screw	CJ612&JM1211
755	402.4258-00	Support bar	CJ612&JM1211
756	840.1053-00	Screw	CJ612&JM1211
757	845.0221-00	Nut	CJ612&JM1211
758	847.0162-00	Washer	CJ612&JM1211

759	845.0227-00	Lock nut	CJ612&JM1211
760	402.3280-00	Support bar	CJ612&JM1211
761	840.1052-00	Screw	CJ612&JM1211
762	845.0221-00	Nut	CJ612&JM1211
763	847.0162-00	Washer	CJ612&JM1211
764	402.4239-01	Cheek plate,upper	CJ612&JM1211
765	402.4635-01	Cheek plate,lower	CJ612&JM1211
766	402.4239-01	Cheek plate,uppe	CJ612&JM1211
767	840.0716-00	Screw	CJ612&JM1211
768	845.0273-00	Self-locking nut	CJ612&JM1211
769	847.0162-00	Washer	CJ612&JM1211
770	400.0736-001	Flexible washer	CJ612&JM1211
771	400.0737-001	Steel washer	CJ612&JM1211
772	845.0227-00	Lock nut	CJ612&JM1211
773	400.0736-001	Flexible washer	CJ612&JM1211
774	400.0737-001	Steel washer	CJ612&JM1211
775	840.0714-00	Screw	CJ612&JM1211
776	847.0122-00	Washer	CJ612&JM1211
777	400.1575-901	Pin	CJ612&JM1211
778	855.0017-00	Locking ring	CJ612&JM1211
779	53-366-419-506	Retraction rod	CJ612&JM1211
780	127.0006-27	Spring	CJ612&JM1211
781	840.0069-00	Screw	CJ612&JM1211
782	847.0016-00	Washer BRB	CJ612&JM1211
783	845.0215-00	Self-locking nut	CJ612&JM1211
784	402.4300-00	Spring guide	CJ612&JM1211
785	402.4301-00	Pressure plate	CJ612&JM1211
786	845.0322-00	Nut	CJ612&JM1211
787	847.0024-00	Washer	CJ612&JM1211
788	906.0410-00	Jack	CJ612&JM1211
789	402.3333-01	Spring guide	CJ612&JM1211
790	908.0408-00	Hydraulic cylinder	CJ612&JM1211
791	402.3936-00	Protective cover	CJ612&JM1211
792	402.4583-00	Guard	CJ612&JM1211
793	840.0069-00	Screw	CJ612&JM1211
794	847.0016-00	Washer	CJ612&JM1211
795	845.0215-00	Self-locking nut	CJ612&JM1211
796	908.0466-00	Gasket kit for hydraulic cylinder	CJ612&JM1211

797	402.4608-01	Toggle plate	CJ612&JM1211
798	402.4607-01	Toggle plate	CJ612&JM1211
799	400.2174-001	Toggle seat holder	CJ612&JM1211
800	400.1680-001	Toggle seat, upper	CJ612&JM1211
801	400.1680-001	Toggle seat, lower	CJ612&JM1211
802	402.4311-01	Clamping bar	CJ612&JM1211
803	402.4312-01	Dust curtain	CJ612&JM1211
804	840.0045-00	Screw	CJ612&JM1211
805	847.0147-00	Washer	CJ612&JM1211
806	840.0054-00	Screw	CJ612&JM1211
807	847.0147-00	Washer	CJ612&JM1211
808	400.2178-901	Side block, right hand side	CJ612&JM1211
809	400.2178-901	Side block, left hand side	CJ612&JM1211
810	53-174-776-500	Swing jaw assembly	CJ612&JM1211
811	402.4248-00	Jaw	CJ612&JM1211
812	868.0482-00	Roller bearing	CJ612&JM1211
813	868.0484-00	Withdrawal sleeve AOH	CJ612&JM1211
814	402.4245-00	Labyrinth cover	CJ612&JM1211
815	840.0077-00	Screw	CJ612&JM1211
816	847.0132-00	Washer	CJ612&JM1211
817	402.7392-01	Labyrinth ring	CJ612&JM1211
818	873.0904-00	V-ring	CJ612&JM1211
819	402.3894-01	Key	CJ612&JM1211
820	53-267-179-003	Eccentric shaft	CJ612&JM1211
821	845.0182-00	Shaft nut	CJ612&JM1211
822	847.0102-00	Tab washer	CJ612&JM1211
823	402.4264-01	Key	CJ612&JM1211
824	53-467-156-000	Spacer ring	CJ612&JM1211
825	845.0170-00	Shaft nut	CJ612&JM1211
826	847.0098-00	Tab washer	CJ612&JM1211
827	402.4263-00	Cover	CJ612&JM1211
828	840.0044-00	Screw	CJ612&JM1211
829	847.0147-00	Washer	CJ612&JM1211
830	402.7391-01	Labyrinth ring	CJ612&JM1211
831	873.0904-00	V-ring	CJ612&JM1211
832	868.0483-00	Roller bearing	CJ612&JM1211
833	402.7389-00	Labyrinth cover	CJ612&JM1211
834	873.0040-00	Seals O-ring Rubber String D3	CJ612&JM1211

835	840.0077-00	Screw	CJ612&JM1211
836	847.0132-00	Washer	CJ612&JM1211
837	402.7388-01	Labyrinth ring	CJ612&JM1211
838	873.0904-00	V-ring V-350A	CJ612&JM1211
839	400.0303-001	Flywheel flat	CJ612&JM1211
840	400.0303-002	Flywheel 8×5V	CJ612&JM1211
841	400.0303-003	Flywheel 7×8V	CJ612&JM1211
842	400.0303-004	Flywheel 8×SPC	CJ612&JM1211
843	402.4490-01	Counterweight	CJ612&JM1211
844	840.0079-00	Screw	CJ612&JM1211
845	847.0165-00	Washer	CJ612&JM1211
846	400.0751-001	Flywheel flat	CJ612&JM1211
847	400.0751-002	Flywheel 10×SPC	CJ612&JM1211
848	400.0751-003	Flywheel 8×8V	CJ612&JM1211
849	402.4484-01	Counterweight	CJ612&JM1211
850	840.0532-00	Screw	CJ612&JM1211
851	847.0165-00	Washer	CJ612&JM1211
852	400.2500-001	Bearing housing	CJ612&JM1211
853	400-2492-001	Protection flange	CJ612&JM1211
854	400.2491-001	Bearing housing	CJ612&JM1211
855	400-2492-001	Protection flange	CJ612&JM1211
856	840.1189-00	Screw	CJ612&JM1211
857	845.0397-00	Nut	CJ612&JM1211
858	847.0312-00	Washer	CJ612&JM1211
859	53-373-766-000	Twin nut	CJ612&JM1211
860	53-267-179-003	Eccentric Shaft	CJ612&JM1211
861	400.1675-001	Toggle seat	CJ612&JM1211
862	10-214-523-000	Toggle plate	CJ612&JM1211
863	400.0707-001	Toggle seat retainer	CJ612&JM1211
864	840.0046-00	Screw	CJ612&JM1211
865	847.0012-00	Washer	CJ612&JM1211
866	400.0282-901	Cylinder bracket	CJ612&JM1211
867	840.0672-00	Screw	CJ612&JM1211
868	847.0124-00	Washer	CJ612&JM1211
869	845.0387-00	Self locking nut	CJ612&JM1211
870	400.0285-001	Spacer ring	CJ612&JM1211
871	400.0284-001	Pin	CJ612&JM1211
872	855.0014-00	Retaining ring SgA	CJ612&JM1211

873	400.0630-001	Guide plate	CJ612&JM1211
874	400.0630-002	Guide plate	CJ612&JM1211
875	841.0039-00	Screw	CJ612&JM1211
876	847.0165-00	Washer	CJ612&JM1211
877	400.2182-001	Upper wedge	CJ612&JM1211
878	400.2183-001	Lower wedge	CJ612&JM1211
879	400.0284-002	Pin	CJ612&JM1211
880	855.0014-00	Retaining ring SgA	CJ612&JM1211
881	908.0465-00	Hydraulic cylinder	CJ612&JM1211
882	972.1343-00	Motor 160 kW, 6 poles	CJ612&JM1211
883	972.1373-00	Motor 160 kW, 6 poles	CJ612&JM1211
884	972.1353-00	Motor 160 kW, 6 poles	CJ612&JM1211
885	972.1363-00	Motor 160 kW, 6 poles	CJ612&JM1211
886	972.1343-00	Motor 160 kW, 6 poles	CJ612&JM1211
887	875.0318-00	V-Belt SPC 10600	CJ612&JM1211
888	879.0435-00	V-Belt Pulley 400 MGT100	CJ612&JM1211
889	869.0236-00	Bushing MGT NR 100 Di 100	CJ612&JM1211
890	875.0199-00	V-Belt 8V 4250	CJ612&JM1211
891	879.0654-00	V-Belt Pulley QD Dy16" 7×8V	CJ612&JM1211
892	869.0350-00	Bushing QD J100 mm Di 100 mm	CJ612&JM1211
893	875.0199-00	V-Belt 8V 4250	CJ612&JM1211
894	879.0655-00	V-Belt Pulley QD Dy13.2" 7×8V	CJ612&JM1211
895	869.0350-00	Bushing QD J100 mm Di 100 mm	CJ612&JM1211
896	875.0318-00	V-Belt SPC 10600	CJ612&JM1211
897	879.0433-00	V-Belt Pulley 335 MGT100	CJ612&JM1211
898	869.0236-00	Bushing MGT NR 100 Di 100	CJ612&JM1211
899	53-174-777-500	Frame assembly	CJ612&JM1211
900	400.3093-001	Stop block	CJ612&JM1211
901	400.3098-001	Iron felt	CJ612&JM1211
902	400.3099-001	Iron felt	CJ612&JM1211
903	400.0487-901	Tools list kit	CJ612&JM1211
904	442.9476-00	Tool Box	CJ612&JM1211
905	402.4452-00	Gauge for CSS	CJ612&JM1211
906	402.4480-00	Lifting Tool	CJ612&JM1211
907	920.0110-00	Slugging Wrench 65	CJ612&JM1211
908	920.0201-00	Socket Wrench 65 L=135	CJ612&JM1211
909	920.0070-00	Open-ended Spanner 65	CJ612&JM1211
910	920.0109-00	Slugging Wrench 55	CJ612&JM1211

911	920.0243-00	Combination Wrench 55	CJ612&JM1211
912	400.0578-001	Tool List	CJ612&JM1211
913	650.0094-33	Hydraulic aggregate	CJ612&JM1211
914	400.3127-901	Hydraulic aggregate	CJ612&JM1211
915	400.3128-901	Hydraulic aggregate	CJ612&JM1211
916	400.3295-901	Hydraulic aggregate	CJ612&JM1211
917	400.3296-901	Hydraulic aggregate	CJ612&JM1211
918	400.3297-901	Hydraulic aggregate	CJ612&JM1211
919	190.4507-00	Control box	CJ612&JM1211
920	190.4505-00	Control box	CJ612&JM1211
921	190.4506-00	Push button box	CJ612&JM1211
922	923.0534-00	Level glass FSA	CJ612&JM1211
923	873.1525-00	Gasket PTD-250	CJ612&JM1211
924	906.0607-00	Pump G2/4ccm	CJ612&JM1211
925	930.0379-00	Shaft coupling	CJ612&JM1211
926	972.1467-00	Motor IEC, 4 poles, 3 kW	CJ612&JM1211
927	972.1468-00	Motor IEC, 4 poles, 3 kW	CJ612&JM1211
928	972.1469-00	Motor IEC, 4 poles, 3 kW	CJ612&JM1211
929	972.1470-00	Motor IEC, 4 poles, 3 kW	CJ612&JM1211
930	972.1471-00	Motor IEC, 4 poles, 3 kW	CJ612&JM1211
931	900.1098-00	Valve RS08	CJ612&JM1211
932	984.1576-00	Pressure transmitter EDS	CJ612&JM1211
933	902.1099-00	Valve	CJ612&JM1211
934	902.0914-00	Magntic coil 24DG	CJ612&JM1211
935	841.0625-00	Screw	CJ612&JM1211
936	902.1100-00	Valve pressure reducing	CJ612&JM1211
937	902.1097-00	Valve WS08W	CJ612&JM1211
938	873.1522-00	Gasket	CJ612&JM1211
939	912.0324-00	Clogging indicator VR 2 E.0/-V	CJ612&JM1211
940	912.3027-00	Filter element 0075 R 010BN3HC	CJ612&JM1211
941	912.0323-00	Lid RFM 75/165/185/-Lock W1	CJ612&JM1211
942	923.0533-00	Pressure gauge 0-250 bar (0-3625 psi)	CJ612&JM1211
943	902.1094-00	Pressure relief valve DB12	CJ612&JM1211
944	912.0325-00	Breath filter BF P 3 G 10 W	CJ612&JM1211
945	873.1527-00	O-ring	CJ612&JM1211
946	902.1095-00	Check valve RV 10	CJ612&JM1211
947	873.1528-00	O-ring	CJ612&JM1211
948	873.1526-00	O-ring	CJ612&JM1211

949	400.3175-901	Valve block As.	CJ612&JM1211
950	841.0277-00	Screw	CJ612&JM1211
951	873.0385-00	Tredo no. 20 3/4"	CJ612&JM1211
952	900.2642-00	Adapter G3/4BxG1/4B	CJ612&JM1211
953	400.3176-001	Hydraulic hose	CJ612&JM1211
954	843.1630-00	Welded screw	CJ612&JM1211
955	845.0205-00	Locking nut	CJ612&JM1211
956	847.0012-00	Washer BRB	CJ612&JM1211
957	900.2647-00	Cover plate DS/GD-2	CJ612&JM1211
958	900.2649-00	Clamp DSLK 15 PP	CJ612&JM1211
959	900.2648-00	Clamp SLK 15 PP	CJ612&JM1211
960	900.2269-00	Cover plate DP2	CJ612&JM1211
961	840.0017-00	Screws	CJ612&JM1211
962	847.0164-00	Washer	CJ612&JM1211
963	845.0217-00	Nut lock ISO	CJ612&JM1211
964	900.0652-00	Adapter G 1/4 BxG 1/4 B	CJ612&JM1211
965	900.1938-00	Cap G 1/4	CJ612&JM1211
966	873.0382-00	Seal ring Tredo 14	CJ612&JM1211
967	900.1903-00	Swivel branch tee adapter	CJ612&JM1211
968	400.1984-001	Hydraulic hose	CJ612&JM1211
969	400.1409-001	Hydraulic hose	CJ612&JM1211
970	900.1538-00	Elbow adapter G 1/4 BxG 1/4	CJ612&JM1211
971	400.3088-901	Hydraulic adjustment equipment	CJ612&JM1211
972	4-073-3-12	Oil reservoir	CJ612&JM1211
973	5-226-3-12	Cover	CJ612&JM1211
974	211030000	Level gauge	CJ612&JM1211
975	62630000	Air breather	CJ612&JM1211
976	00M4502	Pump	CJ612&JM1211
977	2204-0031	Electric motor	CJ612&JM1211
978	1711115	Bellhousing	CJ612&JM1211
979	1710514	Shaft coupling	CJ612&JM1211
980	A2-17551	Manifold block	CJ612&JM1211
981	H304071	Return filter	CJ612&JM1211
982	H306822	Indicator	CJ612&JM1211
983	906.0503-00	Hydraulic unit	CJ612&JM1211
984	900.2579-00	Clamp	CJ612&JM1211
985	873.0382-00	Seal Tredo 14	CJ612&JM1211
986	900.0652-00	Adapter G 1/4 BxG 1/4 B	CJ612&JM1211

987	650.0094-08	Hydraulic hose SAE	CJ612&JM1211
988	900.0645-00	Adapter G 3/8 BxG 1/4 B	CJ612&JM1211
989	650.0094-34	Hydraulic hose SAE	CJ612&JM1211
990	843.1575-00	Stud weld M8x45	CJ612&JM1211
991	845.0205-00	Nut lock	CJ612&JM1211
992	900.1903-00	Swivel branch tee adapter 1/4"	CJ612&JM1211
993	900.0208-00	Plug	CJ612&JM1211
994	400.1606-901	Hose connections	CJ612&JM1211
995	400.1610-901	Progressive feeder	CJ612&JM1211
996	400.1600-903	Attachment bracket	CJ612&JM1211
997	904.0803-00	Hose D6 high pressure	CJ612&JM1211
998	904.0803-00	Hose D6 high pressure	CJ612&JM1211
999	904.0803-00	Hose D6 high pressure	CJ612&JM1211
1000	964.2883-00	Tube stub D6	CJ612&JM1211
1001	964.2884-00	Clamp double	CJ612&JM1211
1002	914.0222-00	Fitting D6 R1/4"	CJ612&JM1211
1003	914.0223-00	Fitting D6 R3/8"	CJ612&JM1211
1004	964.2885-00	Tube stub 90° D6	CJ612&JM1211
1005	914.0224-00	Fitting D6 M10x1 Tap	CJ612&JM1211
1006	964.2886-00	Clamp	CJ612&JM1211
1007	964.2886-00	Clamp	CJ612&JM1211
1008	902.1068-00	Manifold block	CJ612&JM1211
1009	841.0222-00	Screw	CJ612&JM1211
1010	900.2980-00	Elbow	CJ612&JM1211
1011	900.2981-00	Nipple 1/8"	CJ612&JM1211
1012	843.1630-00	Welded screw	CJ612&JM1211
1013	847.0012-00	Washer BRB	CJ612&JM1211
1014	845.0525-00	Locking nut	CJ612&JM1211
1015	873.0382-00	Seal ring Tredo 14	CJ612&JM1211
1016	900.2990-00	Sleeve D6	CJ612&JM1211
1017	902.1070-00	Progressive feeder VPKM-3	CJ612&JM1211
1018	902.1069-00	Check valve VPKM-RV Pt.	CJ612&JM1211
1019	900.2982-00	Elbow fitting	CJ612&JM1211
1020	841.0224-00	Screw	CJ612&JM1211
1021	902.1070-00	Progressive feeder VPKM-3	CJ612&JM1211
1022	902.1069-00	Check valve VPKM-RV Pt	CJ612&JM1211
1023	900.2982-00	Elbow fitting	CJ612&JM1211
1024	841.0224-00	Screw	CJ612&JM1211

1025	914.0212-00	Lubrication pump	CJ612&JM1211
1026	914.0213-00	Hose kit	CJ612&JM1211
1027	984.1518-00	Electrical cabinet	CJ612&JM1211
1028	984.1584-00	Cable pur	CJ612&JM1211
1029	914.0215-00	Pump element - spare part	CJ612&JM1211
1030	914.0216-00	Pressure limiting valve - spare part	CJ612&JM1211
1031	900.3051-00	Connector piece	CJ612&JM1211
1032	845.0441-00	Nut	CJ612&JM1211
1033	914.0224-00	Fitting D6	CJ612&JM1211
1034	900.2990-00	Sleeve D6	CJ612&JM1211
1035	900.3050-00	Tube stud D6 L=20	CJ612&JM1211
1036	900.3054-00	Tube stud 90° D6	CJ612&JM1211
1037	900.3052-00	Tube stud D6 L=30	CJ612&JM1211
1038	400.1575-901	Pin	CJ613&JM1312
1039	53-366-625-500	Retraction rod	CJ613&JM1312
1040	400.0450-001	Spring	CJ613&JM1312
1041	53-366-624-500	Spring guide	CJ613&JM1312
1042	53-366-627-500	Pressure plate	CJ613&JM1312
1043	00-921-203-052	Nut	CJ613&JM1312
1044	847.0142-00	Washer	CJ613&JM1312
1045	53-368-317-502	Hydraulic jack	CJ613&JM1312
1046	840.0067-00	Screw	CJ613&JM1312
1047	847.0016-00	Washer	CJ613&JM1312
1048	845.0009-00	Nut	CJ613&JM1312
1049	10-214-755-000	Toggle plate	CJ613&JM1312
1050	10-214-535-000	Toggle plate	CJ613&JM1312
1051	10-314-500-000	Toggle seat holder	CJ613&JM1312
1052	17-201-650-001	Toggle seat, upper	CJ613&JM1312
1053	17-201-650-001	Toggle seat, lower	CJ613&JM1312
1054	17-201-577-001	Clamping bar	CJ613&JM1312
1055	17-201-578-001	Dust curtain	CJ613&JM1312
1056	840.0045-00	Screw	CJ613&JM1312
1057	847.0147-00	Washer	CJ613&JM1312
1058	17-201-552-501	Toggle seat retainer	CJ613&JM1312
1059	840.0674-00	Screw	CJ613&JM1312
1060	847.0184-00	Washer	CJ613&JM1312
1061	53-367-229-500	Side block	CJ613&JM1312
1062	53-167-005-500	Swing jaw assembly	CJ613&JM1312

1063	10-114-458-500	Jaw	CJ613&JM1312
1064	868.0481-00	Roller bearing	CJ613&JM1312
1065	868.0485-00	Sleeve AOH	CJ613&JM1312
1066	402.4199-01	Labyrinth cover	CJ613&JM1312
1067	840.0667-00	Screw	CJ613&JM1312
1068	847.0124-00	Washer	CJ613&JM1312
1069	400.0419-001	Labyrinth ring	CJ613&JM1312
1070	873.0907-00	V-ring	CJ613&JM1312
1071	59-425-411-001	Key	CJ613&JM1312
1072	400.1111-001	Eccentric shaft	CJ613&JM1312
1073	845.0357-00	Shaft nut	CJ613&JM1312
1074	59-425-421-007	Key	CJ613&JM1312
1075	53-467-216-000	Spacer ring	CJ613&JM1312
1076	845.0390-00	Shaft nut	CJ613&JM1312
1077	847.0300-00	Tab washer	CJ613&JM1312
1078	53-367-215-500	Cover	CJ613&JM1312
1079	840.0044-00	Screw	CJ613&JM1312
1080	402.3967-01	Labyrinth ring	CJ613&JM1312
1081	873.0907-00	V-ring	CJ613&JM1312
1082	868.0287-00	Roller bearing	CJ613&JM1312
1083	402.3301-01	Labyrinth cover	CJ613&JM1312
1084	840.0667-00	Screw	CJ613&JM1312
1085	847.0124-00	Washer	CJ613&JM1312
1086	402.3302-01	Labyrinth ring	CJ613&JM1312
1087	873.0907-00	V-ring	CJ613&JM1312
1088	400.0299-001	Flywheel flat	CJ613&JM1312
1089	400.0299-002	Flywheel 10×5v	CJ613&JM1312
1090	400.0299-003	Flywheel 5×8v	CJ613&JM1312
1091	400.0299-004	Flywheel 8×SPC	CJ613&JM1312
1092	53-366-391-001	Counterweight	CJ613&JM1312
1093	840.0648-00	Screw	CJ613&JM1312
1094	847.0182-00	Washer DIN	CJ613&JM1312
1095	847.0132-00	Washer	CJ613&JM1312
1096	53-173-769-500	Bearing housing, non-locating bearing	CJ613&JM1312
1097	10-115-285-500	Bearing housing, locating bearing	CJ613&JM1312
1098	840.1191-00	Screw	CJ613&JM1312
1099	845.0397-00	Nut	CJ613&JM1312
1100	847.0312-00	Washer	CJ613&JM1312

1101	53-373-766-000	Twin nut	CJ613&JM1312
1102	400.1111-001	Eccentric Shaft	CJ613&JM1312
1103	400.0692-901	Drive Motor	CJ613&JM1312
1104	879.0656-00	V-Belt Pulley	CJ613&JM1312
1105	875.0257-00	V-Belt SPC 11200	CJ613&JM1312
1106	400.0693-901	Drive Motor	CJ613&JM1312
1107	879.0657-00	V-Belt Pulley	CJ613&JM1312
1108	875.0360-00	V-Belt 8V 4500	CJ613&JM1312
1109	400.0694-901	Drive Motor	CJ613&JM1312
1110	879.0658-00	V-Belt Pulley	CJ613&JM1312
1111	875.0257-00	V-Belt SPC 11200	CJ613&JM1312
1112	400.0695-901	Drive Motor	CJ613&JM1312
1113	879.0659-00	V-Belt Pulley	CJ613&JM1312
1114	875.0360-00	V-Belt	CJ613&JM1312
1115	972.0813-00	Motor	CJ613&JM1312
1116	869.0236-00	Bushing MGT NR 100 Di 100	CJ613&JM1312
1117	869.0235-00	Bushing MGT NR 125 Di 100	CJ613&JM1312
1118	869.0350-00	Bushing	CJ613&JM1312
1119	869.0366-00	Bushing	CJ613&JM1312
1120	53-173-782-500	Frame assembly	CJ613&JM1312
1121	400.3093-001	Stop block	CJ613&JM1312
1122	400.3100-001	Foot list	CJ613&JM1312
1123	400.0489-901	Tool list kit	CJ613&JM1312
1124	442.9476-00	Tool Box	CJ613&JM1312
1125	402.4452-00	Gauge for CSS 75 - 225	CJ613&JM1312
1126	402.4480-00	Lifting Tool	CJ613&JM1312
1127	920.0110-00	Slugging Wrench	CJ613&JM1312
1128	920.0201-00	Socket Wrench	CJ613&JM1312
1129	920.0265-00	Tools, Instruments Open-ended Spanner	CJ613&JM1312
1130	920.0264-00	Combination Wrench 65	CJ613&JM1312
1131	400.0583-001	Tool List	CJ613&JM1312
1132	126.0383-001	Risk of crushing	CJ613&JM1312
1133	126.0385-001	Warning sign read manual	CJ613&JM1312
1134	126.0386-001	Do not remove guards	CJ613&JM1312
1135	126.0409-001	Sign product name	CJ613&JM1312
1136	126.0445-001	SANDVIK logotype silver	CJ613&JM1312
1137	126.5007-01	Identification plate	CJ613&JM1312
1138	885.0250-00	Sign to mark centre of gravity	CJ613&JM1312

1139	885.0261-00	Lift herel Secure here	CJ613&JM1312
1140	885.0267-00	Warning sign Danger	CJ613&JM1312
1141	10-214-352-000	LOWER SIDE LINER	CJ613&JM1312
1142	10-214-351-000	UPPER SIDE LINER	CJ613&JM1312
1143	10-314-356-000	WEDGE PLATE	CJ613&JM1312
1144	400.0445-001	STAT/SWING JAW PL WT(Z) M1	CJ613&JM1312
1145	400.0447-001	STAT JAW PL CORRUGATED M1	CJ613&JM1312
1146	400.0963-001	STAT JAW PL SHARP TOOTHED M1	CJ613&JM1312
1147	10-214-355-000	WEDGE-SWING JAW	CJ613&JM1312
1148	53-366-632-501	SCREW TAPERED HEAD	CJ613&JM1312
1149	53-466-616-000	PROTECTION PLATE	CJ613&JM1312
1150	53-267-239-000	ECCENTRIC SHAFT	CJ613&JM1312
1151	00-813-249-008	SPHERICAL ROLLER BEARING	CJ613&JM1312
1152	32-402-330-200	SPACER, SWING JAW	CJ613&JM1312
1153	32-402-330-100	SEALPLATE, SWING JAW	CJ613&JM1312
1154	32-402-396-700	SPACER, INR LABYRINTH	CJ613&JM1312
1155	32-402-419-900	SEALPLATE, INNER	CJ613&JM1312
1156	00-923-203-405	SEAL V-RING	CJ613&JM1312
1157	00-813-249-007	SPHERICAL ROLLER BEARING	CJ613&JM1312
1158	00-819-163-376	ADAPTER SLEEVE	CJ613&JM1312
1159	32-402-396-900	SPACER,OUTR LABYRINTH	CJ613&JM1312
1160	00-819-121-168	LOCKNUT-BEARING	CJ613&JM1312
1161	400.0446-001	SWING JAW PLT CORRUGATED M1	CJ613&JM1312
1162	400.0964-001	SWING PL SHARP TOOTHED M1	CJ613&JM1312
1163	10-114-354-000	DEFLECTOR PLATE	CJ613&JM1312
1164	53-466-927-000	WEDGE HEAD BOLT	CJ613&JM1312
1165	10-314-500-000	TOGGLE SEAT BLOCK	CJ613&JM1312
1166	17-201-650-001	TOGGLE SEAT	CJ613&JM1312
1167	10-214-535-000	TOGGLE PLATE 775	CJ613&JM1312
1168	53-466-629-500	TENSION ROD CLEVIS	CJ613&JM1312
1169	53-466-415-002	THREADED ROD	CJ613&JM1312
1170	400.0450-001	SPRING TENSION ROD	CJ613&JM1312
1171	53-366-624-500	MOVABLE SPRING PLATE	CJ613&JM1312
1172	10-114-459-500	LEFT BEARING HSG	CJ613&JM1312
1173	53-167-007-500	RIGHT BEARING HSG	CJ613&JM1312
1174	53-466-623-000	GUIDE BOLT BRG HSG	CJ613&JM1312
1175	53-173-782-500	FRAME ASSEMBLY	CJ613&JM1312
1176	400.3093-001	STOP BLOCK	CJ613&JM1312

1177	400.3100-001	FOOT LIST	CJ613&JM1312
1178	402.4547-00	Cylinder bracket	CJ615&JM1511
1179	845.0344-00	Nut	CJ615&JM1511
1180	845.0344-00	Nut	CJ615&JM1511
1181	908.0444-00	Cylinder	CJ615&JM1511
1182	402.4551-01	Pressure plate	CJ615&JM1511
1183	908.0445-00	Hydraulic cylinder	CJ615&JM1511
1184	402.4549-01	Cylinder bracket	CJ615&JM1511
1185	845.0157-00	Locking nut	CJ615&JM1511
1186	847.0088-00	Washer lock	CJ615&JM1511
1187	845.0344-00	Nut	CJ615&JM1511
1188	402.4472-00	Pin	CJ615&JM1511
1189	840.0645-00	Screw	CJ615&JM1511
1190	402.4471-01	Washer	CJ615&JM1511
1191	847.0016-00	Washer	CJ615&JM1511
1192	400.1329-901	Retraction rod	CJ615&JM1511
1193	845.0215-00	Nut lock 7040	CJ615&JM1511
1194	400.0725-001	Spring	CJ615&JM1511
1195	400.1400-901	Spring guide	CJ615&JM1511
1196	400.0562-901	Spring seat frame	CJ615&JM1511
1197	400.0586-901	Guard	CJ615&JM1511
1198	840.0068-00	Screw	CJ615&JM1511
1199	847.0016-00	Washer	CJ615&JM1511
1200	400.4606-01	Toggle plate	CJ615&JM1511
1201	400.4605-01	Toggle plate	CJ615&JM1511
1202	402.4508-01	Toggle seat holder	CJ615&JM1511
1203	402.4507-01	Toggle seat, upper	CJ615&JM1511
1204	402.4352-01	Toggle seat, lower	CJ615&JM1511
1205	402.4400-01	Clamping bar	CJ615&JM1511
1206	402.4401-01	Dust curtain	CJ615&JM1511
1207	840.0046-00	Screw	CJ615&JM1511
1208	847.0147-00	Washer	CJ615&JM1511
1209	840.0054-00	Screw	CJ615&JM1511
1210	847.0147-00	Washer	CJ615&JM1511
1211	402.4509-00	Side block, right hand side	CJ615&JM1511
1212	402.4510-00	Side block, left hand side	CJ615&JM1511
1213	868.0760-00	Roller bearing	CJ615&JM1511
1214	868.0727-00	Sleeve	CJ615&JM1511

1215	402.4198-01	Labyrinth cover	CJ615&JM1511
1216	402.4199-01	Labyrinth cover	CJ615&JM1511
1217	840.0668-00	Screw	CJ615&JM1511
1218	847.0124-00	Washer	CJ615&JM1511
1219	402.3969-01	Labyrinth ring	CJ615&JM1511
1220	873.0907-00	V-ring	CJ615&JM1511
1221	804.0264-00	Key	CJ615&JM1511
1222	402.4330-02	Eccentric shaft	CJ615&JM1511
1223	845.0377-00	Shaft nut	CJ615&JM1511
1224	853.0590-00	Pin Prym	CJ615&JM1511
1225	402.3970-01	Locking block	CJ615&JM1511
1226	402.4376-01	Key	CJ615&JM1511
1227	402.4375-01	Spacer ring	CJ615&JM1511
1228	845.0390-00	Shaft nut	CJ615&JM1511
1229	847.0300-00	Tab washer	CJ615&JM1511
1230	402.4377-00	Cover	CJ615&JM1511
1231	840.0044-00	Screw	CJ615&JM1511
1232	847.0147-00	Washer	CJ615&JM1511
1233	402.3967-01	Labyrinth ring	CJ615&JM1511
1234	873.0907-00	V-ring	CJ615&JM1511
1235	868.0765-00	Roller bearing	CJ615&JM1511
1236	402.3301-01	Labyrinth cover	CJ615&JM1511
1237	873.0040-00	Seals O-ring Rubber String D3	CJ615&JM1511
1238	840.0668-00	Screw	CJ615&JM1511
1239	847.0124-00	Washer	CJ615&JM1511
1240	402.3302-01	Labyrinth ring	CJ615&JM1511
1241	873.0907-00	V-ring	CJ615&JM1511
1242	400.0312-001	Flywheel flat	CJ615&JM1511
1243	400.0312-002	Flywheel 11×8v	CJ615&JM1511
1244	400.0312-003	Flywheel 11×SPC	CJ615&JM1511
1245	402.4513-01	Counterweight	CJ615&JM1511
1246	840.0678-00	Screw	CJ615&JM1511
1247	847.0124-00	Washer	CJ615&JM1511
1248	402.4765-001	Bearing housing	CJ615&JM1511
1249	400.0029-001	Protection flange	CJ615&JM1511
1250	841.0268-00	Screw	CJ615&JM1511
1251	402.4764-001	Bearing housing	CJ615&JM1511
1252	400.0028-001	Protection flange	CJ615&JM1511

1253	841.0268-00	Screw	CJ615&JM1511
1254	840.1203-00	Screw	CJ615&JM1511
1255	847.0312-00	Washer	CJ615&JM1511
1256	53-373-766-000	Twin nut	CJ615&JM1511
1257	402.4330-02	Eccentric Shaft	CJ615&JM1511
1258	400.1600-902	Lubrication line attachment bracket	CJ615&JM1511
		Screw	CJ615&JM1511
		Washer	CJ615&JM1511
		Self-locking	CJ615&JM1511
1259	400.1610-901	Distribution box	CJ615&JM1511
1260	400.1606-909	Lines and connections	CJ615&JM1511
1261	972.0823-00	MOTOR	CJ615&JM1511
1262	869.0329-00	Bushing	CJ615&JM1511
1263	869.0274-00	Bushing	CJ615&JM1511
1264	879.0590-00	V-Belt Pulley	CJ615&JM1511
1265	879.0681-00	V-belt pulley	CJ615&JM1511
1266	879.0682-00	V-Belt Pulley	CJ615&JM1511
1267	879.0705-00	V-belt pulley	CJ615&JM1511
1268	875.0370-00	V-Belt SPC	CJ615&JM1511
1269	875.0201-00	V-Belt	CJ615&JM1511
1270	400.0814-901	Frame assembly	CJ615&JM1511
1271	402.4521-01	CHEEK PLATE, UPPER	CJ615&JM1511
1272	402.4522-01	CHEEK PLATE, LOWER	CJ615&JM1511
1273	402.4386-00	SUPPORT STRIP	CJ615&JM1511
1274	400.0485-001	STAT JAW PLATE COARSE CORRUG	CJ615&JM1511
1275	400.0409-001	STAT JAW PL SHARP TOOTHED M1	CJ615&JM1511
1276	402.4501-01	STAT/SWING JAW PLATE HD M1	CJ615&JM1511
1277	402.4502-01	STAT/SWING JAW PLT MID HD M1	CJ615&JM1511
1278	650.0313-01	SCREW	CJ615&JM1511
1279	402.4330-02	ECCENTRIC SHAFT	CJ615&JM1511
1280	00-813-250-093	SPHERICAL ROLLER BEARING	CJ615&JM1511
1281	873.0907-00	V-RING	CJ615&JM1511
1282	00-813-249-009	SPHERICAL ROLLER BRG	CJ615&JM1511
1283	402.4501-01	STAT/SWING JAW PLATE HD M1	CJ615&JM1511
1284	400.0488-001	SWING JAW PL COARSE CORRUG	CJ615&JM1511
1285	400.0491-001	SWING JAW PL SHARP TOOTHED	CJ615&JM1511
1286	402.4502-01	STAT/SWING JAW PLT MID HD M1	CJ615&JM1511
1287	402.2005-01	TENSION STRIP, MOVABLE	CJ615&JM1511

1288	402.4508-01	TOGGLE SEAT HOLDER	CJ615&JM1511
1289	402.4507-01	TOGGLE SEAT	CJ615&JM1511
1290	402.4352-01	TOGGLE SEAT	CJ615&JM1511
1291	402.4605-00	TOGGLE PLATE	CJ615&JM1511
1292	402.4469-91	RETRACTION BAR	CJ615&JM1511
1293	127.0026-01	SPRING 545 F/LENGTH	CJ615&JM1511
1294	400.3185-901	Jaw assembly	CJ615&JM1511
1295	840.0046-00	Screw	CJ615&JM1511
1296	847.0147-00	Washer round	CJ615&JM1511
1297	402.4400-01	Clamping strip Pt.	CJ615&JM1511
1298	402.4401-01	Dust cover Pt.	CJ615&JM1511
1299	845.0013-00	Nut	CJ615&JM1511
1300	840.1142-00	Screw	CJ615&JM1511
1301	402.4500-00	Wear plate	CJ615&JM1511
1302	841.0268-00	Screw	CJ615&JM1511
1303	400.0029-001	Protection flange non-locating	CJ615&JM1511
		bearing	
1304	400.0028-001	Bearing house guide	CJ615&JM1511
1305	53-373-766-000	Twin nut	CJ615&JM1511
1306	840.1203-00	Screw	CJ615&JM1511
1307	847.0312-00	Washer	CJ615&JM1511
1308	853.0590-00	Spiral pin Prym	CJ615&JM1511
1309	402.3970-01	Locking device Pt.	CJ615&JM1511
1310	845.0377-00	Nut	CJ615&JM1511
1311	804.0264-00	Key steel	CJ615&JM1511
1312	402.3969-01	Labyrinth ring Pt.	CJ615&JM1511
1313	402.4199-01	Labyrinth cover free Pt.	CJ615&JM1511
1314	402.4198-01	Labyrinth cover Guide Pt.	CJ615&JM1511
1315	868.0760-00	Roller bearing	CJ615&JM1511
1316	868.0727-00	Withdrawal sleeve AOH24176	CJ615&JM1511
1317	402.4765-01	Bearing house free	CJ615&JM1511
1318	402.4764-01	Bearing house guide	CJ615&JM1511
1319	402.3967-01	Labyrinth ring Pt.	CJ615&JM1511
1320	402.3302-01	Labyrinth ring Pt.	CJ615&JM1511
1321	873.0907-00	V-ring V-450A	CJ615&JM1511
1322	840.0668-00	Screw	CJ615&JM1511
1323	847.0124-00	Washer	CJ615&JM1511
1324	873.0040-00	Rubber seal String D 3	CJ615&JM1511

1325	402.3301-01	Labyrinth cover Pt.	CJ615&JM1511
1326	868.0765-00	Roller bearing	CJ615&JM1511
1327	402.4330-02	Eccentric shaft Pt.	CJ615&JM1511
1328	402.4499-00	Jaw	CJ615&JM1511
1329	402.4547-00	Cylinder bracket	CJ815&JM1513
1330	845.0344-00	Nut	CJ815&JM1513
1331	845.0344-00	Nut	CJ815&JM1513
1332	908.0444-00	Cylinder CS	CJ815&JM1513
1333	402.4551-01	Pressure plate	CJ815&JM1513
1334	908.0445-00	Hydraulic cylinder	CJ815&JM1513
1335	402.4549-01	Cylinder bracket	CJ815&JM1513
1336	845.0157-00	Locking nut	CJ815&JM1513
1337	847.0088-00	Washer lock	CJ815&JM1513
1338	845.0344-00	Nut	CJ815&JM1513
1339	402.4472-00	Pin	CJ815&JM1513
1340	840.0645-00	Screw	CJ815&JM1513
1341	402.4471-01	Washer	CJ815&JM1513
1342	847.0016-00	Washer	CJ815&JM1513
1343	400.1329-901	Retraction rod	CJ815&JM1513
1344	845.0215-00	Nut lock	CJ815&JM1513
1345	400.0725-001	Spring	CJ815&JM1513
1346	400.1400-901	Spring guide	CJ815&JM1513
1347	400.0562-901	Spring seat frame	CJ815&JM1513
1348	400.0586-901	Guard	CJ815&JM1513
1349	840.0068-00	Screw	CJ815&JM1513
1350	847.0016-00	Washer	CJ815&JM1513
1351	402.4606-01	Toggle plate	CJ815&JM1513
1352	402.4605-01	Toggle plate	CJ815&JM1513
1353	402.4508-01	Toggle seat holder	CJ815&JM1513
1354	402.4507-01	Toggle seat, upper	CJ815&JM1513
1355	402.4352-01	Toggle seat, lower	CJ815&JM1513
1356	402.4400-01	Clamping bar	CJ815&JM1513
1357	402.4401-01	Dust curtain	CJ815&JM1513
1358	840.0045-00	Screw	CJ815&JM1513
1359	847.0147-00	Washer	CJ815&JM1513
1360	840.0054-00	Screw	CJ815&JM1513
1361	847.0180-00	Washer	CJ815&JM1513
1362	402.4509-00	Side block, right hand side	CJ815&JM1513

1363	402.4510-00	Side block, left hand side	CJ815&JM1513
1364	402.4330-02	Eccentric Shaft	CJ815&JM1513
1365	847.0124-00	Washer	CJ815&JM1513
1366	840.0668-00	Screw	CJ815&JM1513
1367	873.0907-00	V-Ring	CJ815&JM1513
1368	868.0727-00	Sleeve	CJ815&JM1513
1369	868.0760-00	Bearings Spherical Roller	CJ815&JM1513
1370	402.4198-01	Labyrinth Cover Guide	CJ815&JM1513
1371	402.4199-01	Labyrinth Cover Free	CJ815&JM1513
1372	402.3969-01	Labyrinth Ring	CJ815&JM1513
1373	804.0264-00	Key Steel	CJ815&JM1513
1374	845.0377-00	Nut	CJ815&JM1513
1375	402.3970-01	Locking Block	CJ815&JM1513
1376	853.0590-00	Spring Pin Prym	CJ815&JM1513
1377	868.0765-00	Bearings Spherical Roller	CJ815&JM1513
1378	873.0040-00	Seals O-ring Rubber String	CJ815&JM1513
1379	402.3301-01	Labyrinth Cover	CJ815&JM1513
1380	847.0124-00	Washer	CJ815&JM1513
1381	840.0668-00	Screw	CJ815&JM1513
1382	873.0907-00	V-Ring	CJ815&JM1513
1383	402.3302-01	Labyrinth Ring	CJ815&JM1513
1384	402.3967-01	Labyrinth Ring	CJ815&JM1513
1385	402.4764-01	Bearing House Guide	CJ815&JM1513
1386	402.4765-01	Bearing House Free	CJ815&JM1513
1387	868.0727-00	Sleeve AOH 24176	CJ815&JM1513
1388	840.1203-00	Screw	CJ815&JM1513
1389	847.0312-00	Washer	CJ815&JM1513
1390	53-373-766-000	Twin Nut	CJ815&JM1513
1391	402.4783-01	Protection Bearing House Guide	CJ815&JM1513
1392	402.4785-01	Protection Bearing House Free	CJ815&JM1513
1393	841.0268-00	Screw	CJ815&JM1513
1394	402.4618-00	Jaw assembly	CJ815&JM1513
1395	402.4615-01	Jaw	CJ815&JM1513
1396	402.4337-00	Wearing plate	CJ815&JM1513
1397	840.1142-00	Screw	CJ815&JM1513
1398	845.0013-00	Nut	CJ815&JM1513
1399	402.4338-01	Protection plate	CJ815&JM1513
1400	900.0285-00	Plug	CJ815&JM1513

1401	402.3128-01	Guide	CJ815&JM1513
1402	868.0760-00	Roller bearing	CJ815&JM1513
1403	868.0727-00	Sleeve AOH	CJ815&JM1513
1404	402.4198-01	Labyrinth cover	CJ815&JM1513
1405	402.4199-01	Labyrinth cover	CJ815&JM1513
1406	840.0668-00	Screw	CJ815&JM1513
1407	847.0124-00	Washer BRB	CJ815&JM1513
1408	402.3969-01	Labyrinth ring	CJ815&JM1513
1409	873.0907-00	V-ring	CJ815&JM1513
1410	804.0264-00	Key	CJ815&JM1513
1411	402.4330-02	Eccentric shaft	CJ815&JM1513
1412	845.0377-00	Shaft nut HM	CJ815&JM1513
1413	402.3970-01	Locking block	CJ815&JM1513
1414	853.0590-00	Pin Prym	CJ815&JM1513
1415	402.4376-01	Key	CJ815&JM1513
1416	402.4375-01	Spacer ring	CJ815&JM1513
1417	845.0390-00	Shaft nut	CJ815&JM1513
1418	847.0300-00	Tab washer	CJ815&JM1513
1419	402.4377-00	Cover	CJ815&JM1513
1420	840.0044-00	Screw	CJ815&JM1513
1421	847.0147-00	Washer	CJ815&JM1513
1422	402.3967-01	Labyrinth ring	CJ815&JM1513
1423	873.0907-00	V-ring	CJ815&JM1513
1424	868.0765-00	Roller bearing	CJ815&JM1513
1425	402.3301-01	Labyrinth cover	CJ815&JM1513
1426	873.0040-00	Seals O-ring Rubber String	CJ815&JM1513
1427	840.0668-00	Screw	CJ815&JM1513
1428	847.0124-00	Washer	CJ815&JM1513
1429	402.3302-01	Labyrinth ring	CJ815&JM1513
1430	873.0907-00	V-ring	CJ815&JM1513
1431	400.0313-001	Flywheel flat	CJ815&JM1513
1432	400.0313-002	Flywheel 7×8v	CJ815&JM1513
1433	400.0313-003	Flywheel 8×SPC	CJ815&JM1513
1434	402.4487-01	Counterweight	CJ815&JM1513
1435	840.0655-00	Screw	CJ815&JM1513
1436	847.0165-00	Washer	CJ815&JM1513
1437	402.4765-01	Bearing housing	CJ815&JM1513
1438	402.4785-01	Protection flange	CJ815&JM1513

1439	841.0268-00	Screw	CJ815&JM1513
1440	402.4764-01	Bearing housing	CJ815&JM1513
1441	402.4783-01	Protection flange	CJ815&JM1513
1442	841.0268-00	Screw	CJ815&JM1513
1443	840.1203-00	Screw	CJ815&JM1513
1444	847.0312-00	Washer	CJ815&JM1513
1445	53-373-766-000	Twin nut	CJ815&JM1513
1446	402.4330-02	Eccentric Shaft	CJ815&JM1513
1447	400.1600-902	Lubrication line attachment bracket	CJ815&JM1513
1448	400.1610-901	Screw	CJ815&JM1513
1449	400.1606-910	Lines and connections	CJ815&JM1513
1450	972.0823-00	Motor	CJ815&JM1513
1451	875.0360-00	V-Belt	CJ815&JM1513
1452	875.0257-00	V-Belt	CJ815&JM1513
1453	869.0235-00	Bushing	CJ815&JM1513
1454	869.0329-00	Bushing	CJ815&JM1513
1455	869.0350-00	Bushing	CJ815&JM1513
1456	869.0236-00	Bushing	CJ815&JM1513
1457	879.0720-00	V-belt pulley	CJ815&JM1513
1458	879.0721-00	V-belt pulley	CJ815&JM1513
1459	879.0722-00	V-belt pulley	CJ815&JM1513
1460	879.0683-00	V-belt pulley	CJ815&JM1513
1461	400.0542-902	Frame assembly	CJ815&JM1513
1462	400.3102-001	Footlist	CJ815&JM1513
1463	442.9476-00	Tool box kit	CJ815&JM1513
1464	402.4452-00	Gauge for CSS	CJ815&JM1513
1465	402.4480-00	Lifting tool	CJ815&JM1513
1466	920.0110-00	Slugging wrench NV 65	CJ815&JM1513
1467	920.0201-00	Socket wrench 65	CJ815&JM1513
1468	920.0072-00	Open end wrench	CJ815&JM1513
1469	920.0113-00	Slugging wrench	CJ815&JM1513
1470	920.0133-00	Open end wrench	CJ815&JM1513
1471	400.0847-001	Tool list	CJ815&JM1513
1472	126.0383-001	Risk of crushing	CJ815&JM1513
1473	126.0385-001	Warning sign read manual	CJ815&JM1513
1474	126.0386-001	Do not remove guards	CJ815&JM1513
1475	126.0411-001	Sign product name	CJ815&JM1513
1476	126.0447-001	SANDVIK logotype silver 160	CJ815&JM1513

1477	126.5007-01	Identification plate	CJ815&JM1513
1478	885.0250-00	Sign to mark centre of gravity	CJ815&JM1513
1479	885.0261-00	Lift here/Secure here	CJ815&JM1513
1480	885.0267-00	Warning sign Danger	CJ815&JM1513
1481	402.4362-01	CHEEK PLATE LOWER	CJ815&JM1513
1482	402.4361-01	CHEEK PLATE-UPPER	CJ815&JM1513
1483	402.4386-00	SUPPORT STRIP	CJ815&JM1513
1484	402.6036-01	STAT JAW PL HD	CJ815&JM1513
1485	402.4396-01	STAT JAW PLATE-MID	CJ815&JM1513
1486	402.5793-01	TENSIONING STRIP, FIX	CJ815&JM1513
1487	650.0313-01	SCREW M48 X 420	CJ815&JM1513
1488	402.4330-01	ECCENTRIC SHAFT	CJ815&JM1513
1489	00-813-250-093	SPHERICAL ROLLER BEARING	CJ815&JM1513
1490	873.0907-00	V-RING	CJ815&JM1513
1491	00-813-249-009	SPHERICAL ROLLER BRG P/N	CJ815&JM1513
1492	400.0460-001	SWING JAW PLATE HD M1	CJ815&JM1513
1493	400.0461-001	SW JAW PL MID WEDGE HD M1	CJ815&JM1513
1494	402.2005-01	TENSION STRIP, MOVABLE	CJ815&JM1513
1495	402.4345-01	TOGGLE SEAT HOLDER	CJ815&JM1513
1496	402.4352-01	TOGGLE SEAT	CJ815&JM1513
1497	402.4381-00	TOGGLE PLATE	CJ815&JM1513
1498	402.4303-00	RETRACTION BAR L1340	CJ815&JM1513
1499	127.0006-27	SPRING, TENSION ROD	CJ815&JM1513