

Telsmith Cone Crusher Spare Parts Number			
No	Part Number	Description	Crusher Model
1	1050641	GENERAL ARRANGEMENT	38SBS
2	1070426	OIL LUBE ARRANGEMENT	38SBS
3	1046125	BASE UNIT	38SBS
4	1062797	FLYWHEEL	38SBS
5	1070219	UPPER FRAME	38SBS
6	1050163	POWER ROTATE SYSTEM	38SBS
7	1055854	POWER ROTATE SENSOR ASSY	38SBS
8	PN-0543	PAINT, PRIMER, GRAY	38SBS
9	VLX-20331-01	PAINT, ASTEC BEIGE ACRYLIC	38SBS
10	1082546	MANGANESE, S-XC	38SBS
11	1082547	MANGANESE, S-C	38SBS
12	1082548	MANGANESE, S-M	38SBS
13	1082549	MANGANESE, FC-C	38SBS
14	1082550	MANGANESE, FC-M	38SBS
15	1082551	MANGANESE, FC-F	38SBS
16	1097430	PWRUNIT, HYD	38SBS
17	C1-272-1545B	OIL HEATING UNIT	38SBS
18	1052978	HOSES, CONN, RELIEF & LOCK	38SBS
19	1019895	HOSES,CONN., POWER ROTATE	38SBS
20	1017754	BOTTOM PLATE W/O ANTI-SPIN	38SBS
21	1045259	ANTI-SPIN	38SBS
22	Y-272-2600B	HOSES,CONN., ANTI-SPIN	38SBS
23	1060709	OIL TANK ASSEMBLY	38SBS
24	C1-272-1545B	OIL HEATING UNIT	38SBS
25	1096315	OIL PUMP ASSY	38SBS
26	1071761	COOLER ASSY	38SBS
27	1062281	UNIVERSAL FLOWMETER	38SBS
28	A-272-2643	COUNTERSHAFT BOX	38SBS
29	23G39	FTG,NPT,HOL HEX PLUG	38SBS
30	12B38	HHCS	38SBS
31	10S89	CHW	38SBS
32	BA-272-2443	COUNTERSHAFT	38SBS
33	30H22	BEARING CONE	38SBS
34	30H21	BEARING CUP	38SBS
35	DB-272-2443	OIL GUARD	38SBS
36	63L64	OIL SEAL	38SBS

37	2.60E+29	HHCS	38SBS
38	B1-18-1167	BEVEL PINION	38SBS
39	CA-272-2443	SHIM	38SBS
40	CB-272-2443	SHIM	38SBS
41	CC-272-2443	SHIM	38SBS
42	CD-272-2443	SHIM	38SBS
43	27S97	AIR BREATHER	38SBS
44	23B25	PIPE CPLG	38SBS
45	16G29	PIPE SEALANT	38SBS
46	HA1-272-2438W	BOTTOM PLATE	38SBS
47	16V75	HHCS	38SBS
48	26K68	HHCS	38SBS
49	26B48	CHW	38SBS
50	11T02	SILICONE SEALANT	38SBS
51	23D16	PLUG,PIPE	38SBS
52	23D24	PLUG	38SBS
53	AA-272-2632	TAPER HEAD	38SBS
54	A1-272-2634	MAIN SHAFT	38SBS
55	62D12	QCOUPLING,HYD,ST OR,FML	38SBS
56	62D14	QCOUPLING,HYD,PLUG	38SBS
57	62D13	QCOUPLING,HYD,ST OR,MALE	38SBS
58	62D15	QCOUPLING,HYD,CAP	38SBS
59	23H54	FTG,HYD,JIC,ST CON	38SBS
60	H0823-	HOSE ASSY	38SBS
61	A-272-2636	ECCENTRIC	38SBS
62	TA-272-2438	SLEEVE,INNER	38SBS
63	1.20E+53	BABBITT	38SBS
64	10S47	THRUST ROLLER BEARING	38SBS
65	A-272-2637	ROTARY SEAL RING	38SBS
66	EH-17-26	PIN	38SBS
67	13B22	SHCS	38SBS
68	26C24	SHCS	38SBS
69	CA-272-2637	PISTON RING	38SBS
70	10P71	BAKELITE	38SBS
71	20N72	SHELLAC	38SBS
72	BA-272-2637	ROTARY SEAL RING WEIGHT	38SBS
73	12R84	HHCS	38SBS
74	10T77	THREADLOCKER,LOCTITE	38SBS

75	26B48	CHW	38SBS
76	CH-17-26	PIN	38SBS
77	DA-272-2677	ANTI SPIN DRIVE TANG	38SBS
78	26B93	SHCS	38SBS
79	10T77	THREADLOCKER	38SBS
80	EA-272-2677	ANTI SPIN SLIDER PLATE, BREVINI	38SBS
81	1025117	ANTI-SPIN ADAPTER PLATE	38SBS
82	6.40E+83	SHCS	38SBS
83	10H50	THREADLOCKER	38SBS
84	62B78	GEARBOX	38SBS
85	1043735	BOTTOM PLATE	38SBS
86	23D21	PLUG	38SBS
87	6.40E+88	SHCS	38SBS
88	6.40E+85	CHW	38SBS
89	26B48	CHW	38SBS
90	16V75	HHCS	38SBS
91	23D24	PLUG	38SBS
92	16G29	PIPE SEALANT	38SBS
93	23C20	FTG,HYD,JIC,NPT	38SBS
94	12W73	FTG,HYD	38SBS
95	10D98	FTG,HYD,JIC,BH UN EL	38SBS
96	62A01	MOTOR,HYD	38SBS
97	64B98	ADHESIVE,LOCTITE	38SBS
98	12L83	SHCS	38SBS
99	23P61	HYD	38SBS
100	15X33	HYD,JIC	38SBS
101	62D34	HYD,JIC,REDUCER	38SBS
102	1025148	GEARBOX COVER,ANTI-SPIN	38SBS
103	23V93	HHCS	38SBS
104	1045260	ANTI-SPIN HYDRAULICS	38SBS
105	H0423-	HOSE ASSY	38SBS
106	26J03	FTG,HYD,JIC,SN	38SBS
107	23R04	FTG,HYD,JIC,ST CON	38SBS
108	62B80	MANIFOLD ASSY	38SBS
109	27V34	HHCS	38SBS
110	23H53	FTG,HYD,JIC,ST	38SBS
111	26J25	FTG,HYD,JIC,SN EL	38SBS
112	H1023-	HOSE ASSY	38SBS

113	H1023-	HOSE ASSY	38SBS
114	62H69	FTG,HYD,ST OR,RED/EXP	38SBS
115	62D33	FTG,HYD,JIC,ST RUN TEE	38SBS
116	12T24	FTG,HYD,JIC,CAP	38SBS
117	H0423-	HOSE ASSY	38SBS
118	H0423-	HOSE ASSY	38SBS
119	23P61	FTG,HYD,JIC,ST EL	38SBS
120	61D15	FTG,HYD,JIC,ST CON-SN	38SBS
121	62D09	QCOUPLING,HYD,ST OR,MALE	38SBS
122	62D11	QCOUPLING,HYD,PLUG/CAP	38SBS
123	62D50	CLAMP SET,TWIN	38SBS
124	62D51	CLAMP,COVER PLATE,TWIN	38SBS
125	20X16	HHCS	38SBS
126	62D47	CLAMP SET,TWIN	38SBS
127	62D48	CLAMP,COVER PLATE,TWIN	38SBS
128	15C82	HHCS	38SBS
129	11P81	CABLE TIE	38SBS
130	1032745	MAIN FRAME	38SBS
131	62A30	BEARING SPHERICAL PLAIN	38SBS
132	64M05	RETAINING RING,INTERNAL	38SBS
133	AB-272-2633	THRUST PIN BUSHING	38SBS
134	31A41	RETAINING RING	38SBS
135	EA-272-2633	SLEEVE,OUTER	38SBS
136	A-272-448	OUTER SNAP RING	38SBS
137	1.20E+53	BABBITT	38SBS
138	BD-272-2603	FRAME ARM SHIELD	38SBS
139	EB-272-2403	COUNTERSHAFT BOX SHIELD	38SBS
140	CD-272-2603	COUNTERSHAFT BOX SHIELD	38SBS
141	10P71	BAKELITE	38SBS
142	20N72	SHELLAC	38SBS
143	10S47	THRUST ROLLER BEARING	38SBS
144	BA-272-2636	BEVEL GEAR	38SBS
145	12K10	HHCS	38SBS
146	B-272-337	SHIM	38SBS
147	CA-272-2636	SHIM	38SBS
148	D-272-337	SHIM	38SBS
149	CB-272-2636	SHIM	38SBS
150	13B33	SHCS	38SBS

151	A-272-447	PISTON RING-INNER	38SBS
152	1024721	ECCENTRIC ASSY	38SBS
153	1019753	HEAD & SHAFT ASSY	38SBS
154	1017592	C'SHAFT BOX ASSY	38SBS
155	1046127	BASE UNIT HYDRAULICS	38SBS
156	CL-272-2603	SUPPORT BRACKET	38SBS
157	60N51	GROMMET,RUBBER	38SBS
158	27W63	MULTI-CLAMP ASSY	38SBS
159	1.00E+11	HHCS	38SBS
160	23F36	PIPE TEE	38SBS
161	10Z99	RED. BUSH	38SBS
162	23R63	FTG,HYD,JIC,NPT,M CON	38SBS
163	60K80	FTG,HYD,JIC,CAP	38SBS
164	23L53	FTG,HYD,JIC,NPT,M EL	38SBS
165	H0623-	HOSE ASSY	38SBS
166	62D90	CLAMP SET, HVY, SNGL	38SBS
167	62D91	COVER PLATE, FOR HOSE CLAMP	38SBS
168	13M81	HHCS	38SBS
169	61N38	FTG,HYD,JIC,SN BR TEE	38SBS
170	23P62	FTG,HYD,JIC,NPT,M CON	38SBS
171	16G29	PIPE SEALANT	38SBS
172	12T24	FTG,HYD,JIC,CAP	38SBS
173	65F75	CYL ASM,HYD	38SBS
174	27L09	SHSS	38SBS
175	C-272-395	PLUG,BRASS	38SBS
176	BE-17-575	HHCS	38SBS
177	10H53	ANTI-SEIZE&LUB.COMP	38SBS
178	H1223-	HOSE ASSY	38SBS
179	H1223-	HOSE ASSY	38SBS
180	H1223-	HOSE ASSY	38SBS
181	H1223-	HOSE ASSY	38SBS
182	28S94	FLANGE HALF	38SBS
183	12K10	HHCS	38SBS
184	62D22	UNION BLOCK,SAE	38SBS
185	CC-272-1308	TEE	38SBS
186	12K44	HHCS	38SBS
187	28S96	FTG,HYD	38SBS
188	28S97	FTG,HYD	38SBS

189	60T92	FTG,HYD	38SBS
190	1050415	GEARBOX BRACKET	38SBS
191	CQ-17-26	PIN	38SBS
192	26F83	CHW	38SBS
193	26C24	SHCS	38SBS
194	26C46	HHCS	38SBS
195	62D27	GEARBOX,PLANETARY	38SBS
196	63N94	GEAR OIL	38SBS
197	26C57	HHCS	38SBS
198	26D04	CHW	38SBS
199	6.20E+06	HTF,JIC,BSPP ELBOW	38SBS
200	23A45	FTG,HYD,JIC,CAP	38SBS
201	6.20E+07	HTF,ADAP,MALE BSPP	38SBS
202	23L92	FTG,HYD,NPT	38SBS
203	6.20E+08	FTG,HYD,NPT,COUPLING	38SBS
204	26P65	AIR BREATHER	38SBS
205	16G29	PIPE SEALANT	38SBS
206	62C63	MOTOR,HYD	38SBS
207	10H53	ANTI-SEIZE&LUB	38SBS
208	26D36	SHCS	38SBS
209	HA-272-2673	PINION	38SBS
210	62D30	LOCKING ASSY,RINGFEDER	38SBS
211	1050423	GEARBOX COVER	38SBS
212	13J37	HHCS	38SBS
213	23J51	FTG,HYD,JIC,ST CON	38SBS
214	12T60	FTG,HYD,JIC,CAP	38SBS
215	1050151	RECEIVING HOPPER	38SBS
216	65L19	RECEIVING HOPPER SEAL	38SBS
217	64B98	ADHESIVE,LOCTITE	38SBS
218	AB-272-2629	CONCAVE RING	38SBS
219	64V11	SMITHBOND	38SBS
220	A-272-2628	TAPER SEGMENT	38SBS
221	1050791	RECEIVING HOPPER	38SBS
222	CA-272-2629	CONCAVE RING	38SBS
223	64V11	SMITHBOND	38SBS
224	A-272-2628	TAPER SEGMENT	38SBS
225	1050791	RECEIVING HOPPER	38SBS
226	64B27	CONCAVE RING	38SBS

227	64V11	SMITHBOND	38SBS
228	A-272-2628	TAPER SEGMENT	38SBS
229	1050791	RECEIVING HOPPER	38SBS
230	64B28	CONCAVE RING	38SBS
231	64V11	SMITHBOND	38SBS
232	A-272-2628	TAPER SEGMENT	38SBS
233	1050791	RECEIVING HOPPER	38SBS
234	64B29	CONCAVE RING	38SBS
235	64V11	SMITHBOND	38SBS
236	A-272-2628	TAPER SEGMENT	38SBS
237	1050791	RECEIVING HOPPER,	38SBS
238	62D16	QCOUPLING,HYD	38SBS
239	62D18	QCOUPLING,HYD,PLUG	38SBS
240	62D17	QCOUPLING,HYD	38SBS
241	62D19	QCOUPLING,HYD,CAP	38SBS
242	23F98	FTG,HYD,JIC,ST CON	38SBS
243	H1223-	HOSE ASSY	38SBS
244	62D08	QCOUPLING,HYD	38SBS
245	62D11	QCOUPLING,HYD,PLUG	38SBS
246	23R05	FTG,HYD	38SBS
247	H0623-	HOSE ASSY	38SBS
248	1034587	SENSOR MOUNT	38SBS
249	64R05	SENSOR ASSY,DUAL	38SBS
250	64R38	CLAMP,CLOSED TYPE	38SBS
251	12K63	CHW	38SBS
252	26C53	HHCS	38SBS
253	64S48	CORDSET	38SBS
254	11P81	CABLE TIE	38SBS
255	64R46	CLOSURE CAP	38SBS
256	65Z37	MOTOR,ELEC	38SBS
257	63D41	SLIDE RAILS	38SBS
258	1060704	OIL LUBE TANK	38SBS
259	16G29	PIPE SEALANT	38SBS
260	60S02	VALVE,BALL	38SBS
261	23D20	PLUG,PIPE	38SBS
262	23D22	PLUG,PIPE	38SBS
263	23D11	PLUG	38SBS
264	28S56	OIL LEVEL GAUGE	38SBS

265	63H94	SUCTION STRAINER	38SBS
266	62J60	AIR BREATHER	38SBS
267	20N85	PIPE CAP	38SBS
268	23P64	PIPE CAP	38SBS
269	65N87	CLEANOUT COVER	38SBS
270	63N56	MANIFOLD ASM, CONE LUBE	38SBS
271	16P98	HHCS	38SBS
272	13T64	CHW	38SBS
273	26A03	HHCS	38SBS
274	60Z59	COUPLING, PRESS TEST	38SBS
275	23M10	FTG, HYD, JIC, ST CON	38SBS
276	60K80	FTG, HYD, JIC, CAP	38SBS
277	63J37	ADAPTER	38SBS
278	63S04	SENSOR, PRESS	38SBS
279	63A80	COVER, PROTECTIVE	38SBS
280	63J36	ADAPTER	38SBS
281	65F11	SENSOR, TEMPERATURE	38SBS
282	1044994	PARAMETER LIST	38SBS
283	63J35	ADAPTER	38SBS
284	60K75	FTG, HYD	38SBS
285	H2010-	HOSE ASSY	38SBS
286	23J09	FLANGE KIT, SAE	38SBS
287	1045360	FLOWMETER SUPPORT BRACKET	38SBS
288	12K63	CHW	38SBS
289	23V67	HHCS	38SBS
290	27S79	CHW	38SBS
291	23M10	FTG, HYD, JIC, ST CON	38SBS
292	64N69	FTG, HYD, JIC, NPT, F CON	38SBS
293	61C72	FLOWMETER/SWITCH	38SBS
294	14C38	FTG, HYD, JIC, NPT, M EL	38SBS
295	60K80	FTG, HYD, JIC, CAP	38SBS
296	16G29	PIPE SEALANT	38SBS
297	63C01	SHEAVE	38SBS
298	6.10E+100	BUSHING	38SBS
299	66H39	DECAL, CAUTION, POWER SOURCE	38SBS
300	65Y20	LABEL, WARNING	38SBS
301	65Y21	LABEL, DISCONNECT NOTICE, ENG-	38SBS
302	AB-46-3017	LABEL, READ MANUAL, ENG-ESP	38SBS

303	AE-46-3000	LABEL,HAZARD VOLTAGE,ENG-ESP	38SBS
304	1065983	DECAL,CONE ALRM PNL,ENG-ESP	38SBS
305	29D24	PANEL	38SBS
306	61K76	ENCLOSURE	38SBS
307	61N85	CIRCUIT BREAKER	38SBS
308	63M43	NAMEPLATE, PE & GRD SYMBOL	38SBS
309	61N78	END CLAMP, FOR TERMINAL	38SBS
310	61N71	DIN RAIL	38SBS
311	60C54	END BARRIER	38SBS
312	62A51	NAMEPLATE	38SBS
313	64A04	CONTROL TRANSF	38SBS
314	64A07	CIRCUIT BREAKER	38SBS
315	1066018	DECAL,TEST STICKER	38SBS
316	1065773	NAMEPLATES,XFMR PANEL	38SBS
317	60C55	TERMINAL BLOCK	38SBS
318	65Y21	LABEL, DISCONNECT NOTICE,ENG-	38SBS
319	AB-46-3017	LABEL,READ MANUAL,ENG-ESP	38SBS
320	AE-46-3000	LABEL,HAZARD VOLTAGE,ENG-ESP	38SBS
321	1065948	DECAL,XFMR PANEL CE,ENG-ESP	38SBS
322	1065636	DECAL,XFMR PNL CONFIG,ENG-ESP	38SBS
323	65Z16	NAMEPLATE, SERIAL, GYRA HYD	38SBS
324	AC-46-3002	LABEL,HIGH PRESSURE,ENG-ESP	38SBS
325	AC-46-3016	LABEL,FIRE,ENG-ESP	38SBS
326	AB-46-3027	LABEL,OIL LEVEL,ENG-ESP	38SBS
327	63N87	CONE CRUSHER MOBIL LUBE	38SBS
328	AD-46-3000	LABEL,HAZARD VOLTAGE,ENG-ESP	38SBS
329	C-272-404	DECAL, ARROW MARKER	38SBS
330	66H39	DECAL,CAUTION,POWER SOURCE	38SBS
331	AE-46-3000	LABEL,HAZARD VOLTAGE,ENG-ESP	38SBS
332	AB-46-3017	LABEL,READ MANUAL,ENG-ESP	38SBS
333	65Y21	LABEL, DISCONNECT NOTICE,ENG-	38SBS
334	65Y50	LABEL,WIRE & GND,SMALL,ENG-	38SBS
335	1065705	DECAL,TORQUE,HPU PANEL,ENG-	38SBS
336	1057345	DECAL, SELF-PROTECTED, ENG-SP	38SBS
337	63M43	NAMEPLATE, PE & GRD SYMBOL	38SBS
338	63Z92	LABEL,ELECTRICAL VOLTAGE	38SBS
339	1066413	LABEL,HPU CSS CHART,ENG-ESP	38SBS
340	65Z15	NAMEPLATE, SERIAL, GYRA LUBE	38SBS

341	63N87	CONE CRUSHER MOBIL LUBE	38SBS
342	AC-46-3016	LABEL,FIRE,ENG-ESP	38SBS
343	AC-46-3017	LABEL,READ MANUAL,ENG-ESP	38SBS
344	AB-46-3027	LABEL,OIL LEVEL,ENG-ESP	38SBS
345	AB-46-3028	LABEL,OIL COOLER,ENG-ESP	38SBS
346	AC-46-3002	LABEL,HIGH PRESSURE,ENG-ESP	38SBS
347	C-272-404	DECAL, ARROW MARKER	38SBS
348	63Z92	LABEL,ELECTRICAL VOLTAGE	38SBS
349	AD-46-3000	LABEL,HAZARD VOLTAGE,ENG-ESP	38SBS
350	1050840	UPPER FRAME	38SBS
351	23C64	FTG,LUBE	38SBS
352	23C60	FTG,LUBE	38SBS
353	63N95	GREASE	38SBS
354	1049537	THRUST PIN	38SBS
355	13S64	HHCS	38SBS
356	1050279	THREAD SCRAPER	38SBS
357	62C51	FTG,HYD,JIC,ST CON-L	38SBS
358	12T24	FTG,HYD,JIC,CAP	38SBS
359	23R05	FTG,HYD,JIC,ST	38SBS
360	62D09	QCOUPLING,HYD,ST OR,MALE	38SBS
361	62D11	QCOUPLING,HYD,PLUG/CAP	38SBS
362	1051063	SUPPORT BOWL	38SBS
363	12Z79	SHCS	38SBS
364	1050095	DRIVE RING	38SBS
365	1052756	DRIVE RING SEAL	38SBS
366	10S89	CHW	38SBS
367	65L78	CAM FOLLOWER	38SBS
368	10H53	ANTI-SEIZE&LUB	38SBS
369	1050112	DRIVE RING COVER	38SBS
370	13K38	HHCS	38SBS
371	64F61	GREASE, MOBIL DELVAC XTREME	38SBS
372	10H50	THREADLOCKER,LOCTITE	38SBS
373	63G70	SHEAVE	38SBS
374	15X26	BUSHING	38SBS
375	62Y08	V-BELT	38SBS
376	65N08	AIR-OIL COOLER	38SBS
377	66F07	FTG,HYD,JIC,ST	38SBS
378	61D15	FTG,HYD,JIC,ST CON-SN	38SBS

379	66F08	VALVE,HYD,BALL,SAE	38SBS
380	14T39	FTG,HYD,ST OR,HEX PLUG	38SBS
381	1062209	COOLER GRILLE	38SBS
382	1062354	COOLER SUPPORT,AR	38SBS
383	26C50	HHCS	38SBS
384	64W89	HHCS	38SBS
385	64X54	CHW	38SBS
386	26C56	HHCS	38SBS
387	26D04	CHW	38SBS
388	65P82	ADAPTER	38SBS
389	2.60E+61	SHCS	38SBS
390	23M10	FTG,HYD	38SBS
391	62W48	FTG,HYD	38SBS
392	1071774	HOSE ASSY	38SBS
393	1072180	HOSE ASSY	38SBS
394	1058282	STRUT CHANNEL	38SBS
395	63F23	CLAMP,STRUT CHANNEL	38SBS
396	2.60E+30	HHCS	38SBS
397	TL-272-1503W	SAFETY SPACER	38SBS
398	B-272-2633	GEAR PLATE	38SBS
399	DF-272-2443	SPANNER WRENCH	38SBS
400	1079971	TOOL,HEAD LIFTING	38SBS
401	1095740	WRENCH, STRAINER	38SBS
402	B-272-2632	MANTLE	38SBS
403	64V11	SMITHBOND	38SBS
404	BB-272-1333	BURN RING	38SBS
405	1082534	MANTLE ASSY	38SBS
406	1051617	CON RING ASSY	38SBS
407	1082534	MANTLE ASSY	38SBS
408	1050808	CON RING ASSY	38SBS
409	1082534	MANTLE ASSY	38SBS
410	1051619	CON RING ASSY	38SBS
411	1082534	MANTLE ASSY	38SBS
412	1051620	CON RING ASSY	38SBS
413	1082534	MANTLE ASSY	38SBS
414	1051622	CON RING ASSY	38SBS
415	1082534	MANTLE ASSY	38SBS
416	1051623	CON RING ASSY	38SBS

417	65Z14	NAMEPLATE, SERIAL, GYRA	38SBS
418	11P12	SCREW,DRIVE	38SBS
419	1082864	LABEL,PATENT,ENG-ESP	38SBS
420	AB-46-3021	LABEL,CRUSH-BODY,ENG-ESP	38SBS
421	AB-46-3009	LABEL,DUST & NOISE,ENG-ESP	38SBS
422	AC-46-3017	LABEL,READ MANUAL,ENG-ESP	38SBS
423	AB-46-3011	LABEL,FALL,ENG-ESP	38SBS
424	AC-46-3002	LABEL,HIGH PRESSURE,ENG-ESP	38SBS
425	AB-46-3028	LABEL,OIL COOLER,ENG-ESP	38SBS
426	AB-46-3026	LABEL,GROUND,ENG-ESP	38SBS
427	AB-46-3002	LABEL,HIGH PRESSURE,ENG-ESP	38SBS
428	63N87	EA CONE CRUSHER MOBIL LUBE	38SBS
429	C-272-404	DECAL, ARROW MARKER	38SBS
430	64C97	LABEL,BREAK-IN PERIOD,ENG-ESP	38SBS
431	65Z12	NAMEPLATE, A TELSMITH - SMALL	38SBS
432	AB-46-3018	LABEL,EXPLOSION,ENG-ESP	38SBS
433	AB-46-3022	EA LABEL,INHALATION-	38SBS
434	AB-46-3025	EA LABEL,INHALATION-	38SBS
435	AB-46-3020	EA LABEL,CRUSHING	38SBS
436	AE-46-3019	LABEL,CRUSH-HAND,ENG-ESP	38SBS
437	AB-46-3015	LABEL,HEAVY OBJECT,ENG-ESP	38SBS
438	B-46-2500	NAMEPLATE DYNAMIC ADJUST	38SBS
439	AB-46-3024	LABEL,ENTANGLE-GEAR,ENG-ESP	38SBS
440	AC-46-3008	LABEL,GUARD MISSING,ENG-ESP	38SBS
441	AA-46-3005	LABEL,SLIP,ENG-ESP	38SBS
442	AA-46-3009	LABEL,DUST & NOISE,ENG-ESP	38SBS
443	AB-46-3003	LABEL,ENTANGLEMENT-BELT	38SBS
444	AB-46-3008	LABEL,GUARD MISSING,ENG-ESP	38SBS
445	66C09	MOTOR,ELEC,10HP,MULTI-RATING	38SBS
446	13M81	HHCS	38SBS
447	12K63	CHW	38SBS
448	65F31	ADAPTER,PUMP MOTOR	38SBS
449	65C42	PUMP,HYD,GEAR	38SBS
450	12L83	SHCS	38SBS
451	63N45	COUPLING ASSY	38SBS
452	H2010-	HOSE ASSY	38SBS
453	23J09	FLANGE KIT,SAE	38SBS
454	H2404-	HOSE ASSY	38SBS

455	23M21	FLANGE KIT,SAE	38SBS
456	1097402	PWRUNIT,HYD	38SBS
457	27W53	HYDR. OIL	38SBS
458	62K05	SANDWICH MOUNT	38SBS
459	26L72	HHCS	38SBS
460	2.60E+25	HHCS	38SBS
461	1101626	ENCLOSURE	38SBS
462	26C69	HHCS	38SBS
463	1101593	HORN	38SBS
464	1065621	LABEL,HORN	38SBS
465	65N59	PB W/1N.O.,CLAMP	38SBS
466	1101660	SUBPANEL	38SBS
467	61N71	DIN RAIL	38SBS
468	63G50	CIRCUIT BRKR	38SBS
469	63F69	POWER SUPPLY	38SBS
470	65H42	TIMING RELAY	38SBS
471	65H43	CONTROL RELAY	38SBS
472	65H38	POLE TERMINAL BLOCK GREY	38SBS
473	65V03	TERMINAL BLOCK, 3 POLE, BLUE	38SBS
474	65H37	POLE GROUND TERMINAL BLOCK	38SBS
475	65H39	TERMINAL BLOCK END COVER	38SBS
476	65H41	TERMINAL BLOCK LABELS	38SBS
477	65H40	TERMINAL BLOCK JUMPERS	38SBS
478	62Y49	END LAMP, FOR TERMINAL BLOCK	38SBS
479	63M43	NAMEPLATE, PE & GRD SYMBOL	38SBS
480	61H93	GROUND BAR KIT	38SBS
481	64K66	CORD GRIP	38SBS
482	63P48	CORD GRIP	38SBS
483	63H34	CABLE ASSY	38SBS
484	62V47	CABLE	38SBS
485	1066018	DECAL,TEST STICKER	38SBS
486	62D09	QCOUPLING,HYD	38SBS
487	62D11	QCOUPLING,HYD,PLUG	38SBS
488	23R05	FTG,HYD,JIC,ST CON	38SBS
489	H0623-	HOSE ASSY	38SBS
490	10P71	Strip, Bakelite	44SBS
491	ED-272-2403	Shield, Cor-Ten Stl Frame Arm	44SBS
492	ED-272-2303W	Shield, Cor-Ten Stl Intermediate Gusset	44SBS

493	EC-272-2403	Shield, Cor-Ten Stl Countershaft Box	44SBS
494	EB-272-2403	Shield, Cor-Ten Stl Countershaft Box	44SBS
495	KH-272-2603	Retainer,Pin	44SBS
496	AA4-272-2402	Frame, Main	44SBS
497	DB1-272-2403	Liner Segment, Frame	44SBS
498	DC1-272-2403R	Liner Segment, Frame	44SBS
499	DC1-272-2403L	Liner Segment, Frame	44SBS
500	KA-272-2473	Hopper.Receiving	44SBS
501	1.00E+48	Strip,Felt	44SBS
502	AA-272-2429	Concave Ring (44Fc-Coarse)	44SBS
503	EA-272-2429	Concave Ring (44Fc-Medium)	44SBS
504	DA-272-2429	Concave Ring (44Fc-Fine)	44SBS
505	BA-272-2429	Concave Ring(44S-Extra Coarse)	44SBS
506	A-272-2429	Concave Ring (44S-Coarse)	44SBS
507	CA-272-2429	Concave Ring (44S-Medium)	44SBS
508	12D91	Smithbond,22 Ib.Kit(44Fc-Coarse)	44SBS
509	12D91	Smithbond,22 Ib.Kit(44Fc-Medium)	44SBS
510	12D91	Smithbond,22 Ib.Kit(44Fc-Fine)	44SBS
511	12D91	Smithbond,22 Ib.Kit(44S-Extra-Coarse)	44SBS
512	12D91	Smithbond,22 Ib.Kit(44S-Coarse)	44SBS
513	12D91	Smithbond,22 Ib.Kit(44S-Medium)	44SBS
514	AA1-272-2428	Taper Segment (44Fc)	44SBS
515	A1-272-2328	Taper Segment (44S)	44SBS
516	A-272-2428C	Ring,Filler (44Fc)	44SBS
517	1.00E+48	Strip,Felt,5/8X14.5Ft.	44SBS
518	62C84	Cap Screw	44SBS
519	62J53	Receptacle,6 Female Pins	44SBS
520	BA-272-2402	Upper Frame	44SBS
521	1.00E+48	Strip,Felt	44SBS
522	23C60	Fitting,Grease	44SBS
523	31A41	Ring,Retaining,3.7In.Id	44SBS
524	FC-272-2303	Spacer,1/8 In.Thick	44SBS
525	FA-272-2303W	Bushing,Thrust Pr	44SBS
526	23J64	Cap,Pipe,4 In	44SBS
527	RA-272-2473	Support Bowl	44SBS
528	12Z79	Cap Screw	44SBS
529	MA-272-2473W	Hopper,Inner Receiving	44SBS
530	26F21	Cap Screw	44SBS

531	BF-272-2473	Ring,Drive	44SBS
532	FA-272-2673	Bearing Strip	44SBS
533	62C88	Kit,Adhesive (Used With Item 229)	44SBS
534	62F13	Spatula,Serrated(Used With Item 229)	44SBS
535	62C79	Cam Follower	44SBS
536	KG-272-2603	Keeper	44SBS
537	HA-272-2473	Gear.144 Tooth	44SBS
538	10D41	Cap Screw	44SBS
539	1.00E+48	Strip,Felt,5/8X12.5Ft.	44SBS
540	12T10	Cap Screw	44SBS
541	62J52	Plug	44SBS
542	AB-272-2439	Eccentric	44SBS
543	10S46	Bearing,Thrust	44SBS
544	GA-272-2438	Snap Ring.Outer	44SBS
545	AA-272-2438	Sleeve.Outer	44SBS
546	CA-272-2636	Shim	44SBS
547	CB-272-2636	Shim	44SBS
548	B-272-337	Shim	44SBS
549	D-272-337	Shim	44SBS
550	BA-272-2636	Gear,Main Drive	44SBS
551	12K10	Cap Screw	44SBS
552	13B33	Cap Screw	44SBS
553	TA-272-2438	Sleeve,Inner	44SBS
554	H-272-447	Piston Ring,Outer	44SBS
555	LA2-272-2438A	Ring,Rotary Seal	44SBS
556	13J41	Cap Screw	44SBS
557	13N54	Cap Screw	44SBS
558	10P71	Strip,Bakelite	44SBS
559	1.20E+53	Babbitt	44SBS
560	1.20E+53	Babbitt	44SBS
561	2.60E+28	Cap Screw	44SBS
562	1.00E+88	Cap Screw	44SBS
563	VB-272-1333	Plate, Feed	44SBS
564	BB-272-1333	Ring, Burning	44SBS
565	A-272-2432	Mantle	44SBS
566	AA1-272-2433	Taper Head	44SBS
567	G-272-447	Piston Ring, Upper	44SBS
568	AA2-272-2434	Shaft, Main	44SBS

569	12D91	Smithbond, 22 Lb. Kit	44SBS
570	10S14	Cap Screw	44SBS
571	BA272-2443	Countershaft	44SBS
572	1.00E+22	Cap Screw	44SBS
573	10S10	Seal	44SBS
574	K-272-339	Gasket,Oil Guard	44SBS
575	C-272-465	Oil Guard	44SBS
576	2.60E+29	Cap Screw	44SBS
577	12W61	Bushing Assembly	44SBS
578	NSS	Bushing,3-3/8 In.	44SBS
579	NSS	Cap Screw	44SBS
580	62F23	Sheave,23.6 In.Od“8-5V”Groove	44SBS
581	30H22	Bearing,Roller	44SBS
582	30H21	Cup.Bearing	44SBS
583	12B38	Cap Screw	44SBS
584	AA-272-2443	Box,Countershaft	44SBS
585	CA-272-2443	Shim	44SBS
586	CB-272-2443	Shim	44SBS
587	CC-272-2443	Shim	44SBS
588	CD-272-2443	Shim	44SBS
589	B1-18-1167	Gear,Bevel Pinion	44SBS
590	H-272-2467	Plate,Back	44SBS
591	2.60E+29	Cap Screw	44SBS
592	L-272-2467	Bracket	44SBS
593	A-272-2467W	Drive Guard	44SBS
594	15S88	Cap Screw	44SBS
595	K-272-2467	Bracket	44SBS
596	G-272-2467	Plate.Back	44SBS
597	12W61	Bushing Assembly	44SBS
598	NSS	Cap Screw	44SBS
599	NSS	Bushing,Tapered,Sheave Bore	44SBS
600	NSS	Bushing,Tapered,Sheave Bore	44SBS
601	62J10	Sheave,Motor	44SBS
602	62J09	Sheave,Motor	44SBS
603	62J08	Sheave,Motor	44SBS
604	62J07	Sheave,Motor	44SBS
605	60G18	Sheave,Motor	44SBS
606	60G19	Sheave,Motor	44SBS

607	2.60E+30	Cap Screw	44SBS
608	M-17-575	Cap Screw	44SBS
609	12K44	Cap Screw	44SBS
610	C-272-395	Plug	44SBS
611	28S89	Coupling, Cylinder	44SBS
612	60J64	Cylinder, Hydraulic Relief	44SBS
613	28X15	Cap Screw	44SBS
614	28S90	Bracket, Swivel Pivot Mounting	44SBS
615	28S52	O-Ring	44SBS
616	60K03	Plug	44SBS
617	CB-272-1308	Manifold	44SBS
618	28S94	Flange, Split Half, 3/4 In.	44SBS
619	GP-273-618W	Hose Assembly	44SBS
620	62F56	Plate,Manifold Tapping	44SBS
621	6.00E+11	Valve, Relief	44SBS
622	12K10	Cap Screw	44SBS
623	GL-273-618W	Hose Assembly	44SBS
624	CC-272-1308	Tee, 1-1/16 In. - 12	44SBS
625	28S96	Elbow, Adapter	44SBS
626	28S87C1	Seal Kit, Cylinder (For Item 707)	44SBS
627	11P62	Cap Screw	44SBS
628	23R05	Connector,6-6	44SBS
629	H0620-	Hose Assembly	44SBS
630	62C62	Cylinder,Hydraulic Locking	44SBS
631	23P61	Elbow,6-6	44SBS
632	14T39	Plug	44SBS
633	62C62C1	Seal Kit,Cylinder (For Item 805)	44SBS
634	RA-272-2573W	Cover, Gearbox	44SBS
635	20N58	Cap Screw	44SBS
636	6.20E+30	Locking Assembly, Ring feeder	44SBS
637	HA-272-2677	Plate,Bottom,Anti-Spin	44SBS
638	BK-17-575	Cap Screw	44SBS
639	23A45	Cap, 1/4 In. Tube	44SBS
640	6.20E+06	Elbow, Male, 4-2	44SBS
641	15S88	Cap Screw	44SBS
642	26P65	Air Breather	44SBS
643	6.20E+08	Coupling, 4-6	44SBS
644	H-17-179	Nipple	44SBS

645	23L92	Elbow, 3/8 In. 90 Degree Pipe	44SBS
646	N-17-179	Nipple	44SBS
647	6.20E+07	Adapter, Male, 6-6	44SBS
648	62C63	Motor, Hydraulic	44SBS
649	13J41	Cap Screw	44SBS
650	26D36	Cap Screw	44SBS
651	6.20E+24	Gearbox, Planetary	44SBS
652	2.60E+74	Cap Screw	44SBS
653	CA-272-2673	Bracket, Gearbox	44SBS
654	PA-272-2573	Plate, Adapter	44SBS
655	DA-272-2677	Drive Tang	44SBS
656	26B93	Cap Screw	44SBS
657	EA-272-2677	Slider Plate	44SBS
658	FA-272-2677	Adapter Plate	44SBS
659	62D26	Gearbox	44SBS
660	HA1-272-2438W	Plate,Bottom	44SBS
661	16V75	Cap Screw	44SBS
662	61T18	O-Ring	44SBS
663	AA-272-2573	Pinion Gear, 17 Tooth	44SBS
664	GA-272-2677W	Cover	44SBS
665	23V93	Cap Screw	44SBS
666	62D43	Cap Screw	44SBS
667	62D42	Cap Screw	44SBS
668	26K68	Cap Screw	44SBS
669	62D41	Cap Screw	44SBS
670	62D83	Reducer,Metric	44SBS
671	23W38	Elbow,Male,6-2	44SBS
672	62D39	Hydraulic Tube Assembly,3/8	44SBS
673	10D98	Elbow,Bh Union,6-6	44SBS
674	TH1-272-1503	Pin	44SBS
675	23D16	Plug	44SBS
676	DV-17-26	Pin	44SBS
677	23P99	Elbow,8-8	44SBS
678	23N48	Elbow,10-10	44SBS
679	62B80	Valve And Block Assembly	44SBS
680	62F54	Valve,Check	44SBS
681	62B79	Valve,Kick Down Relief	44SBS
682	62A04	Valve.Reducing	44SBS

002	02A04	Valve Block	44SBS
683	60Z59	Coupling,Pressure Test	44SBS
684	23H53	Connector,10-10	44SBS
685	13J47	Cap Screw	44SBS
686	H1022-	Hose Assembly	44SBS
687	23Y18	Cap Screw	44SBS
688	62D51	Plate,Cover (5/8 In.Hose)	44SBS
689	62D50	Clamp Set (5/8 In.Hose)	44SBS
690	H1022-	Hose Assembly	44SBS
691	H0410-	Hose Assembly	44SBS
692	62D33	Tee,6-6	44SBS
693	62H69	Reducer,8-6	44SBS
694	62D38	Hydraulic Tube Assembly	44SBS
695	23P61	Elbow,6-6	44SBS
696	62D40	Hydraulic Tube Assembly	44SBS
697	62D34	Reducer,12-10	44SBS
698	15X33	Elbow,16-12	44SBS
699	12W73	Elbow,Bh Union,10-10	44SBS
700	10D98	Elbow,Bh Union,6-6	44SBS
701	20X06	Cap Screw	44SBS
702	62D49	Plate,Weld (5/8 In.Hose)	44SBS
703	23H54	Connector,8-8	44SBS
704	BE-272-2602	Bracket,Hose Dlamp	44SBS
705	62A01	Motor,Hydraulic,Anti-Spin	44SBS
706	62F33	Reservoir,Hydraulic 30 Gallon	44SBS
707	62F29	Motor,10 Hp,1800 Rpm	44SBS
708	62F30	Pump,15 Gpm	44SBS
709	62F31	Strainer,Suction	44SBS
710	62F32C1	Flement.Fitei	44SBS
711	62F34	Control Valve,Directional,2Way,2-	44SBS
712	62F34C2	Coil,Solenoid (See Figure 17 For	44SBS
713	62F35	Relief Valve,Pressure (Includes Item	44SBS
714	62F35C1	Cartridge	44SBS
715	62F53	Cooler,Airloil (Includes Item 1208A)	44SBS
716	62F36C1	Flement.Fitei	44SBS
		Manifold	
717	62F38	Cartridge,Relief Valve	44SBS
718	62F39	Control Valve	44SBS

719	62F39C1	Cartridge	44SBS
720	62F40	Control Valve	44SBS
721	60Y14	Coil,Solenoid (See Figure 17 For	44SBS
722	62F55	Control Valve	44SBS
723	62F34C2	Coil,Solenoid (See Figure 17 For	44SBS
724	62F39	Control Valve	44SBS
725	62F39C1	Cartridge	44SBS
726	99X37	Locator Pin	44SBS
727	62F43	Check Valve	44SBS
728	62F43C1	Cartridge	44SBS
729	62F50	Shuttle Valve,W/Body	44SBS
730	62F50C1	Cartridge	44SBS
731	62F44	Check Valve	44SBS
732	62F44C1	Cartridge	44SBS
733	62F45	Valve,Pressure Reducing (Includes Item	44SBS
734	62F45C1	Cartridge	44SBS
735	62F46	Control Valve,Flow (Lf	44SBS
736	62F46C1	Cartridge	44SBS
737	60Y27	Control Valve,Directional 4-Way,2-	44SBS
738	60Y30	Snubber,Gauge	44SBS
739	62F48	Valve.Check	44SBS
740	60Z55	Coupling,Test Port	44SBS
741	A-46-1928	Decal,Warning Marker	44SBS
742	A-46-2103	Decal,Warning,Hydraulic Lines	44SBS
743	62J79	Disconnect,Handle And Shaft	44SBS
744	62J76	Connector,Closed Coupling	44SBS
745	62J75	Contactor,3 Pole	44SBS
746	62J77	Protection,Circuit Breaker/Ovl	44SBS
747	62H99	Contact Block,Aux.,Top Mount	44SBS
748	62F74	Push Button,Black	44SBS
749	62F72	Push Button,Red	44SBS
750	62F73	Push Button,Green	44SBS
751	62F69	Switch,Selector,3 Position	44SBS
752	62F70	Contact Block,1 N.O.	44SBS
753	62F71	Contact Block,1 N.C.	44SBS
754	62J38	Contact Block,2 N.O.	44SBS
755	62J37	Holder,Contact Block	44SBS
756	62F68	Circuit Breaker,1	44SBS

757	62F67	Circuit Breaker,2	44SBS
758	62J34	Terminal Block,10	44SBS
759	62J35	Anchor,End	44SBS
760	62J36	Labels,T-Block Strip	44SBS
761	62F66	Transformer	44SBS
762	62F78	Enclosure,16X14X6	44SBS
763	62F62	Sub Panel,16X14	44SBS
764	62J72	Contact Block,Aux.,Side Mount	44SBS
765	62K04	Counter Control	44SBS
766	62J44	Sensor,System,Zero Speed (Dual	44SBS
767	62F75	Switch,Main,2 Position,Black	44SBS
768	62J38	Contact Block,2 N.O.	44SBS
769	62F71	Contact Block,1 N.C.	44SBS
770	62J37	Holder,Contact Block	44SBS
771	62J54	Plate,Legend,"Manual-Auto"	44SBS
772	EE-272-2373	Mount,Sensor	44SBS
773	HB-273-618W	Hose Assembly	44SBS
774	H0820-	Hose Assembly	44SBS
775	62M55	Circuit Breaker,1/2 Amp	44SBS
776	20K33	Clamp,3/8 In.Closed	44SBS
777	29C41	Screw	44SBS
778	61P38	Cable Tie	44SBS
779	62D80	Union,Straight Thread	44SBS
780	62D18	Plug	44SBS
781	62D16	Quick Coupling,Female,3/4 In.	44SBS
782	62D17	Quick Coupling,Male,3/4 In.	44SBS
783	62D19	Dust Cap,3/4 In.	44SBS
784	23F98	Connector,12-12	44SBS
785	H1222-	Hose Assembly	44SBS
786	H1222-	Hose Assembly	44SBS
787	H1222-	Hose Assembly	44SBS
788	H1222-	Hose Assembly	44SBS
789	60S74	Plug	44SBS
790	10G09	Bushing,Reducer	44SBS
791	62A27	O-Ring	44SBS
792	62D11	Dust Cap,3/8 In.	44SBS
793	23W72	Connector,Straight Thread	44SBS
794	62D09	Quick Coupling,Male,3/8 In.	44SBS

795	62D08	Quick Coupling,Female,3/8 In.	44SBS
796	62D10	Plug	44SBS
797	23R05	Connector,6-6	44SBS
798	H0620-	Hose Assembly	44SBS
799	H0620-	Hose Assembly	44SBS
800	H0620-	Hose Assembly	44SBS
801	H0620-	Hose Assembly	44SBS
802	14C15	Bushing,Reducer	44SBS
803	60S74	Plug	44SBS
804	62C19	Elbow,Straight Thread	44SBS
805	62A27	O-Ring	44SBS
806	23W72	Connector,Straight Thread	44SBS
807	62D10	Plug	44SBS
808	62D08	Quick Coupling,Female,3/8 In.	44SBS
809	62D09	Quick Coupling,Male,3/8 In.	44SBS
810	62D11	Dust Cap,3/8 In.	44SBS
811	23R05	Connector,6-6	44SBS
812	H0610-	Hose Assembly	44SBS
813	H0610-	Hose Assembly	44SBS
814	H0610-	Hose Assembly	44SBS
815	H0610-	Hose Assembly	44SBS
816	10G09	Bushing,Reducer	44SBS
817	62D15	Dust Cap,1/2 In.	44SBS
818	62D79	Union,Straight Thread	44SBS
819	62D14	Plug	44SBS
820	62D13	Quick Coupling,Male,1/2 In.	44SBS
821	62D12	Quick Coupling,Female,1/2 In.	44SBS
822	23H54	Connector,8-8	44SBS
823	H0820-	Hose Assembly	44SBS
824	H0820-	Hose Assembly	44SBS
825	H0820-	Hose Assembly	44SBS
826	H0820-	Hose Assembly	44SBS
827	62F48	Valve,Check	44SBS
828	928981	Bypass Valve	44SBS
829	920928	Nameplate	44SBS
830	903393	Screw	44SBS
831	62F32C2	O-Ring.Bowl	44SBS
832	926103	Bowl	44SBS

833	930507	Bypass Valve	44SBS
834	62F36C1	Element.Fter	44SBS
835	62F36C2	O-Ring,Bowl	44SBS
836	934251	Bowl	44SBS
837	921088	Plug	44SBS
838	62F31	Strainer,Suction	44SBS
839	HSG-55	Gauge,Oil Level	44SBS
840	62F33C1	Gasket	44SBS
841	HC-EC-140	Cover,Access	44SBS
842	HC-EC-14	Cover,Access	44SBS
843	4054121	Plug	44SBS
844	HC-120	Filler Cap Strainer	44SBS
845	13010647	Screw	44SBS
846	1300651	Nameplate	44SBS
847	1300649	Cover	44SBS
848	1300828	Gasket.Cover	44SBS
849	1300648	Junction Box	44SBS
850	697161	Boot	44SBS
851	697647	O-Ring	44SBS
852	60Y14	Col	44SBS
853	1301704	Gasket,Coil	44SBS
854	697715	Actuator	44SBS
855	A-46-1993	Decal,Caution Pinch Point	44SBS
856	62F34C2	Coil	44SBS
857	20N85	Pipe Cap,6 In.	44SBS
858	DA2-272-1547W	Cover,Oil Tank	44SBS
859	20W25	Gasket,18 In.	44SBS
860	20W25	Gasket,72 In.	44SBS
861	12T24	Cap,3/8 In.Tube	44SBS
862	23D20	Plug	44SBS
863	EA2-272-1547W	Oil Tank,110 Gallon Cap	44SBS
864	28S56	Gauge,Oil Level	44SBS
865	23D22	Plug	44SBS
866	BB-46-2155	Label,Check Oil Level	44SBS
867	26F21	Screw	44SBS
868	26C53	Screw	44SBS
869	27W64	Screen Cloth,Brass,10 Mesh,1 Ft-O	44SBS
870	A-272-533	Label,Air-Oil Connection	44SBS

871	B-272-404	Plate,Oil Tank Serial Number	44SBS
872	11P12	Screw	44SBS
873	D-273-696	Label,Fill Oil Tank	44SBS
874	BD-46-2156	Decal,Oil Cooler Temperature Setting	44SBS
875	AA-46-2156	Decal.Oil Cooler Waning	44SBS
876	C-17-123	Pipe Nipple,3/4 X3 In.	44SBS
877	23B98	Elbow,3/4 In,90 Degree Pipe	44SBS
878	27S97	Breather,3/4 In.,Npt Oil Bath	44SBS
879	29C01	Heater,Oil Immersion	44SBS
880	29A61	Drawcatch	44SBS
881	23C51	Elbow,Pipe Street,2 In,90 Degree	44SBS
882	BH1-272-1223W	Hose Assembly	44SBS
883	60B93	Connector,Swivel,2In.Fxm	44SBS
884	HH-17-125	Nipple,1-1/4X7 In.,Toe	44SBS
885	C-272-404	Dfcal.Arow Marker	44SBS
886	23A37	Bushing,Reducer,2 In.To 1-1/4 In.Pipe	44SBS
887	23C49	Elbow,Pipe,1-1/4 In.,90Degree	44SBS
888	23J54	Connector,Swivel,1-1/4 In.Swfx1-1/4	44SBS
889	60J62	Insert,1-1/4 In.Hose	44SBS
890	60L03	Hose Assembly	44SBS
891	23C38	Elbow,Pipe Street,1-1/4 In.,45 Degree	44SBS
892	16Y01	Screw	44SBS
893	60L03	Hose Assembly	44SBS
894	23B46	Coupling,Pipe Reducer,1-1/2 In.To 1-1/4	44SBS
895	6.10E+18	Cooler,Air-To-Ail,Direct Drive	44SBS
896	60L03	Hose Assembly	44SBS
897	2.60E+30	Cap Screw	44SBS
898	23F36	Tee,1-1/4In.Pipe	44SBS
899	A-17-125	Nipple,Close,1-1/4 In.	44SBS
900	61G42	Valve,Relief	44SBS
901	60L03	Hose Assembly	44SBS
902	23M17	Elbow,2In,F Xf,90 Degree	44SBS
903	B-17-127	Nipple,2X2-1/2 In.	44SBS
904	H-17-125	Nipple,1-1/4X5-1/2 In.	44SBS
905	23C02	Elbow/,Pipe,1-1/4 In.,90 Degree	44SBS
906	23C49	Elbow,Pipe Street,1-1/4 In.,90 Degree	44SBS
907	23F36	Tee,Pipe,1-1/4 In.	44SBS
908	61D91	Gauge,Oil Pressure,114 In.,Npt,0-200 Psi	44SBS

909	11A13	Bushing,Reducer,1-1/4 In.To 1/4 In.Pipe	44SBS
910	27W63	Multi-Clamp Assembly,1-1/2 In.	44SBS
911	1.00E+11	Cap Screw	44SBS
912	E-17-125	Pipe Nipple,1-1/4X4 In.	44SBS
913	61C72	Meter,Flow	44SBS
914	61C75	Meter,Flow	44SBS
915	27S46	Gauge,Oil Temperature	44SBS
916	23A28	Bushing,Reducer	44SBS
917	A-17-125	Nipple,Close 1-1/4 In.	44SBS
918	C-17-43	Nipple,1/4X7/8 In.	44SBS
919	61G78	Switch,Pressure	44SBS
920	61J96	Oil Pump Assembly	44SBS
921	61K01	Oil Pump Assembly	44SBS
922	27S91	Oil Pump	44SBS
923	61J93	Coupling (Gear Reducer To Pump)	44SBS
924	27S93	Gear Reducer	44SBS
925	27S92	Gear Reducer	44SBS
926	61J92	Coupling (Motor To Gear Reducer)	44SBS
927	11X91	Motor	44SBS
928	60S86	Motor	44SBS
929	26A04	Screw	44SBS
930	15R41C3	Cap.Od Fiter	44SBS
931	15R41C9	Plug	44SBS
932	15R41C2	O-Ring,Filler Cap	44SBS
933	15R41C8	Spring	44SBS
		Plate	
934	15H20	Flement.Fiiter	44SBS
935	15R41C6	Valve And Linkage,(Includes Item 2112)	44SBS
936	15R41C4	Valve,Bypass	44SBS
937	15R41C5	Pointer	44SBS
		Block Assembly	
938	23C38	Elbow,Pipe Street,1-1/4 In.,45 Degree	44SBS
939	23J54	Connector,Swivel,1-1/4 In.Swfx1-1/4	44SBS
940	60J62	Insert,1-1/4 In.Hose	44SBS
941	60L03	Hose	44SBS
942	23A37	Bushing,Reducer,2 In.To 1-1/4 In.Pipe	44SBS
943	27W60	Oil Cooler,Water-To-Oil	44SBS
944	10V14	Screw	44SBS

945	23C49	Elbow,Pipe Street,1-1/4 In.-90 Degree	44SBS
946	60L03	Hose	44SBS
947	23B46	Coupling,Pipe Reducer,1-1/2X 1-1/4 In.	44SBS
948	23C49	Elbow,Pipe Street,1-1/4 In.,90 Degree	44SBS
949	23J54	Connector,1-1/4 In.Swfx 1-1/4 In.M	44SBS
950	60J62	Coupling,1-1/4 In.,Id Hose	44SBS
951	60J63	Hose Assembly	44SBS
952	23A37	Bushing,Reducer,2 To 1-1/4 In.Pipe	44SBS
953	27W60	Oil Cooler,Water-To-Oil	44SBS
954	10V14	Cap Screw	44SBS
955	23C38	Elbow,Pipe Street,1-1/4 In.45 Degree	44SBS
956	60J63	Hose Assembly	44SBS
957	11G77	Sight Gauge,Oil Flow,3/8 In.	44SBS
958	23L53	Elbow,Male,6-6	44SBS
959	H0610-	Hose Assembly	44SBS
960	12W74	Tee.Union Rur	44SBS
961	H0610-	Hose Assembly	44SBS
962	62D90	Clamp Set,5/8 In.Hose	44SBS
963	62D91	Plate,5/8 In.Hose Cover	44SBS
964	13M81	Cap Screw	44SBS
965	1.00E+11	Cap Screw	44SBS
966	60N51	Grommet	44SBS
967	BH-272-2303W	Bracket,Support	44SBS
968	27W63	Multi-Clamp Assembly	44SBS
969	A-17-557	Nipple	44SBS
970	10Z99	Bushing,Reducing	44SBS
971	23F36	Tee,Pipe	44SBS
972	BG-272-2603	Support,Bulkhead	44SBS
973	23J54	Connector,Swivel	44SBS
974	60L03	Hose	44SBS
975	60J62	Coupling	44SBS
976	20X16	Cap Screw	44SBS
977	62D48	Plate,Cover	44SBS
978	62D47	Clamp	44SBS
979	H0410-	Hose Assembly	44SBS
980	15C82	Cap Screw	44SBS
981	BF-272-2603	Bracket,Anti-Spin Valve Mount	44SBS
982	62D89	Plate	44SBS

983	62D46	Plate	44SBS
984	BG-17-129	Nipple	44SBS
985	16V37	Elbow,3 In.Fxf 90 Degree	44SBS
986	DZ-17-129	Nipple,Toe,3 In.X 19 In.	44SBS
987	1.30E+81	Joint,3 In.Flexmaster	44SBS
988	CZ-17-129	Nipple,Toe,3 In.X9 In.	44SBS
989	13F68	Tee.3 In	44SBS
990	28V52	Bushing	44SBS
991	23D13	Plug	44SBS
992	60G89	Switch	44SBS
993	CV-17-129	Nipple,Close,3X 5-3/4 In.	44SBS
994	60B49	Gauge,Temperature,0-250 Degrees F	44SBS
995	DA-272-1253	Bushing,3 To 1/2 In.Eccentric Reducer	44SBS
996	23D24	Plug	44SBS
997	60G89	Switch,Alarm Temperature (All Models)	44SBS
998	Y-17-561	Nipple,Close,3X4-3/4 In.	44SBS
999	TA-260-652A	Alarm Assembly,Shutdown (With 380V	44SBS
1000	SA-260-652A	Alarm Assembly,Shutdown (With 480V	44SBS
1001	0A260-652	Plate,Support	44SBS
1002	AA3-272-1652A	Panel,Shutdown Alarm	44SBS
1003	61L27	Enclosure	44SBS
1004	26X80	Swch.Doo	44SBS
1005	27J26	Screw	44SBS
1006	29D22	Panel	44SBS
1007	61G70	Relay,Time Delay (Tr1)	44SBS
1008	27J84	Screw	44SBS
1009	60C56	Channel,Mounting	44SBS
1010	61N78	End Clamp	44SBS
1011	60C54	End Barrier	44SBS
1012	60C55	Block,Terminal	44SBS
1013	26X85	Push-Button	44SBS
1014	CB1-46-2155	Label,Wiring Schematic	44SBS
1015	A-46-2156	Label,Danger,Electrocution Hazard	44SBS
1016	61G59	Relay,Control (Cr-1)	44SBS
1017	PA-260-652A	Transformer Assembly	44SBS
1018	NA-260-652A	Transformer Assembly	44SBS
1019	61K76	Enclosure	44SBS
1020	61T77	Transformer	44SBS

1021	16G55	Transformer	44SBS
1022	61H99	Circuit Breaker,2 Pole,4A	44SBS
1023	12L87	Adhesive,1/2 Pint (Use With Items 1803	44SBS
1024	F-46-1993	Decal,Caution Guards	44SBS
1025	A10-46-2007	Plate,Gyrasphere Patent	44SBS
1026	FA-46-1901	Plate,Telsmith Logo,Trademark	44SBS
1027	11P12	Screw	44SBS
1028	B1-46-2006	Plate,Serial Number	44SBS
1029	D-272-404	Plate,Smithbond	44SBS
1030	A-46-1928	Decal,Warming Avoid Personal Injury	44SBS
1031	B2-46-1685	Tag,Gyrasphere Instruction	44SBS
1032	A-46-2155	Tag,Gyrasphere Smithbond	44SBS
1033	AA-46-2500	Plate,Telsmith Logo (Small)	44SBS
1034	B-46-2500	Plate,Dynamic Adjust	44SBS
1035	C-272-404	Marker.Aton	44SBS
1036	A-46-2103	Decal,Warning Hydraulic Lines	44SBS
1037	C-46-2103	Decal,Warring Ground	44SBS
1038	BA1-46-2155	Decal,Telsmith Quality	44SBS
1039	B-46-2103	Decal,Caution,Support Bottom Plate And	44SBS
1040	BA-46-2156	Decal.Warning	44SBS
1041	A-46-2500	Plate,Silver Bullet Series	44SBS
1042	29D17	Primer,Red Oxide (One Gallon)	44SBS
1043	11A62	Paint,Telsmith Gray (One Gallon)	44SBS
1044	61K21	Paint,Inary (One Gallon)	44SBS
1045	TL-272-1503W	Safety Spacer	44SBS
1046	B-272-2633	U lifting Plate,Main Drive Gear	44SBS
1047	KA-272-2373	HOPPER,Receiving	52SBS
1048	1.00E+48	STRIP,Felt	52SBS
1049	EA-272-2329	CONCAVE RING (52FC-Coarse)	52SBS
1050	DA-272-2329	CONCAVE RING(52FC-Medium)	52SBS
1051	CA1-272-2329	CONCAVE RING (52FC-Fine)	52SBS
1052	AA1-272-2329	CONCAVE RING (52S-Extra Coarse)	52SBS
1053	BA-272-2329	CONCAVE RING (52S-Coarse)	52SBS
1054	A1-272-2329	CONCAVE RING (52S-Medium)	52SBS
1055	12D91	SMITHBOND,22 Ib.Kit (52FC)	52SBS
1056	12D91	SMITHBOND,22 Ib.Kit (52S)	52SBS
1057	A1-272-2328	TAPER SEGMENT	52SBS
1058	AB-272-2328	RING,Filler (52FC-Coarse)	52SBS

1059	AB-272-2328	RING,Filler (52FC-Medium)	52SBS
1060	AB-272-2328	RING,Filler (52FC-Fine)	52SBS
1061	1.00E+48	STRIP,Felt	52SBS
1062	62C84	CAPSCREW,Socket hd.	52SBS
1063	KH-272-2603	RETAINER,Pin	52SBS
1064	23C60	FITTING,Grease	52SBS
1065	1.00E+48	STRIP,Felt	52SBS
1066	31A41	RING,Retaining	52SBS
1067	FA-272-2303W	BUSHING,Thrust pin	52SBS
1068	GA-272-2373	UPPER FRAME	52SBS
1069	TA-272-2373	SUPPORT BOWL	52SBS
1070	EA-272-2373	DRIVE KEY	52SBS
1071	12279	CAPSCREW,Socket hd	52SBS
1072	NA-272-2373W	HOPPER,Inner Receiving (52FC-Coarse)	52SBS
1073	NA-272-2373W	HOPPER,Inner Receiving (52FC-	52SBS
1074	NA-272-2373W	HOPPER,Inner Receiving (52FC-Fine)	52SBS
1075	MA-272-2373W	HOPPER,Inner Receiving (52S-Extra	52SBS
1076	MA-272-2373W	HOPPER,Inner Receiving (52S-Coarse)	52SBS
1077	MA-272-2373W	HOPPER,Inner Recerving (52S -	52SBS
1078	26F21	CAPSCREW,Hex hd	52SBS
1079	BF-272-2373	RING,Drive	52SBS
1080	FA-272-2673	BEARING STRIP	52SBS
1081	62C88	KIT,Adhesive	52SBS
1082	62F13	SPATULA,Serrated	52SBS
1083	62C79	CAM FOLLOWER	52SBS
1084	HA-272-2373	GEAR,160 tooth	52SBS
1085	KG-272-2603	KEEPER	52SBS
1086	10D41	CAPSCREW,Hex hd.	52SBS
1087	1.00E+48	STRIP,Felt	52SBS
1088	12T10	CAPSCREW,Hex hd.	52SBS
1089	A-272-332	KEY	52SBS
1090	DV-17-26	PIN	52SBS
1091	AB-272-2339	ECCENTRIC	52SBS
1092	1.00E+19	BEARING,Thrust	52SBS
1093	CA-272-2338	SNAP RING,Outer	52SBS
1094	AA-272-2338	SLEEVE,Outer	52SBS
1095	T-272-337	SHIM	52SBS
1096	V-272-337	SHIM	52SBS

1097	U-272-337	SHIM	52SBS
1098	W-272-337	SHIM	52SBS
1099	F-272-332	KEY	52SBS
1100	A3-272-2344	GEAR,Main drive	52SBS
1101	12K06	CAPSCREW	52SBS
1102	1.00E+24	CAPSCREW	52SBS
1103	HA-272-2338	SLEEVE,Inner	52SBS
1104	CC-272-1538	PISTON RING,Outer	52SBS
1105	GA1-272-2338A	RING,Rotary seal	52SBS
1106	1.00E+17	CAPSCREW,Socket hd	52SBS
1107	10P7	STRIP,Bakelite	52SBS
1108	1.20E+53	BABBIT,5 lbs(Outer Sleeve)	52SBS
1109	1.20E+53	BABBIT,5 lbs(Inner Sleeve)	52SBS
1110	16V76	CAPSCREW,Hex hd	52SBS
1111	16V76	CAPSCREW,Hex hd	52SBS
1112	YB-272-1533	PLATE,Feed	52SBS
1113	CB-272-1533	RING,Burning	52SBS
1114	A-272-2332	MANTLE	52SBS
1115	12D91	SMITHBOND,22 lb.kit	52SBS
1116	AA2-272-2333	TAPER HEAD	52SBS
1117	E-272-333	PISTON RING,Inner	52SBS
1118	AA3-272-2334	SHAFT,Main	52SBS
1119	B-272-338	KEY,Angle	52SBS
1120	10S13	CAPSCREW,Socket hd	52SBS
1121	BA-272-2343	COUNTERSHAFT	52SBS
1122	2.60E+61	CAPSCREW,Socket hd	52SBS
1123	13C75	SEAL,Oil	52SBS
1124	J-272-339	GASKET,Oil Guard	52SBS
1125	C-272-316	OIL GUARD	52SBS
1126	26C48	CAPSCREW,Hex hd	52SBS
1127	60A26	BUSHING ASSEMBLY	52SBS
1128	NSS	BUSHING	52SBS
1129	NSS	CAPSCREW	52SBS
1130	62F1g	SHEAVE,35.5 in.OD“6-8V”groove	52SBS
1131	FX-273-616	KEY	52SBS
1132	1.00E+20	BEARING,Roller	52SBS
1133	1.00E+21	CUP,Bearing	52SBS
1134	10Z95	CAPSCREW,Hex hd	52SBS

1135	AA-272-2343	BOX,Countershaft	52SBS
1136	CA-272-2343	SHIM	52SBS
1137	CB-272-2343	SHIM	52SBS
1138	CC-272-2343	SHIM	52SBS
1139	CD-272-2343	SHIM	52SBS
1140	C-18-1136	GEAR,Bevel Pinion	52SBS
1141	B-17-535	TAPER KEY	52SBS
1142	2.60E+29	CAPSCREW,Hex hd	52SBS
1143	H-272-2352	BACK PLATE,Guard	52SBS
1144	K-272-2352	RRACKET,Drive guarc	52SBS
1145	15S88	CAPSCREW,Hex hd.	52SBS
1146	J-272-2352	BRACKET,Drive guard	52SBS
1147	A-272-2352W	DRIVE GUARD	52SBS
1148	G-272-2352	BACK PLATE,Guard	52SBS
1149	NSS	CAPSCREW,Hex hd	52SBS
1150	NSS	BUSHING,Tapered,Sheave Bore	52SBS
1151	NSS	SETSCREW	52SBS
1152	15J02	SHEAVE,Motor	52SBS
1153	62J11	SHEAVE,Motor	52SBS
1154	62B71	MOTOR,Drive,300 HP,1200 RPM	52SBS
1155	62B72	MOTOR,Drive,250 HP,1200 RPM	52SBS
1156	60G18	SLIDE RAILS,Motor	52SBS
1157	60G17	SLIDE RAILS,Motor	52SBS
1158	60G19	SLIDE RAILS,Motor	52SBS
1159	30B23	V-BELTS	52SBS
1160	L-17-575	CAPSCREW,Hex hd	52SBS
1161	12K44	CAPSCREW Hex hd	52SBS
1162	27L09	SETSCREW,Socket hd	52SBS
1163	C-272-395	PLUG,Brass	52SBS
1164	28S40	COUPLING,Cylinder	52SBS
1165	6.00E+08	CYLINDER,Hydraulic relief	52SBS
1166	28X13	CAPSCREW,Hex hd.	52SBS
1167	28S41	BRACKET,Swivel pivot mounting	52SBS
1168	28S52	O-RING	52SBS
1169	60K03	PLUG	52SBS
1170	DB-272-1308	MANIFOLD	52SBS
1171	28S51	FLANGE,Split half,1 in.	52SBS
1172	28X14	CAPSCREW,Hex hd	52SBS

1173	6.00E+11	VALVE,Relief	52SBS
1174	GG-273-618W	HOSE ASSEMBLY	52SBS
1175	12K10	CAPSCREW,Hex Hd	52SBS
1176	GH-273-618W	HOSE ASSEMBLY	52SBS
1177	DC-272-1308	TEE,1-5/16 in.-12	52SBS
1178	28S53	ELBOW,Adapter	52SBS
1179	60E07C1	SEAL KIT,Cylinder (For item 707	52SBS
1180	11P62	CAPSCREW,Socket hd	52SBS
1181	23R05	CONNECTOR,6-6	52SBS
1182	H0620-	HOSE ASSEMBLY	52SBS
1183	62C62	CYLINDER,Hydraulic locking	52SBS
1184	15J71	ELBOW,Male 6-6,45 degree	52SBS
1185	H0620-	HOSE ASSEMBLY	52SBS
1186	14T39	PLUG	52SBS
1187	23P61	ELBOW	52SBS
1188	H0620-	HOSE ASSEMBLY	52SBS
1189	62C62C1	SEAL KIT,Cylinder	52SBS
1190	KA-272-2673W	COVER,Gearbox	52SBS
1191	20N58	CAPSCREW,Hex hd	52SBS
1192	62D30	LOCKING ASSEMBLY,Ring feeder	52SBS
1193	HA-272-2673	PINION GEAR	52SBS
1194	BK-17-575	CAPSCREW,Hex	52SBS
1195	23A45	CAP	52SBS
1196	6.20E+06	ELBOW,Male,4-2	52SBS
1197	15S88	CAPSCREW,Hex hd	52SBS
1198	26P65	AIR BREATHER	52SBS
1199	6.20E+08	COUPLING	52SBS
1200	23L92	ELBOW	52SBS
1201	N-17-179	NIPPLE	52SBS
1202	6.20E+07	ADAPTER,Male	52SBS
1203	62C62	MOTOR,Hydraulic	52SBS
1204	12D40	CAPSCREW,Hex hd	52SBS
1205	26D36	CAPSCREW,Socket hd	52SBS
1206	62D27	GEARBOX,Planetary	52SBS
1207	2.60E+74	CAPSCREW,Hex hd	52SBS
1208	CA-272-2673	BRACKET,Gearbox	52SBS
1209	JA-272-2673	PLATE,Adapter	52SBS
1210	A-272-2377	DRIVE TANG	52SBS

1211	26B93	CAPSCREW,Socket hd.	52SBS
1212	EA-272-2677	SLIDER PLATE	52SBS
1213	FA-272-2677	ADAPTER PLATE	52SBS
1214	62D26	GEARBOX	52SBS
1215	KA-272-2338	PLATE,Bottom,anti-spin	52SBS
1216	16V75	CAPSCREW,Hex hd.	52SBS
1217	61T18	O-RING	52SBS
1218	62A01	MOTOR,Hydraulic,anti-spin	52SBS
1219	GA-272-2677W	COVER	52SBS
1220	23V93	CAPSCREW,Hex	52SBS
1221	62D43	CAPSCREW,Socket hd	52SBS
1222	62D42	CAPSCREW,Socket hd	52SBS
1223	26K68	CAPSCREW,Hex	52SBS
1224	62D41	CAPSCREW,Socket hd.	52SBS
1225	62D83	REDUCER,Metric	52SBS
1226	23W38	ELBOW,Male	52SBS
1227	62D39	HYDRAULIC TUBE ASSEMBLY	52SBS
1228	10D98	FIBOW,6-6	52SBS
1229	BA2-272-2338W	PLATE,Bottom	52SBS
1230	23D16	PLUG,Sq.hd.	52SBS
1231	60S25	ELBOW	52SBS
1232	H0820-	HOSE ASSEMBLY (anti-spin supply)	52SBS
1233	23P99	ELBOW,8-8	52SBS
1234	23N48	ELBOW	52SBS
1235	62B80	VALVE AND BLOCK ASSEMBLY	52SBS
1236	62F54	VALVE,Check	52SBS
1237	62B79	VALVE,Kick down relief	52SBS
1238	62A04	VALVE,Reducing	52SBS
1239	60Z59	COUPLING,Pressure test	52SBS
1240	23H53	CONNECTOR	52SBS
1241	13J47	CAPSCREW,Hex Hd	52SBS
1242	H1022-	HOSE ASSEMBLY	52SBS
1243	23Y18	CAPSCREW,Hex hd	52SBS
1244	62D51	PLATE,Cover	52SBS
1245	62D50	CLAMP SET	52SBS
1246	H1022-	HOSE ASSEMBLY (oil supply,"M1")	52SBS
1247	H0410-	HOSE ASSEMBLY (case drain)	52SBS
1248	62D33	TEE,6-6	52SBS

1249	62H69	REDUCER,8-6	52SBS
1250	62D38	HYDRAULIC TUBE ASSEMBLY	52SBS
1251	23P61	ELBOW,6-6	52SBS
1252	62D40	HYDRAULIC TUBE ASSEMBLY	52SBS
1253	62D34	REDUCER,12-10	52SBS
1254	15X33	ELBOW,16-12	52SBS
1255	12W73	ELBOW,10-10	52SBS
1256	10D98	ELBOW,6-6	52SBS
1257	20X06	CAPSCREW,Hex hd	52SBS
1258	62D49	PLATE,Weld	52SBS
1259	23H54	CONNECTOR,8-8	52SBS
1260	62F38	CARTRIDGE,Relief valve	52SBS
1261	62H56	PLATE,Manifold tapping	52SBS
1262	62F43	CHECK VALVE,w/body	52SBS
1263	62F43C1	CARTRIDGE	52SBS
1264	60Z59	COUPLING,Test port	52SBS
1265	62F47	SWITCH,Pressure	52SBS
1266	62H58	CONTROL VALVE,Directional 4-way,3-	52SBS
1267	60Y14	COIL,Solenoid (Included with item 1207	52SBS
1268	62H61	SHUTTLE VALVE,w/body	52SBS
1269	60Y27	CONTROL VALVE,Directional 4-way,2-	52SBS
1270	60Y14	COIL,Solenoid (Included with item 1209	52SBS
1271	62H60	PLATE,Tapping	52SBS
1272	62H19	RESERVOIR,Hydraulic 60 gallon	52SBS
1273	62F45	VALVE,Reducing and relieving,w/body	52SBS
1274	62F45C1	CARTRIDGE	52SBS
1275	62H65	PLATE,Tapping	52SBS
1276	62H66	ADAPTER,Valve	52SBS
1277	62H67	COUPLING,Test port	52SBS
1278	62H62	VALVE,Dual counterbalance w/body	52SBS
1279	62F44C1	CARTRIDGE	52SBS
1280	62H57	CONTROL VALVE,Flow,w/body	52SBS
1281	62H57C1	CARTRIDGE	52SBS
1282	62H64	VALVE,Pressure reducing (Includes item	52SBS
1283	62H64C1	CARTRIDGE	52SBS
1284	62K74	VALVE,Remote compensation	52SBS
1285	62G43	PUMP,Oil circulating	52SBS
1286	62F34	CONTROL VALVE,Directional,2-way,2-	52SBS

1287	62F34C1	CARTRIDGE AND SOLENOID COIL	52SBS
1288	62F34C2	SOLENOID COIL ONLY (See Figure	52SBS
1289	62H63	VALVE,Air-bleed and start-up	52SBS
1290	62H53	PUMP,Hydraulic	52SBS
1291	62H52	MOTOR,TEFC,20 hp,1800 RPM(480V -	52SBS
1292	62H55	COOLER,Air/oil (Includes item 1231)	52SBS
1293	62H55C1	AIR FILTER	52SBS
1294	62H59	CONTROL VALVE,Directional,2-way,2-	52SBS
1295	62H59C1	CARTRIDGE AND SOLENOID COIL	52SBS
1296	62F34C2	SOLENOID COIL ONLY (See Figure	52SBS
1297	62F49	GAUGE,Pressure (0-5000 psi)	52SBS
1298	60Y30	SNUBBER,Gauge	52SBS
1299	A-46-2103	DECAL,Warning,hydraulic lines	52SBS
1300	A-46-1928	DECAL,Warning,Avoid Personal Injury	52SBS
1301	62K76	VALVE,Check	52SBS
1302	62H38	HYDRAULIC POWER	52SBS
1303	62H54	HYDRAULIC POWER	52SBS
1304	62H35	UNION,Straight thread	52SBS
1305	62H31	DUST PLUG,1 in.	52SBS
1306	62H29	QUICK COUPLING,Female,1 in.	52SBS
1307	62H30	QUICK COUPLING,Male,1 in	52SBS
1308	62H32	DUST CAP,1 in.	52SBS
1309	23R07	CONNECTOR,16-16	52SBS
1310	H1621-	HOSE ASSEMBLY,#16	52SBS
1311	H0620-	HOSE ASSEMBLY,#6	52SBS
1312	60L54	BUSHING,Reducer	52SBS
1313	62A27	O-RING	52SBS
1314	62D11	DUST CAP,3/8 in.	52SBS
1315	23W72	CONNECTOR,Straight thread,6-8	52SBS
1316	62D09	QUICK COUPLING,Male,3/8 in	52SBS
1317	62D08	QUICK COUPLING,Female,3/8 in.	52SBS
1318	62D10	DUST PLUG,3/8 in	52SBS
1319	23R05	CONNECTOR,6-6	52SBS
1320	23W89	BUSHING,Reducer	52SBS
1321	23N75	BRANCH TEE,Straight thread	52SBS
1322	26J14	REDUCER,Tube end,12-6	52SBS
1323	62D10	DUST PLUG,3/8 in.	52SBS
1324	62D08	QUICK COUPLING,Female,3/8 in.	52SBS

1325	62D09	QUICK COUPLING, Male, 3/8 in.	52SBS
1326	62D11	DUST CAP, 3/8 in.	52SBS
1327	23R05	CONNECTOR, 6-6	52SBS
1328	H0620-	HOSE ASSEMBLY, #6	52SBS
1329	62H32	DUST CAP, 1 in	52SBS
1330	62H35	UNION, Straight thread, 16-16	52SBS
1331	62H31	DUST PLUG, 1 in.	52SBS
1332	62H30	QUICK COUPLING, Male, 1 in.	52SBS
1333	62H29	QUICK COUPLING, Female, 1 in.	52SBS
1334	23R07	CONNECTOR, 16-16	52SBS
1335	H1621-	HOSE ASSEMBLY, #16	52SBS
1336	23K83	CONNECTOR, 10-12	52SBS
1337	12G46	TEE, 12-12	52SBS
1338	29D54	ELBOW, Swivel, JIC, 12-12	52SBS
1339	H1022-	HOSE ASSEMBLY	52SBS
1340	61A52	TUBE CLAMP ASSEMBLY	52SBS
1341	62H54	OIL FILTER, High pressure line feed	52SBS
1342	62K75	VALVE, Check	52SBS
1343	920928	NAMEPLATE	52SBS
1344	931520	HEAD	52SBS
1345	928981	BYPASS VALVE	52SBS
1346	933124	INDICATOR, Filter Bypass	52SBS
1347	62H54C1	ELEMENT, Filter	52SBS
1348	N92138	O-RING, Bowl	52SBS
1349	926103	BOWL	52SBS
1350	62F36	OIL FILTER, Low pressure return line	52SBS
1351	932026	INDICATOR, Filter Bypass	52SBS
1352	932947	HEAD	52SBS
1353	930507	BYPASS VALVE	52SBS
1354	62G45C1	ELEMENT, Filter	52SBS
1355	N72239	O-RING, Bowl	52SBS
1356	934251	BOWL	52SBS
1357	921088	PLUG, Drain	52SBS
1358	903393	SCREW, Drive	52SBS
1359	62H97	STRAINER, Suction	52SBS
1360	60X27	GAUGE, Oil level	52SBS
1361	60T77	GASKET	52SBS
1362	60T76	COVER, Access (w/drain)	52SBS

1363	6.10E+91	COVER,Access (w/o drain)	52SBS
1364	23D06	DRAIN PLUG,Magnetic	52SBS
1365	60T38	FILLER CAP STRAINER	52SBS
1366	60T80	CAP	52SBS
1367	13010647	SCRFW	52SBS
1368	1300651	NAMEPLATE	52SBS
1369	1300649	COVER	52SBS
1370	1300828	GASKET,Cover	52SBS
1371	1300648	JUNCTION BOX	52SBS
1372	697161	BOOT	52SBS
1373	697647	O-RING	52SBS
1374	60Y14	COIL	52SBS
1375	1301704	GASKET,Coil	52SBS
1376	697715	ACTUATOR	52SBS
1377	99X37	LOCATOR PIN	52SBS
1378	851017	COIL	52SBS
1379	DA2-272-1547W	COVER,Oil tank	52SBS
1380	20W25	GASKET,18 in.	52SBS
1381	20W25	GASKET,74 in.	52SBS
1382	12L87	ADHESIVE,1/2 pint	52SBS
1383	EA2-272-1547W	OIL TANK,110 gallon cap	52SBS
1384	28S56	GAUGE,Oil level	52SBS
1385	BB-46-2155	LABEL,Check oil level	52SBS
1386	26F21	SCREW	52SBS
1387	26C53	SCREW	52SBS
1388	27W64	SCREEN CLOTH	52SBS
1389	A-272-533	LABEL,Air-oil connection	52SBS
1390	B-272-404	PLATE,Oil tank serial numbe	52SBS
1391	11P12	SCREW	52SBS
1392	D-273-696	LABEL,Fill oil tank	52SBS
1393	BD-46-2156	DECAL,Oil cooler temperature setting	52SBS
1394	AA-46-2156	DECAL,Oil cooler warning	52SBS
1395	23B98	ELBOW	52SBS
1396	27S97	BREATHER,3/4 in.,NPT oil bath	52SBS
1397	29C01	HEATER,Oil immersion	52SBS
1398	29A61	DRAW CATCH	52SBS
1399	BG1-272-1223W	HOSE ASSEMBLY	52SBS
1400	60B93	CONNECTOR,Swivel	52SBS

1401	HH-17-125	NIPPLE	52SBS
1402	C-272-404	DECAL,Arrow marker	52SBS
1403	23A37	BUSHING,Reducer	52SBS
1404	23J54	CONNECTOR,Swivel	52SBS
1405	60J62	INSERT	52SBS
1406	60L03	HOSE	52SBS
1407	15R41	OIL FILTER (Includes item 1839A)	52SBS
1408	15H20	ELEMENT,Filter	52SBS
1409	16Y01	SCREW	52SBS
1410	60L03	HOSE	52SBS
1411	60V45	COOLER,Air-to-oil,direct drive	52SBS
1412	60L03	HOSE	52SBS
1413	2.60E+30	CAPSCREW	52SBS
1414	23F36	TEE	52SBS
1415	A-17-125	NIPPLE	52SBS
1416	61G42	VALVE,Relief	52SBS
1417	60L03	HOSE	52SBS
1418	61D91	GAUGE,Oil pressure	52SBS
1419	11A13	BUSHING,Reducer	52SBS
1420	27W63	MULTI-CLAMP ASSEMBLY	52SBS
1421	1.00E+11	CAPSCREW	52SBS
1422	61G17	METER,Flow(right-to-left oil flow)	52SBS
1423	61G16	METER,Flow(left-to-right oil flow)	52SBS
1424	27S46	GAUGE,Oil temperature	52SBS
1425	23A28	BUSHING,Reducer	52SBS
1426	A-17-125	NIPPLE,Close	52SBS
1427	C-17-43	NIPPLE	52SBS
1428	61G78	SWITCH,Pressure	52SBS
1429	61J97	OIL PUMP ASSEMBLY	52SBS
1430	61K02	OIL PUMP ASSEMBLY	52SBS
1431	27S91	OIL PUMP	52SBS
1432	61J93	COUPLING(Gear Reducer to Pump)	52SBS
1433	27S92	GEAR REDUCER	52SBS
1434	27S93	GEAR REDUCER	52SBS
1435	61J91	COUPLING (Motor to Gear Reducer)	52SBS
1436	11X92	MOTOR,5 HP,1800 RPM,230/460 V,3-	52SBS
1437	16V68	MOTOR,5 HP,1500 RPM,380 V,3-	52SBS
1438	26A04	SCREW,Hex hd	52SBS

1439	15R41	FILTER ASSEMBLY	52SBS
1440	15R41C3	CAP,Oil Filter	52SBS
1441	15R41C9	PLUG,Filter Car	52SBS
1442	15R41C2	O-RING,Filler Cap	52SBS
1443	15R41C8	SPRING	52SBS
1444	15H20	ELEMENT,Filter	52SBS
1445	15H20C1	CONNECTOR	52SBS
1446	15R41C6	VALVE AND LINKAGE	52SBS
1447	15R41C4	VALVE,Bypass	52SBS
1448	15R41C5	POINTER	52SBS
1449	23J54	CONNECTOR,Swivel	52SBS
1450	60J62	INSERT	52SBS
1451	60L03	HOSE	52SBS
1452	27W60	OIL COOLER,Water-to-oil	52SBS
1453	10V14	SCREW	52SBS
1454	60L03	HOSE	52SBS
1455	60J62	INSERT,1-1/4 in.hose	52SBS
1456	60L03	HOSE	52SBS
1457	23J54	CONNECTOR,Swivel	52SBS
1458	27W60	OIL COOLER,Water-to-oil	52SBS
1459	10V14	CAPSCREW	52SBS
1460	60L03	HOSE	52SBS
1461	23C38	ELBOW	52SBS
1462	11G77	SIGHT GAUGE,Oil flow	52SBS
1463	23L53	ELBOW,Male,6-6	52SBS
1464	H0610-	HOSE ASSEMBLY	52SBS
1465	12W74	TEE,Union run	52SBS
1466	H0610-	HOSE ASSEMBLY	52SBS
1467	62D90	CLAMP SET	52SBS
1468	62D91	PLATE	52SBS
1469	13M81	CAPSCREW	52SBS
1470	1.00E+11	CAPSCREW	52SBS
1471	60N51	GROMMET	52SBS
1472	BH-272-2303W	BRACKET,Support	52SBS
1473	27W63	MULTI-CLAMP ASSEMBLY	52SBS
1474	AK-17-125	NIPPLE	52SBS
1475	10Z99	BUSHING,Reducing	52SBS
1476	23C49	ELBOW	52SBS

1477	23J54	CONNECTOR,Swivel	52SBS
1478	60L03	HOSE	52SBS
1479	60J62	COUPLING,Hose	52SBS
1480	20X06	CAPSCREW	52SBS
1481	62D48	PLATE,Cover	52SBS
1482	62D47	CLAMP SET	52SBS
1483	H0410-	HOSE ASSEMBLY	52SBS
1484	15C82	CAPSCREW	52SBS
1485	12T24	CAP	52SBS
1486	62D89	PLATE	52SBS
1487	62D46	PLATE	52SBS
1488	JJ-17-129	NIPPLE,Toe	52SBS
1489	16V37	ELBOW	52SBS
1490	DR-17-129	NIPPLE	52SBS
1491	1.30E+81	JOINT	52SBS
1492	DZ-17-129	NIPPLE	52SBS
1493	13F68	TEE,3 in.	52SBS
1494	28V52	BUSHING,3 to 1/2 in.reducing	52SBS
1495	23D13	PLUG,1/2 in.sq.hd.(w/out air-oil cooler	52SBS
1496	60G89	SWITCH,Air-oil cooler fan temperature	52SBS
1497	B-17-129	NIPPLE,Close,3 x 3 in	52SBS
1498	60B49	GAUGE,Temperature,0-250 degrees F	52SBS
1499	DA-272-1253	BUSHING,3 to 1/2 in.eccentric reducer	52SBS
1500	60J52	FLOW SWITCH	52SBS
1501	1.50E+84	BUSHING,3 to 1 in.reducing	52SBS
1502	60G89	SWITCH,Alarm temperature (all models)	52SBS
1503	C-17-129	NIPPLE,Close,3x3-1/2 in	52SBS
1504	TA-260-652A	ALARM ASSEMBLY,Shutdown (with	52SBS
1505	SA-260-652A	ALARM ASSEMBLY,Shutdown (with	52SBS
1506	QA-260-652	PLATE,Support	52SBS
1507	AA3-272-1652A	PANEL,Shutdown alarm	52SBS
1508	61L27	ENCLOSURE	52SBS
1509	26X80	SWITCH,Door	52SBS
1510	27J26	SCREW	52SBS
1511	29D22	PANEL	52SBS
1512	61G70	RELAY,Time delay (TR1)	52SBS
1513	27J84	SCREW	52SBS
1514	60C56	CHANNEL,Mounting	52SBS

1515	61N78	END CLAMP	52SBS
1516	60C54	END BARRIER	52SBS
1517	60C55	BLOCK,Terminal	52SBS
1518	26X85	PUSH-BUTTON	52SBS
1519	CB1-46-2155	LABEL,Wiring Schematic	52SBS
1520	A-46-2156	LABEL,Danger,Electrocution hazard	52SBS
1521	6.10E+94	NAMEPLATE,Horn test	52SBS
1522	6.10E+72	HORN,Alarm	52SBS
1523	20B04	CONDUIT.1/2 in	52SBS
1524	20F18	SEAL,O-ring	52SBS
1525	27C42	SCREW	52SBS
1526	61G59	RELAY,Control (CR-1)	52SBS
1527	PA-260-652A	TRANSFORMER ASSEMBLY,380V	52SBS
1528	NA-260-652A	TRANSFORMER ASSEMBLY,480V	52SBS
1529	61K76	ENCLOSURE	52SBS
1530	61T77	TRANSFORMER,380V primary,120V	52SBS
1531	16G55	TRANSFORMER,480V primary,120V	52SBS
1532	61H99	CIRCUIT BREAKER,2 pole,4A	52SBS
1533	29D24	SUBPANEL	52SBS
1534	61N71	CHANNEL,6 in.mounting	52SBS
1535	60C55	TERMINAL BLOCK	52SBS
1536	60C54	END BARRIER,Terminal block	52SBS
1537	61N78	END CLAMP,Terminal block	52SBS
1538	62A51	NAMEPLATE,120 volt	52SBS
1539	61T71	NAMEPLATE,380 volt (used with 380V	52SBS
1540	61R59	NAMEPLATE,480 volt (used with 480V	52SBS
1541	61J09	CIRCUIT BREAKER,1 pole,6A	52SBS
1542	A-46-1993	DECAL,Caution Pinch Point	52SBS
1543	F-46-1993	DECAL,Caution Guards	52SBS
1544	A10-46-2007	PLATE,Gyrasphere Patent	52SBS
1545	FA-46-1901	PLATE,Telsmith Logo,Trademark	52SBS
1546	11P12	SCREW,Drive	52SBS
1547	B1-46-2006	PLATE,Serial Number	52SBS
1548	D-272-404	PLATE,Smithbond Name	52SBS
1549	A-46-1928	DECAL,Warning Avoid Personal Injury	52SBS
1550	B2-46-1685	TAG,Gyrasphere Instruction	52SBS
1551	A-46-2155	TAG,Gyrasphere Smithbond	52SBS
1552	AB-46-1901	LOGO,Telsmith (Small)	52SBS

1553	AD-46-1901	STRIPE,Small	52SBS
1554	C-272-404	MARKER,Arrow	52SBS
1555	A-46-2103	DECAL,Warning Hydraulic Lines	52SBS
1556	C-46-2103	DECAL,Waming Ground	52SBS
1557	BA1-46-2155	DECAL,Telsmith Quality	52SBS
1558	B-46-2103	DECAL,Caution	52SBS
1559	BA-46-2156	DECAL,Warning	52SBS
1560	B-46-2500	PLATE,Dynamic adjust	52SBS
1561	A-46-2500	PLATE,Silver bullet series	52SBS
1562	29D17	PRIMER,Red Oxide (One gallon)	52SBS
1563	11A62	PAINT,Telsmith Gray (One gallon)	52SBS
1564	61K21	PAINT,Ivory (One gallon)	52SBS
1565	TL-272-1503W	SAFETY SPACER	52SBS
1566	AA-272-2344	LIFTING PLATE,Main drive gear	52SBS
1567	EB-272-2373W	DRIVE KEY EXTENSION	52SBS
1568	10P71	Strip, Bakelite	57SBS
1569	BA-272-2102	Shield, Frame Arm	57SBS
1570	BC-272-2102	Shield, Frame Arm	57SBS
1571	BJ-272-2102	Shield, Intermediate Gusset	57SBS
1572	BG-272-2102	Countershaft Box	57SBS
1573	BE-272-2102	Shield, Countershaft Box	57SBS
1574	CF-272-2103	Screen, Filter	57SBS
1575	CH-272-2103	Filter	57SBS
1576	CE-272-2103	Screen, Filter	57SBS
1577	TH1-272-1503	Pin, Thrust	57SBS
1578	60C45	Washer	57SBS
1579	60C44	Locknut	57SBS
1580	AB3-272-2102	Frame, Main	57SBS
1581	AA-272-2103	Liner, Main Frame	57SBS
1582	AA-272-2112	Conical Hopper	57SBS
1583	BA-272-2112	Conical Hopper	57SBS
1584	A1-272-2112	Receiving Hopper	57SBS
1585	23P64	Pipe Cap	57SBS
1586	D-17-129	Pipe Nipple	57SBS
1587	16Y27	Cap screw	57SBS
1588	26B47	Washer	57SBS
1589	FA1-272-2117	Lock nut	57SBS
1590	B3-272-2117	Lock nut	57SBS

1591	11W14	Setscrew	57SBS
1592	A1-272-2128	Taper Segment	57SBS
1593	D4-272-2118	Support Bowl	57SBS
1594	AB-272-2128	Filler Ring	57SBS
1595	FB1-272-2129	Concave Ring	57SBS
1596	AB-272-2129	Concave Ring	57SBS
1597	B-272-2129	Concave Ring	57SBS
1598	LB-272-2129	Concave Ring	57SBS
1599	KB-272-2129	Concave Ring	57SBS
1600	JB-272-2129	Concave Ring	57SBS
1601	FA-272-1204	Upper Frame	57SBS
1602	FA-272-2303	Bushing, Thrust Pin	57SBS
1603	23J64	Pipe Cap	57SBS
1604	FD-272-2303	Spacer	57SBS
1605	31A41	Retaining Ring	57SBS
1606	23C72	Lube Fitting	57SBS
1607	12D91	Smith bond	57SBS
1608	AC-272-2143	Key	57SBS
1609	CQ-17-26	Pin	57SBS
1610	AA-272-2139	Eccentric	57SBS
1611	13S84	Bearing, Thrust	57SBS
1612	AC-272-2138	Snap	57SBS
1613	D-272-2138	Sleeve, Outer	57SBS
1614	B1-272-2138	Sleeve,	57SBS
1615	BB-272-1213	Piston	57SBS
1616	BA2-272-2138	Ring, Rotary Seal	57SBS
1617	27L87	Lock washer	57SBS
1618	2.60E+46	Cap screw	57SBS
1619	26R39	Cap screw	57SBS
1620	10P71	Strip, Bakelite	57SBS
1621	26B48	Washer	57SBS
1622	1.20E+53	Babbitt	57SBS
1623	AA-272-337	Shim	57SBS
1624	AC-272-337	Shim	57SBS
1625	AB-272-337	Shim	57SBS
1626	AD-272-337	Shim	57SBS
1627	AB-272-2143	Key	57SBS
1628	A1-272-2143	Gear, Main Drive	57SBS

1629	13F81	Washer	57SBS
1630	CX-17-59	Cap screw	57SBS
1631	16R95	Lock wire	57SBS
1632	AA1-272-337	Shim	57SBS
1633	AC1-272-337	Shim	57SBS
1634	AB-272-337	Shim	57SBS
1635	AD-272-337	Shim	57SBS
1636	AD-272-2143	Key	57SBS
1637	A2-272-2143	Gear, Main Drive	57SBS
1638	27L78	Lock washer	57SBS
1639	12K08	Cap screw	57SBS
1640	13F81	Washer	57SBS
1641	CX-17-59	Cap screw	57SBS
1642	16R95	Lock wire	57SBS
1643	16V76	Cap screw	57SBS
1644	KB1-272-1238	Cap, Shaft Nut	57SBS
1645	JB-272-1238	Nut, Shaft	57SBS
1646	26B47	Washer, Hardened	57SBS
1647	27D03	Nut, Hex	57SBS
1648	16V76	Cap screw, Hex	57SBS
1649	MB-272-1238	Plate, Feed	57SBS
1650	LB-272-1238	Nut, Shaft	57SBS
1651	26B47	Washer, Hardened	57SBS
1652	27D03	Nut, Hex	57SBS
1653	AB1-272-1208	Ring, Burning	57SBS
1654	CA-272-2134	Mantle	57SBS
1655	DB-272-2134	Mantle	57SBS
1656	CA-272-2134	Mantle	57SBS
1657	DB-272-2134	Mantle	57SBS
1658	CA-272-2134	Mantle	57SBS
1659	CA-272-2134	Mantle	57SBS
1660	A-272-2134	Mantle	57SBS
1661	A-272-2134	Mantle	57SBS
1662	12D91	Smithbond	57SBS
1663	AA1-272-2133	Taper Head	57SBS
1664	CA-272-1538	Piston Ring, Inner	57SBS
1665	BB2-272-2133	Shaft, Main	57SBS
1666	B-272-338	Key, Angle	57SBS

1667	A-272-338	Lock washer	57SBS
1668	AA-272-1077	Nut, Adjusting	57SBS
1669	10S13	Cap screw	57SBS
1670	27L84	Lock washer	57SBS
1671	AA-272-2143	Countershaft	57SBS
1672	2.60E+61	Cap screw	57SBS
1673	13C75	Seal, Oil	57SBS
1674	J-272-339	Gasket, Oil Guard	57SBS
1675	C-272-316	Oil Guard	57SBS
1676	26F83	Washer	57SBS
1677	26C48	Cap screw	57SBS
1678	60A26	Bushing Assembly	57SBS
1679	13Y45	Sheave	57SBS
1680	FD-17-41	Key	57SBS
1681	1.00E+20	Bearing, Roller	57SBS
1682	1.00E+21	Cup, Bearing	57SBS
1683	10Z95	Cap screw, Hex	57SBS
1684	10W72	Hardened	57SBS
1685	B-272-1228	Box, Countershaft	57SBS
1686	AB-272-1228	Shim	57SBS
1687	AC-272-1228	Shim	57SBS
1688	AD-272-1228	Shim	57SBS
1689	AE-272-1228	Shim	57SBS
1690	BA-272-2143	Gear	57SBS
1691	G-17-535	Taper Key	57SBS
1692	27L81	Lock washer	57SBS
1693	50P31	Wear	57SBS
1694	13D18	Seal, Oil	57SBS
1695	P-272-1272	Bracket, Drive Guard	57SBS
1696	CA-272-1272	Drive Guard	57SBS
1697	2.60E+30	Capscrew	57SBS
1698	26D04	Washer	57SBS
1699	27C95	Nut	57SBS
1700	N-272-1272	Bracket, Drive Guard	57SBS
1701	N-272-1272	Bracket, Drive Guard	57SBS
1702	15X26	Bushing Assembly	57SBS
1703	62B81	Bushing Assembly	57SBS
1704	62J12	Sheave, Motor	57SBS

1705	62B71	Motor, Drive	57SBS
1706	62J47	Motor, Drive	57SBS
1707	60G19	Slide Rails, Motor	57SBS
1708	60G17	Slide Rails, Motor	57SBS
1709	16N93	Slide Rails, Motor	57SBS
1710	L-15-575	Cap screw, Hex	57SBS
1711	DF-272-403	Washer	57SBS
1712	14Z56	Washer	57SBS
1713	27L09	Setscrew	57SBS
1714	C-272-395	Plug, Brass	57SBS
1715	V-17-575	Screw	57SBS
1716	6.00E+08	Cylinder Assembly	57SBS
1717	28S40	Coupling, Cylinder	57SBS
1718	28S38	Cylinder, Hydraulic Relief	57SBS
1719	60E07C2	Pin, Pivot	57SBS
1720	28S41	Bracket, Mounting	57SBS
1721	60E07C3	Spacers	57SBS
1722	28X13	Cap screw	57SBS
1723	12K44	Cap screw Hex Hd.	57SBS
1724	10S89	Washer	57SBS
1725	26A17	Lock nut	57SBS
1726	28S52	O-Ring	57SBS
1727	60K03	Plug	57SBS
1728	DB-272-1308	Manifold	57SBS
1729	28S51	Flange	57SBS
1730	27L78	Lock washer	57SBS
1731	28X14	Cap screw	57SBS
1732	6.00E+11	Valve	57SBS
1733	GA-273-618W	Hose Assembly	57SBS
1734	12K10	Cap screw	57SBS
1735	GB-273-618W	Hose Assembly	57SBS
1736	DC-272-1308	Tee	57SBS
1737	28S53	Elbow	57SBS
1738	CA-272-403W	Puller	57SBS
1739	DC-272-403	Spacer	57SBS
1740	60E07C1	Seal Kit	57SBS
1741	AX-272-1223W	Hose Assembly	57SBS
1742	AB1-272-1223W	Hose Assembly	57SBS

1743	12S22	Connector, Swivel	57SBS
1744	60D67	Nipple, Quick Disconnect	57SBS
1745	60D69	Dust	57SBS
1746	B-17-178	Pipe Nipple	57SBS
1747	60R21	Coupling, Bulkhead	57SBS
1748	23N24	Swivel Tee	57SBS
1749	60D66	Couple, Quick Disconnect	57SBS
1750	60D68	Dust Plug	57SBS
1751	60T38	Breather Vent	57SBS
1752	60D67	Nipple, Quick	57SBS
1753	61W07	Hydraulic Cylinder	57SBS
1754	61V33C1	Repair Kit, Cylinder	57SBS
1755	11F45	Nut	57SBS
1756	JB-272-1243	Lock Plate	57SBS
1757	D-272-495	Bellville Spring	57SBS
1758	JC-272-1243	Clamp Stud	57SBS
1759	15S88	Cap screw	57SBS
1760	26B48	Washer	57SBS
1761	26C47	Cap screw	57SBS
1762	26F83	Washer	57SBS
1763	E-272-2372W	Cover	57SBS
1764	E-272-2172W	Cover	57SBS
1765	60F24	Lifting Eye	57SBS
1766	BH-272-1472	Pivot Pin	57SBS
1767	BJ-272-1472	Set Collar	57SBS
1768	27L21	Set Screw	57SBS
1769	10S89	Washer	57SBS
1770	6.20E+96	Hydraulic Cylinder	57SBS
1771	62E95C1	Mounting Pin	57SBS
1772	A-272-2172W	Main Support	57SBS
1773	1.00E+03	Adapter	57SBS
1774	BA1-272-1472W	Sliding Pawl	57SBS
1775	27L56	Washer	57SBS
1776	1.00E+11	Cap screw	57SBS
1777	10R70	Hydraulic Fitting	57SBS
1778	BE-272-1472	Cover	57SBS
1779	E-272-523	Plug	57SBS
1780	11B88	Spring	57SBS

1781	11B74	Screw	57SBS
1782	BG-272-1472	Pawl	57SBS
1783	J-17-180	Pipe Nipple	57SBS
1784	23G56	Elbow	57SBS
1785	23G98	Connector	57SBS
1786	1.30E+90	Couple	57SBS
1787	62J69	Dust Plug	57SBS
1788	G-17-180	Pipe Nipple	57SBS
1789	23G56	Elbow	57SBS
1790	23G98	Connector	57SBS
1791	1.30E+88	Couple	57SBS
1792	62J70	Dust Cap	57SBS
1793	27L76	Lock washer	57SBS
1794	2.60E+26	Cap screw	57SBS
1795	11L78	Chain	57SBS
1796	11L74	Eye Bolt	57SBS
1797	27L77	Lock washer	57SBS
1798	27C87	Nut	57SBS
1799	A-272-523	Liner	57SBS
1800	27C86	Nut	57SBS
1801	16V71	Cap screw	57SBS
1802	20J35	Hanger	57SBS
1803	27L52	Washer	57SBS
1804	62F33	Hydraulic Reservoir	57SBS
1805	60X34	Pump Motor	57SBS
1806	62D04	Hydraulic Pump	57SBS
1807	60M05	Hydraulic Filter	57SBS
1808	60X40	Suction Strainer	57SBS
1809	60Y27	Control Valve	57SBS
1810	60Y27	Control Valve	57SBS
1811	60Y27	Control Valve	57SBS
1812	60Y27	Control Valve	57SBS
1813	62J23	Pressure Switch	57SBS
1814	62J24	Pressure Switch	57SBS
1815	62J21	Pressure Gauge	57SBS
1816	60Y31	Hydraulic Accumulator	57SBS
1817	60Y29	Relief Valve	57SBS
1818	6.00E+11	Relief Valve	57SBS

1819	60R13	Control Valve	57SBS
1820	60R13	Control Valve	57SBS
1821	62L84	Pressure Intensifier	57SBS
1822	62J22	Pressure Gauge	57SBS
1823	61B46	Pressure Gauge	57SBS
1824	62F48	Check Valve	57SBS
1825	62J20	Manifold	57SBS
1826	60Y34	Manifold	57SBS
1827	62J28	Cover	57SBS
1828	BA-272-532	Decal, Operation	57SBS
1829	BB-272-532	Decal, Operation	57SBS
1830	A-46-1928	Decal, Warning	57SBS
1831	A-46-2103	Decal, Warning	57SBS
1832	62T32	Accumulator	57SBS
1833	62J78	Disconnect	57SBS
1834	62F81	Connector	57SBS
1835	62J76	Connector	57SBS
1836	62F77	Connector	57SBS
1837	62J75	Connector	57SBS
1838	62F80	Circuit Breaker	57SBS
1839	62J77	Circuit Breaker	57SBS
1840	62H99	Contact Block	57SBS
1841	62F74	Push button	57SBS
1842	62F72	Push button	57SBS
1843	62F73	Push button	57SBS
1844	62F75	Selector Switch	57SBS
1845	62F69	Selector Switch	57SBS
1846	62F70	Contact Block	57SBS
1847	62F71	Contact Block	57SBS
1848	62J38	Contact Block	57SBS
1849	62J37	Contact Block	57SBS
1850	61N71	Din Rail	57SBS
1851	62F68	Circuit Breaker	57SBS
1852	62F67	Circuit Breaker	57SBS
1853	62J34	Terminal	57SBS
1854	62J35	End	57SBS
1855	62F76	Link	57SBS
1856	62J36	Labels	57SBS

1857	62F66	Transformer	57SBS
1858	62F78	Legend	57SBS
1859	62F61	Enclosure	57SBS
1860	62F62	Subpanel	57SBS
1861	62M47	Plate	57SBS
1862	60X40	Strainer, Suction	57SBS
1863	62F33C5	Gauge	57SBS
1864	62F33C1	Gasket	57SBS
1865	62F33C2	Cover	57SBS
1866	62F33C3	Cover	57SBS
1867	62F33C8	Washer	57SBS
1868	62F33C7	Bolt	57SBS
1869	62F33C6	Drain Plug	57SBS
1870	62F33C4	Filler Cap Strainer	57SBS
1871	60T80	Cap	57SBS
1872	26L72	Cap screw	57SBS
1873	27C95	Nut	57SBS
1874	62K05	Mount	57SBS
1875	C-272-1209	Washer	57SBS
1876	B-272-1209	Spacer	57SBS
1877	2.60E+30	Cap screw	57SBS
1878	A-272-1209R	Leg	57SBS
1879	A-272-1209L	Leg	57SBS
1880	60M05	Filter Assembly, Hydraulic	57SBS
1881	60M05C2	Indicator, Filter	57SBS
1882	60M06	Element, Filter	57SBS
1883	60M05C1	o-Ring, Bowl	57SBS
1884	62F48	Valve, Check	57SBS
1885	13010647	Screw	57SBS
1886	1300651	Nameplate	57SBS
1887	1300649	Cover	57SBS
1888	1300828	Gasket, Cover	57SBS
1889	1300648	Junction Box	57SBS
1890	697833	Nut	57SBS
1891	697161	Boot	57SBS
1892	697647	o-Ring	57SBS
1893	60Y14	Coil	57SBS
1894	1301704	Gasket, Coil	57SBS

1895	697715	Actuator	57SBS
1896	99X37	Locator Pin	57SBS
1897	23R05	Connector	57SBS
1898	GT-273-618W	Hose Assembly	57SBS
1899	23P62	Adapter	57SBS
1900	1.30E+88	Coupler	57SBS
1901	62J69	Dust	57SBS
1902	1.30E+90	Nipple	57SBS
1903	62J70	Dust Cap	57SBS
1904	62A89	Fitting, Straight	57SBS
1905	28X91	Elbow	57SBS
1906	GC-273-618W	Hose Assembly	57SBS
1907	28S54	Cap	57SBS
1908	28S55	Cap	57SBS
1909	23Y26	Hose Assembly	57SBS
1910	10H55	Elbow	57SBS
1911	60D68	Dust Plug	57SBS
1912	62S79	Fitting, Swivel	57SBS
1913	23Y26	Hose Assembly	57SBS
1914	2.30E+24	Union, Swivel Adapter	57SBS
1915	B-17-178	Nipple	57SBS
1916	60D67	Nipple	57SBS
1917	60D69	Dust Cap	57SBS
1918	62S79	Fitting, Swivel	57SBS
1919	60T92	Elbow	57SBS
1920	061006062222-	Hose Assembly	57SBS
1921	62H69	Reducer	57SBS
1922	62D33	Tee	57SBS
1923	HA-273-8945B	Hose Assembly	57SBS
1924	62D08	Quick Coupler, Hydraulic	57SBS
1925	62D10	Dust Cap	57SBS
1926	60Z59	Coupling	57SBS
1927	60Z65	Test Hose	57SBS
1928	60Z67	Test Hose Union	57SBS
1929	60Z66	Adapter, Gauge	57SBS
1930	60G44	Gauge, Pressure	57SBS
1931	A-272-2377	Drive Tang	57SBS
1932	12N79	Cap screw	57SBS

1933	EA-272-2677	Slider	57SBS
1934	FA-272-2677	Adapter	57SBS
1935	62D26	Gearbox	57SBS
1936	MA-272-2138	Plate	57SBS
1937	26F83	Washer	57SBS
1938	26C48	Cap screw	57SBS
1939	61T18	O-Ring	57SBS
1940	62A01	Motor	57SBS
1941	GA-272-2677	Cover	57SBS
1942	23V93	Cap screw	57SBS
1943	27L58	Washer	57SBS
1944	62D43	Cap screw	57SBS
1945	27L81	Lock washer	57SBS
1946	62D42	Cap screw	57SBS
1947	26C46	Cap screw	57SBS
1948	62D41	Cap screw	57SBS
1949	62D83	Reducer	57SBS
1950	23W38	Elbow	57SBS
1951	62D39	Hydraulic Tube Assembly	57SBS
1952	10D98	Elbow	57SBS
1953	AE-272-2143	Spacer	57SBS
1954	FA-272-2138W	Plate, Bottom, Standard	57SBS
1955	23D16	Plug	57SBS
1956	26F83	Washer	57SBS
1957	45293	Cap screw	57SBS
1958	26C46	Cap screw	57SBS
1959	23P99	Elbow	57SBS
1960	H0820-	Hose Assembly	57SBS
1961	23P99	Elbow	57SBS
1962	23N48	Elbow	57SBS
1963	62B80	Valve And Block Assembly	57SBS
1964	62F54	Valve, Check	57SBS
1965	62B79	Valve, Kick Down Relief	57SBS
1966	62A04	Valve, Reducing	57SBS
1967	60Z59	Coupling	57SBS
1968	23H53	Connector	57SBS
1969	27L56	Washer, Cut	57SBS
1970	13J47	Cap screw, Hex Hd.	57SBS

1971	H1022-	Hose Assembly	57SBS
1972	23Y18	Cap screw, Hex Hd.	57SBS
1973	62D51	Plate	57SBS
1974	62D50	Clamp Set (5/8 In. Hose	57SBS
1975	H1022-	Hose Assembly	57SBS
1976	H0410-	Hose Assembly	57SBS
1977	62D33	Tee	57SBS
1978	62H69	Reducer	57SBS
1979	62D38	Hydraulic Tube Assembly	57SBS
1980	23P61	Elbow	57SBS
1981	62D40	Hydraulic Tube Assembly	57SBS
1982	62D34	Reducer	57SBS
1983	15X33	Elbow	57SBS
1984	12W73	Elbow	57SBS
1985	23P61	Elbow	57SBS
1986	20X06	Cap screw, Hex Hd.	57SBS
1987	62D49	Plate, Weld	57SBS
1988	61M69	Union, Straight Thread	57SBS
1989	62D11	Dust Cap	57SBS
1990	62D09	Quick Coupler, Hydraulic	57SBS
1991	20N85	Pipe Cap	57SBS
1992	DA2-272-1547W	Cover	57SBS
1993	20W25	Gasket	57SBS
1994	20W25	Gasket	57SBS
1995	12L87	Adhesive	57SBS
1996	23D20	Pipe Plug	57SBS
1997	EA2-272-1547W	Oil Tank	57SBS
1998	28S56	Gauge, Oil Level	57SBS
1999	23D22	Pipe Plug	57SBS
2000	BB-46-2155	Label	57SBS
2001	26F21	Screw	57SBS
2002	27D01	Washer	57SBS
2003	26B48	Nut	57SBS
2004	26C53	Screw	57SBS
2005	27L78	Lock washer	57SBS
2006	12K63	Washer	57SBS
2007	27W64	Cloth, Brass, 10 Mesh	57SBS
2008	A-272-533	Label	57SBS

2009	B-272-404	Plate	57SBS
2010	11P12	Screw	57SBS
2011	D-273-696	Label	57SBS
2012	BD-46-2156	Decal, Oil Cooler Temperature	57SBS
2013	AA-46-2156	Decal, Oil Cooler Warning	57SBS
2014	C-17-123	Pipe Nipple	57SBS
2015	23B98	Elbow	57SBS
2016	27S97	Breather	57SBS
2017	29C01	Heater, Oil Immersion	57SBS
2018	29A61	Draw Catch	57SBS
2019	23C51	Elbow	57SBS
2020	BG1-272-1223W	Hose Assembly	57SBS
2021	60B93	Connector	57SBS
2022	HH-17-125	Nipple	57SBS
2023	C-272-404	Decal, Arrow Marker	57SBS
2024	23A37	Bushing, Reducer	57SBS
2025	23C49	Elbow	57SBS
2026	23J54	Connector, Swivel	57SBS
2027	60J62	Insert Hose	57SBS
2028	60L03	Hose	57SBS
2029	23C38	Elbow, Pipe Street	57SBS
2030	15R41	Oil Filter	57SBS
2031	15H20	Element, Filter	57SBS
2032	16Y01	Screw	57SBS
2033	26D04	Washer	57SBS
2034	27C95	Nut	57SBS
2035	60L03	Hose	57SBS
2036	23B47	Coupling, Pipe Reducer	57SBS
2037	61C80	Cooler	57SBS
2038	60L03	Hose	57SBS
2039	2.60E+30	Cap screw	57SBS
2040	23F36	Tee	57SBS
2041	17-125	Nipple	57SBS
2042	61G42	Valve	57SBS
2043	60L03	Hose	57SBS
2044	23C49	Elbow, Pipe Street	57SBS
2045	23F36	Tee, Pipe	57SBS
2046	61D91	Gauge, Oil Pressure	57SBS

2047	11A13	Bushing, Reducer	57SBS
2048	27W63	Multi-Clamp Assembly	57SBS
2049	1.00E+11	Capscrew	57SBS
2050	12K63	Washer	57SBS
2051	E-17-125	Pipe Nipple	57SBS
2052	61C73	Meter, Flow	57SBS
	61C76		
2053	27S46	Gauge, Oil Temperature	57SBS
2054	23A28	Bushing, Reducer	57SBS
2055	A-17-125	Nipple	57SBS
2056	C-17-43	Nipple	57SBS
2057	61G78	Switch, Pressure	57SBS
2058	61W27	Oil Pump Assembly	57SBS
2059	61W28	Oil Pump Assembly	57SBS
2060	27S91	Oil Pump	57SBS
2061	61J93	Coupling	57SBS
2062	27S93	Gear Reducer	57SBS
2063	29V86	Gear Reducer	57SBS
2064	61J92	Coupling	57SBS
2065	11X93	Motor	57SBS
2066	60S86	Motor	57SBS
2067	26A04	Screw, Hex	57SBS
2068	27C95	Nut, Hex,	57SBS
2069	26D04	Washer, Hardened	57SBS
2070	23C38	Elbow	57SBS
2071	23J54	Connector	57SBS
2072	60J62	Insert	57SBS
2073	60L03	Hose	57SBS
2074	23A37	Bushing	57SBS
2075	27W60	Cooler	57SBS
2076	10V14	Screw	57SBS
2077	12K63	Washer	57SBS
2078	27C90	Nut	57SBS
2079	23C49	Elbow	57SBS
2080	60L03	Hose	57SBS
2081	23C38	Elbow	57SBS
2082	A-17-125	Nipple	57SBS
2083	16G73	Pipe	57SBS

2084	23J54	Connector	57SBS
2085	60J63	Hose Assembly	57SBS
2086	60J62	Coupling	57SBS
2087	23A37	Bushing	57SBS
2088	27W60	Oil Cooler	57SBS
2089	10V14	Capscrew	57SBS
2090	12K63	Washer	57SBS
2091	27C90	Nut	57SBS
2092	23C49	Elbow	57SBS
2093	60J63	Hose Assembly	57SBS
2094	11G77	Sight Gauge	57SBS
2095	23L53	Elbow	57SBS
2096	H0610-	Hose Assembly	57SBS
2097	12W74	Tee	57SBS
2098	H0610-	Hose Assembly	57SBS
2099	62D90	Clamp Set	57SBS
2100	62D91	Plate	57SBS
2101	13M81	Cap screw	57SBS
2102	1.00E+11	Cap screw	57SBS
2103	27L78	Lock washer	57SBS
2104	60N51	Grommet	57SBS
2105	CJ-272-2103W	Bracket, Support	57SBS
2106	27W63	Multi-Clamp Assembly	57SBS
2107	AK-17-125	Nipple	57SBS
2108	10Z99	Bushing, Reducing	57SBS
2109	23F36	Tee, Pipe	57SBS
2110	23J54	Connector, Swivel	57SBS
2111	60L03	Hose	57SBS
2112	60J62	Coupling	57SBS
2113	20X16	Cap screw	57SBS
2114	62D48	Plate, Cover	57SBS
2115	62D47	Clamp Set	57SBS
2116	H0410-	Hose Assembly	57SBS
2117	15C82	Cap screw	57SBS
2118	12T24	Cap	57SBS
2119	62D89	Plate	57SBS
2120	62D46	Plate	57SBS
2121	BG-272-2603	Support, Bulkhead Fitting	57SBS

2122	11G77	Flow Sight Gauge	57SBS
2123	23C43	Elbow	57SBS
2124	23H88	Connector	57SBS
2125	60B39	Insert	57SBS
2126	60F10	Hose	57SBS
2127	20D05	Clamp	57SBS
2128	27L76	Lock washer	57SBS
2129	13J28	Cap screw	57SBS
2130	DD-17-129	Nipple	57SBS
2131	16V37	Elbow	57SBS
2132	CT-17-129	Nipple, Toe	57SBS
2133	1.30E+81	Joint	57SBS
2134	EJ-17-129	Nipple, Toe	57SBS
2135	13F68	Tee	57SBS
2136	28V52	Bushing	57SBS
2137	23D24	Plug	57SBS
2138	60G89	Switch	57SBS
2139	B-17-129	Nipple, Close	57SBS
2140	60B49	Gauge, Temperature	57SBS
2141	DA-272-1253	Bushing	57SBS
2142	60J52	Flow	57SBS
2143	1.50E+84	Bushing	57SBS
2144	60G89	Switch	57SBS
2145	DD-17-129	Nipple	57SBS
2146	16V37	Elbow	57SBS
2147	E-17-561	Nipple, Toe	57SBS
2148	1.30E+81	Joint	57SBS
2149	CZ-17-129	Nipple, Toe	57SBS
2150	13F68	Tee	57SBS
2151	28V52	Bushing	57SBS
2152	B-17-129	Nipple, Close	57SBS
2153	60B49	Gauge, Temperature	57SBS
2154	DA-272-1253	Bushing	57SBS
2155	60J52	Flow	57SBS
2156	1.50E+84	Bushing	57SBS
2157	60G89	Switch	57SBS
2158	23D24 PLUG, 3	Plug	57SBS
2159	TA-260-652A	Alarm Assembly	57SBS

2160	SA-260-652A	Alarm Assembly	57SBS
2161	QA-260-652	Plate	57SBS
2162	AA3-272-1652A	Panel	57SBS
2163	61L27	Enclosure	57SBS
2164	26X80	Switch	57SBS
2165	27N69	Lock washer	57SBS
2166	27J26	Screw	57SBS
2167	29D22	Panel	57SBS
2168	61G70	Relay	57SBS
2169	27J84	Screw	57SBS
2170	27L97	Lock washer	57SBS
2171	60C56	Channel	57SBS
2172	61N78	End	57SBS
2173	60C54	End	57SBS
2174	60C55	Block	57SBS
2175	26X85	Push-Button	57SBS
2176	46-2156	Electrocution	57SBS
2177	6.10E+94	Nameplate	57SBS
2178	6.10E+72	Horn	57SBS
2179	27L76	Washer	57SBS
2180	20B04	Conduit	57SBS
2181	20F18	Seal	57SBS
2182	20C62	Lock nut	57SBS
2183	27C42	Screw	57SBS
2184	61G59	Relay, Control	57SBS
2185	PA-260-652A	Transformer Assembly	57SBS
2186	NA-260-652A	Transformer Assembly	57SBS
2187	61K76	Enclosure	57SBS
2188	61T77	Transformer	57SBS
2189	16G55	Transformer	57SBS
2190	61H99	Circuit Breaker,	57SBS
2191	29D24	Subpanel	57SBS
2192	61N71	Channel	57SBS
2193	60C55	Terminal	57SBS
2194	60C54	End Barrier	57SBS
2195	61N78	End Clamp	57SBS
2196	62A51	Nameplate	57SBS
2197	61T71	Nameplate	57SBS

2198	61R59	Nameplate	57SBS
2199	61J09	Circuit Breaker	57SBS
2200	A-46-1993	Decal, Caution Pinch Point	57SBS
2201	B-46-1629	Plate, Patent Pending	57SBS
2202	A11-46-2007	Plate, Gyrasphere Patent	57SBS
2203	FA-46-1901	Plate	57SBS
2204	11P12	Screw, Drive	57SBS
2205	B1-46-2006	Plate	57SBS
2206	D-272-404	Plate, Smith bond Name	57SBS
2207	A-46-1928	Decal, Warning Avoid Personal	57SBS
2208	B2-46-1685	Tag	57SBS
2209	A-46-2155	Tag, Gyrasphere Smith bond	57SBS
2210	AA-46-2500	Nameplate	57SBS
2211	AA-46-2042	Plate	57SBS
2212	C-272-404	Marker, Arrow	57SBS
2213	A-46-2103	Decal, Warning Hydraulic Lines	57SBS
2214	C-46-2103	Decal, Warning Ground	57SBS
2215	B-46-2103	Decal, Caution	57SBS
2216	BA-46-2156	Decal, Warning	57SBS
2217	29D17	Primer	57SBS
2218	11A62	Paint	57SBS
2219	61K21	Paint	57SBS
2220	B-46-1629	Plate	57SBS
2221	FA-46-1901	Plate	57SBS
2222	11P12	Screw, Drive	57SBS
2223	AA-46-2042	Plate	57SBS
2224	10K58	Eye Bolt	57SBS
2225	1.00E+13	Eye Bolt	57SBS
2226	1.00E+12	Eye Bolt	57SBS
2227	TL-272-1503W	Safety Spacer	57SBS
2228	CA-272-2143	Lifting Plate	57SBS
2229	BC-272-1534W	Wrench, Shaft Nut	57SBS
2230	1.00E+99	Chain Puller	57SBS
2231	13W84	Master Link	57SBS
2232	60N48	Pressure Gauge	57SBS
2233	10H55	Elbow	57SBS
2234	60D68	Dust Plug	57SBS
2235	60D66	Coupler	57SBS

2236	60N48	Pressure Gauge	57SBS
2237	B-17-178	Nipple	57SBS
2238	60D67	Nipple	57SBS
2239	60D69	Dust Cap	57SBS
2240	H0401-	Hydraulic Hose Assembly	57SBS

WWW.ONACASTING.COM